

Complete Shower Room Installation & Operation Manual

09015

SIZE:90X90X218cm

09016

SIZE:100X100X218cm



Cautions in Installation and Using

 






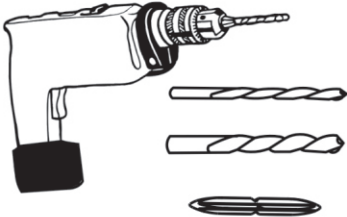
Thanks for selecting our shower room series.To guarantee safe and normal operation as well as prolong service lifetime.Pls read Instruction carefully before installation.

 





 
 


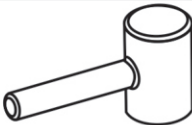

 
Note: We aer dedicated to improving products quality,find something new in what is old,we would if there is difference in the Instruction until further notice.Any discomfort,we ask your pardon.

Directory




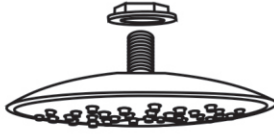








1.Tool contents-----	2
2.Accessory list-----	3-4
3.Pipe and drain installation drawing--	5
4.Installation Procedure -----	6-16
5.Trouble shootings -----	17
6.Electric appliance instruction----	18-23

1.self-provide tool

Name	Tool
Track level bar	
Tape measure	
Ajustable spanner	
Rubber hammer	
Phillips srewdriver	
Scissors	
Glass cement	
electric drill	
3mm aiguille	
6mm aiguille	
tap drill	

2.Partial accessory list			
Item	Name	Accessory	Quantity
1	(1.1)Tub		1
	(1.2)Middle Backboard		1
	(1.3)Roof		1
2	(2.1)Backboard glass		1
	(2.2)Backboard glass		1
	(2.3)Arch fixed door glass		2
	(2.4)Arch flexible door glass		2
3	(3.1)Side upright column		2
	(3.2)Upper rail		1
	(3.3)Bottom rail		1
4	(4)Knob		2
5	(5)Towel bar		1
6	(6)eccentric wheel		8


(3)

2.Partial accessory list			
Item	Name	Accessory	Quantity
7	(7.1)Lifting rod		1
	(7.2)hand shower		1
	(7.3)hand shower tube		1
8	(8)Top shower		1
9	(9)Cold and hot water hose		2
10	(10.1)Glass positioning fixture		8
	(10.2) Glass Platen		4
11	(11.1)Magnetic strip		2
	(11.2) Waterproof belt		2
	(11.3) U style thong		2
12	(12.1) St 4*16mm srew		32
	(12.2) St 4*10mm srew		12

(4)


3. Pipe and drain installation drawing

C=Cold water inlet
H=Hot water inlet
D=Drain

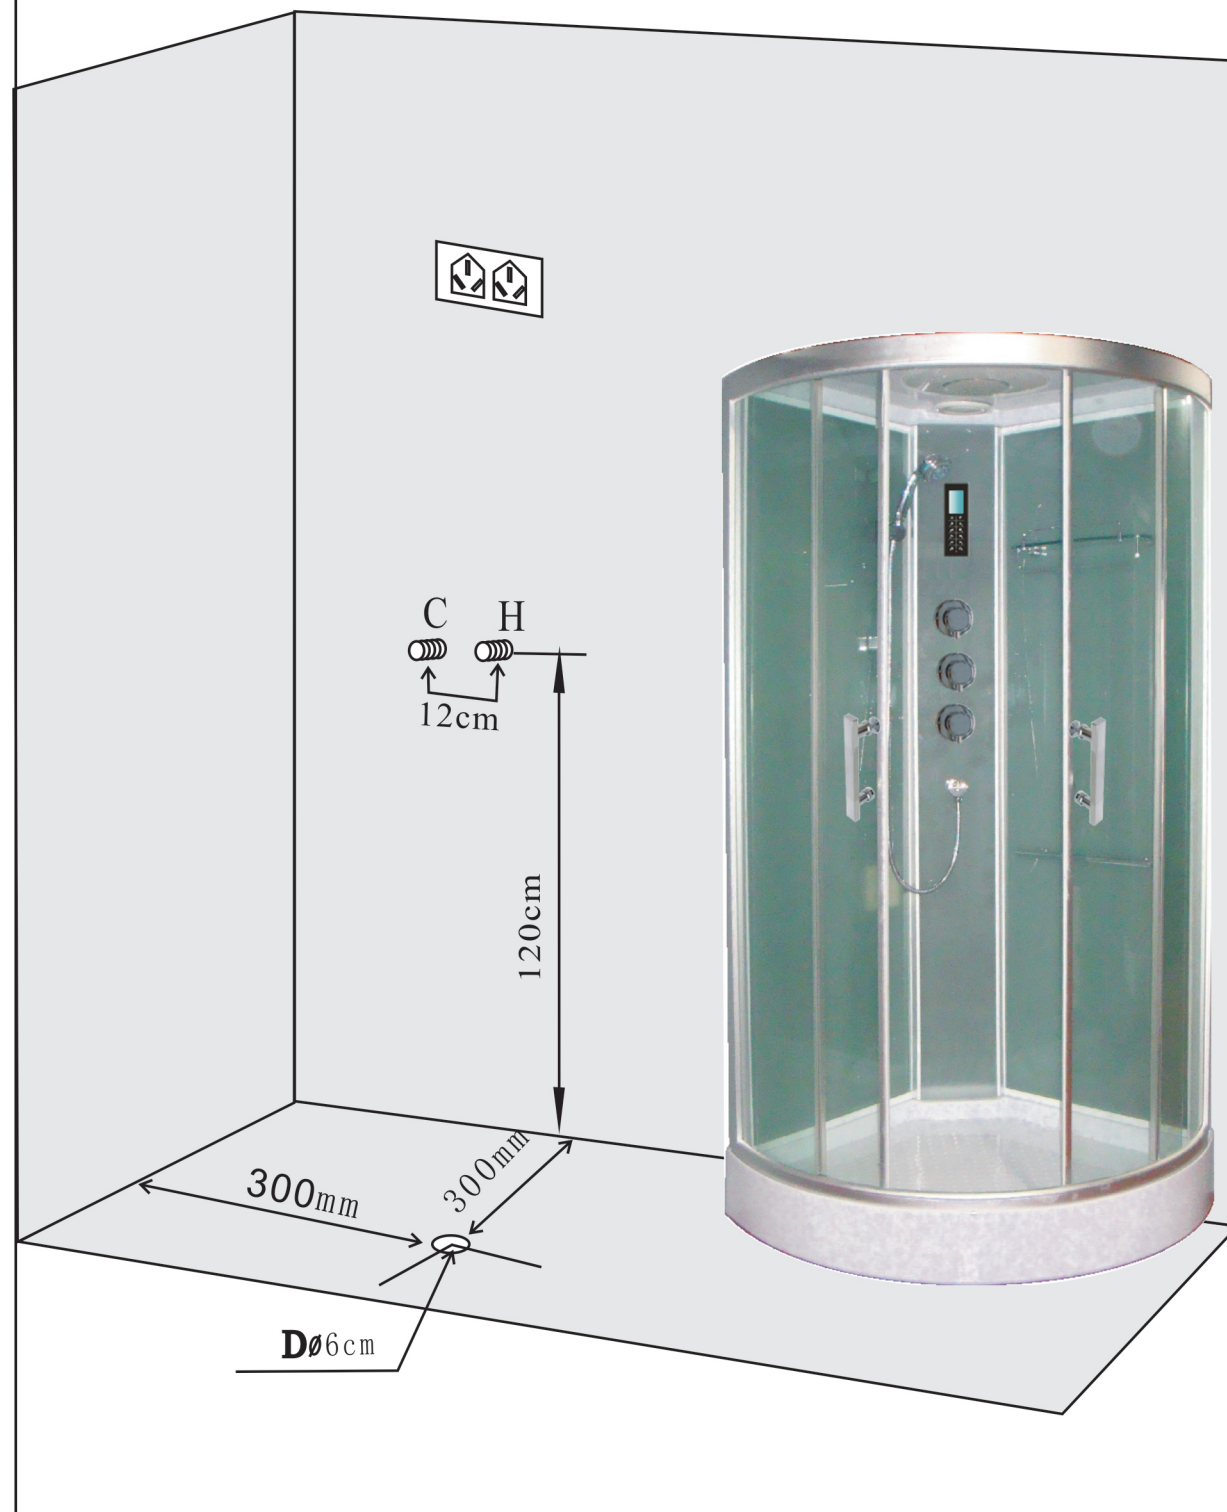


(5)

4. Installation Procedure

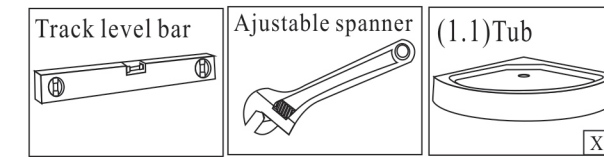


1.) Put track level bar on the tub, and adjust foot's screw by adjustable spanner, and keep it to the leveling

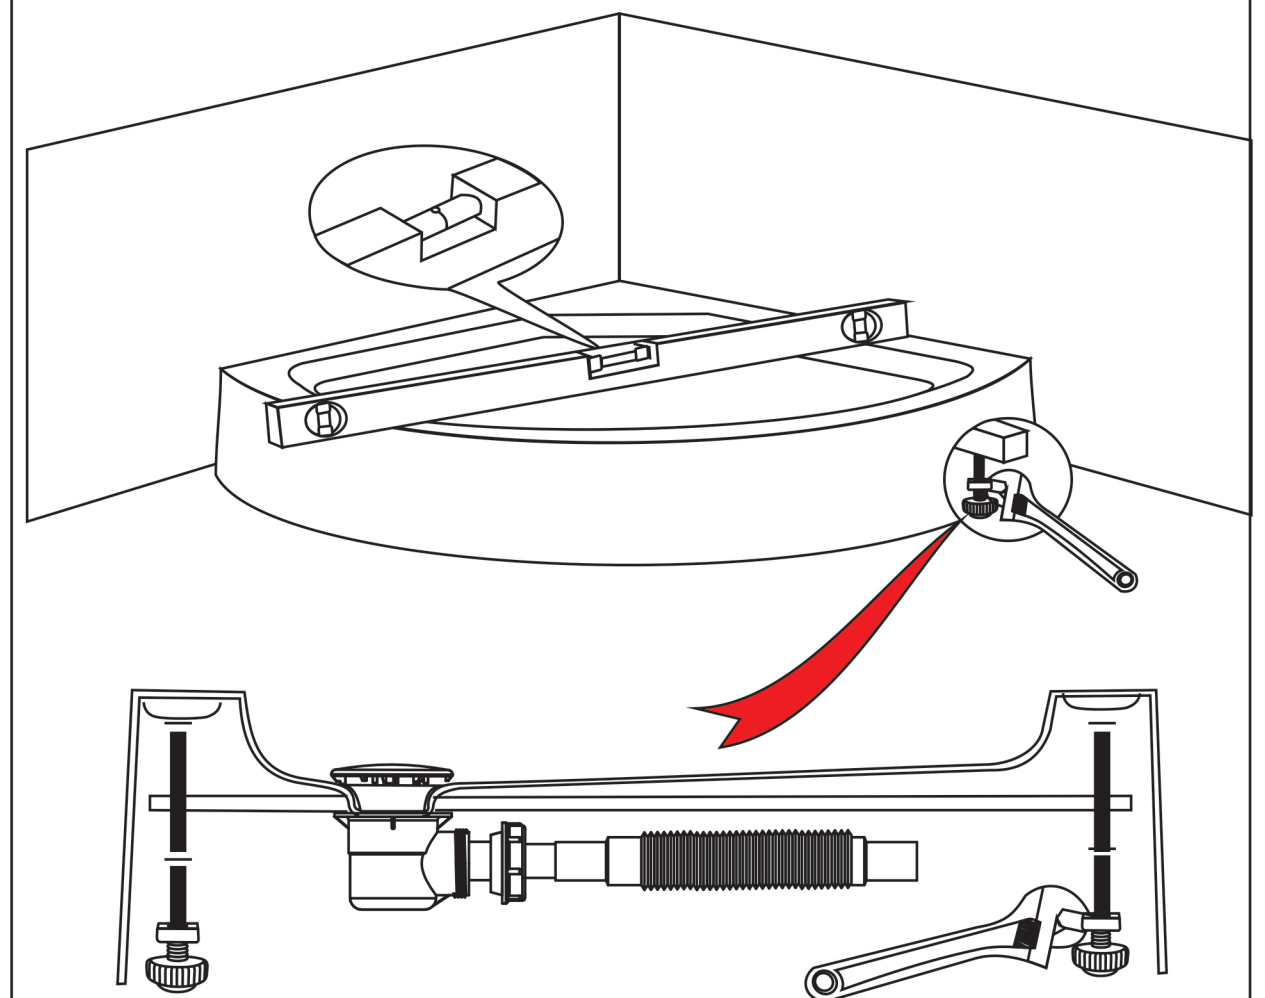


(6)

4,Installation Procedure

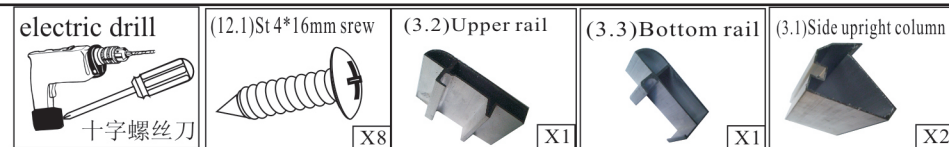


2:) Build up the frame. Make sure the rails and upright aluminums are suitable. And find the difference between up rail and down rail.

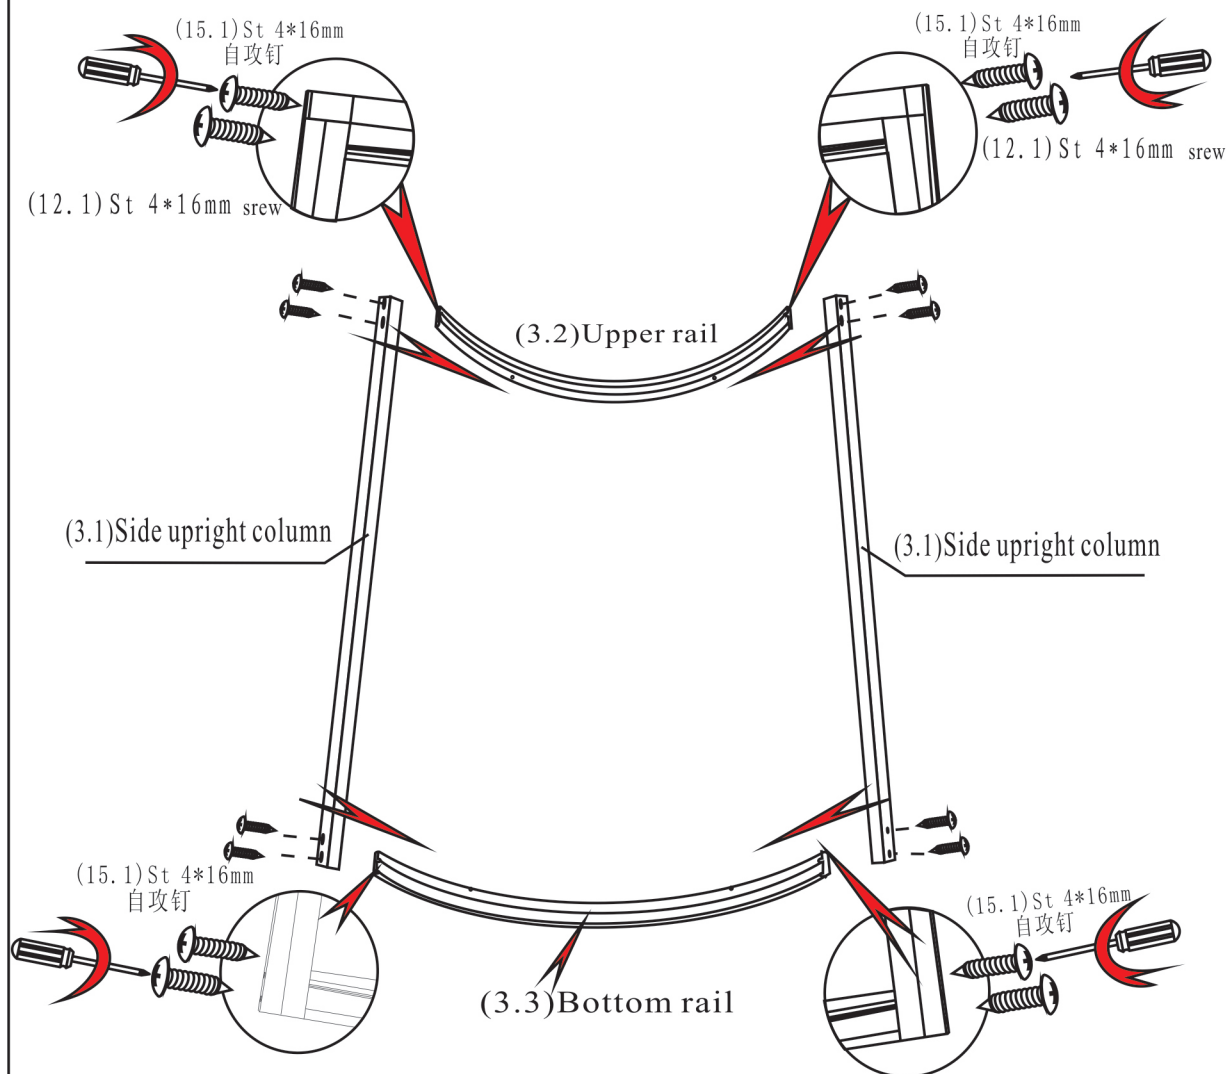


(7)

4,Installation Procedure

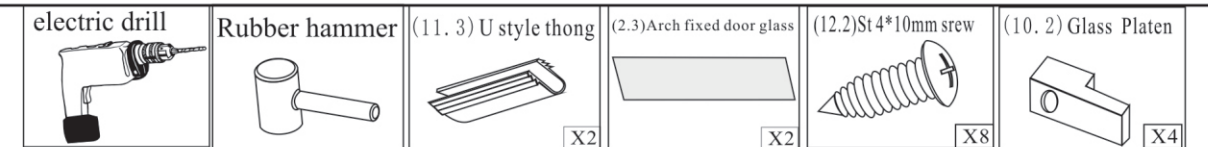


3:) Fit the fixed glass into the frame, after fitting the rubber seal into glass one side, and then knock the glass carefully by hammer.

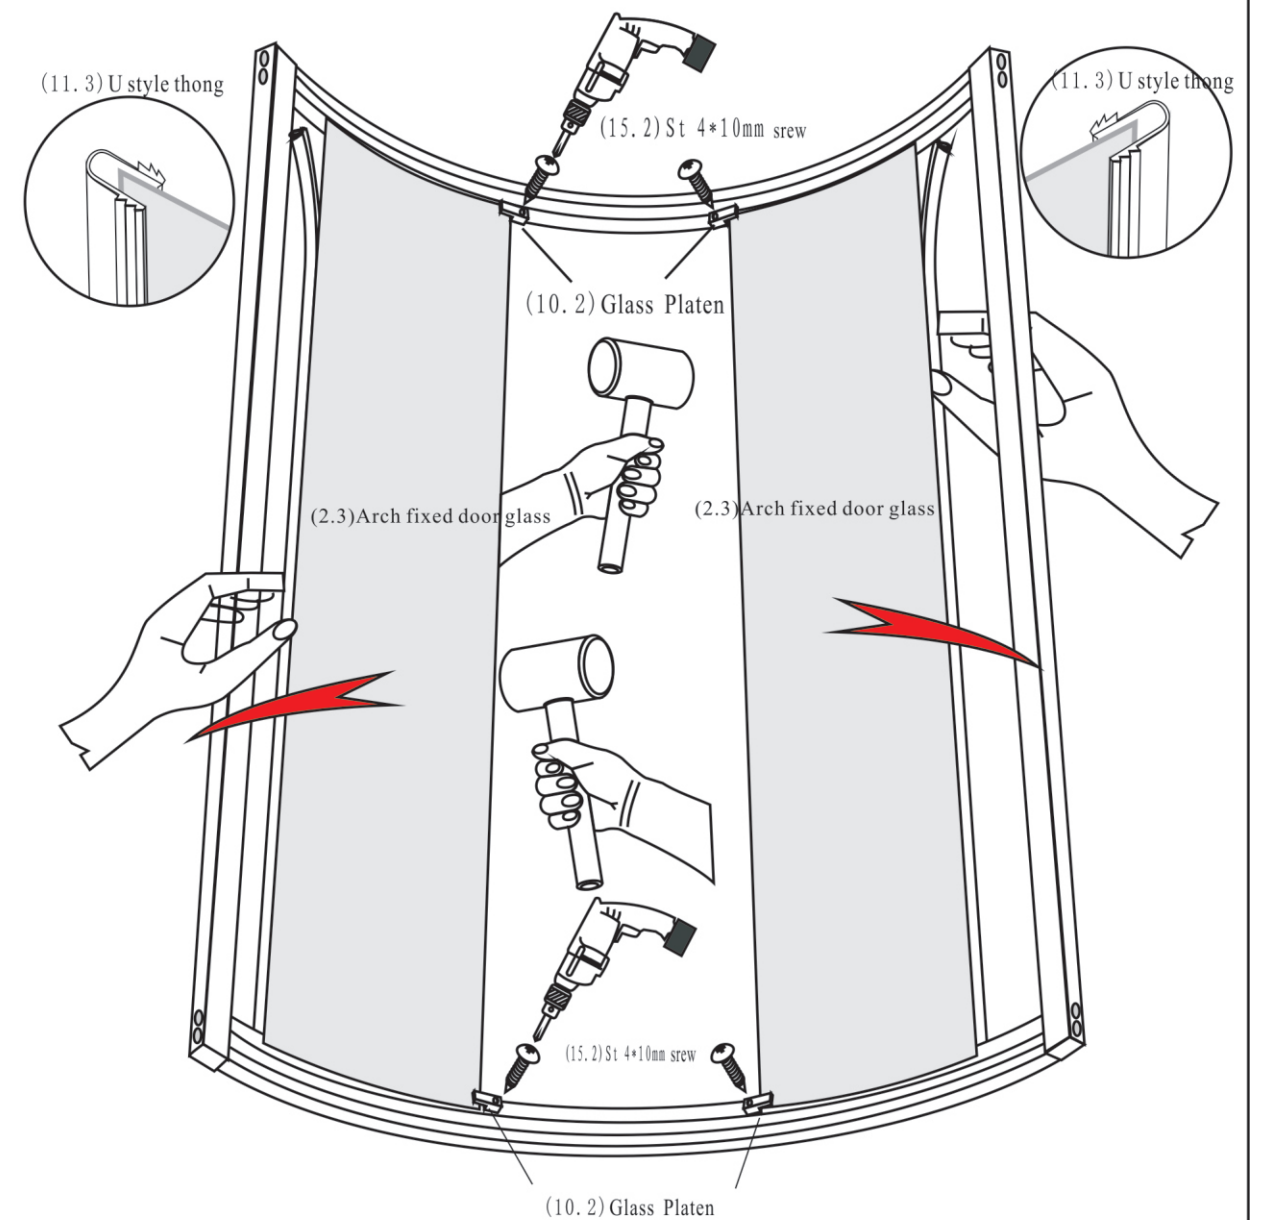


(8)

4,Installation Procedure

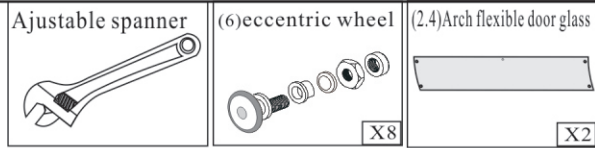


5:) Put the roller into glass door holes, and adjust the roller screw, then hang the door into up rails. Then fix all of roller, to make sure the door move smoothly.

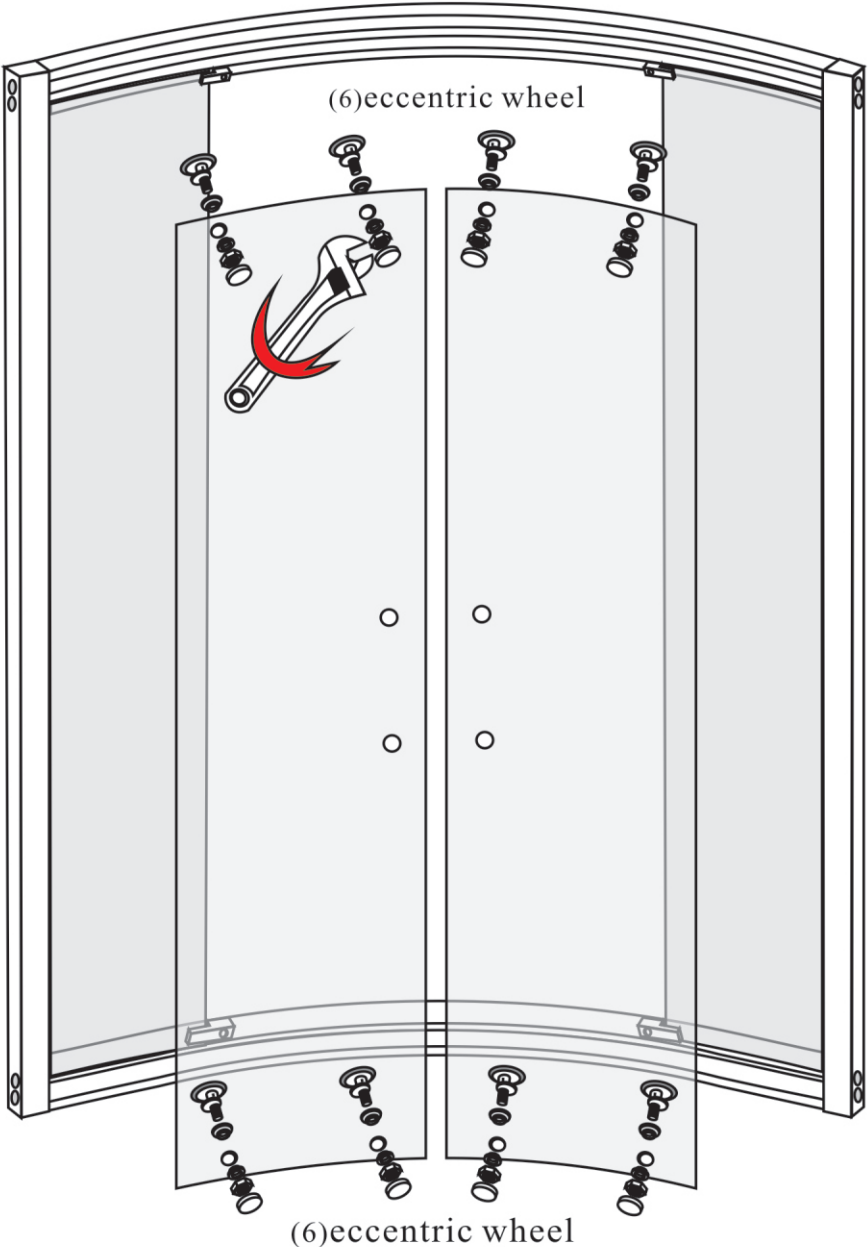


(9)

4,Installation Procedure

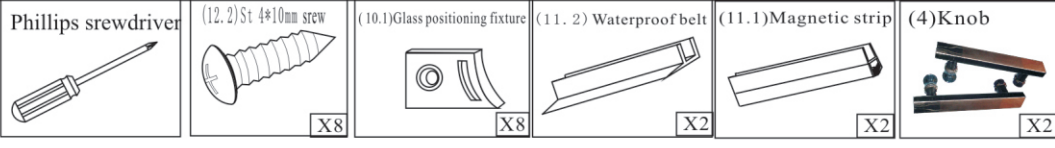


6:) Fit the handle into flexible door, fix rubber position (13) by screws (15.2). Fit the magnetic seal and waterproof belt.

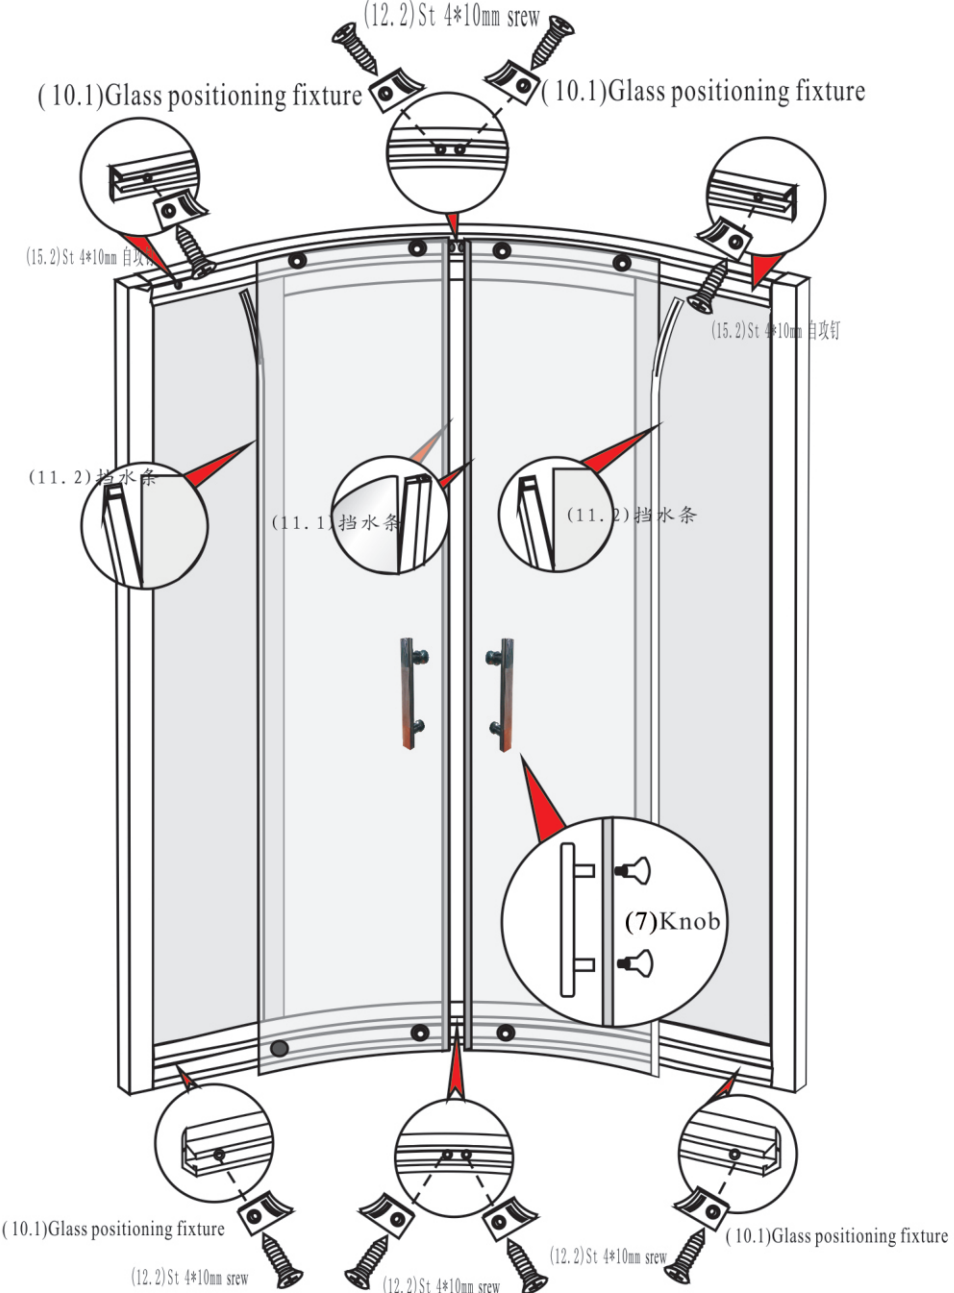


(10)

4,Installation Procedure

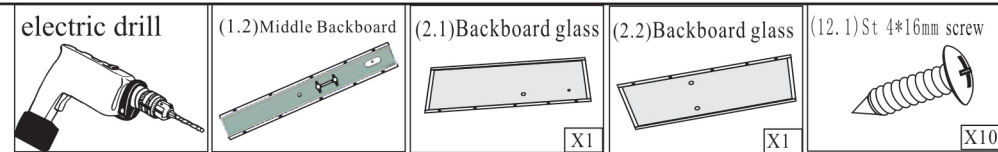


7:) Connect back board and glass room by screw (15.1), fit the pipes.

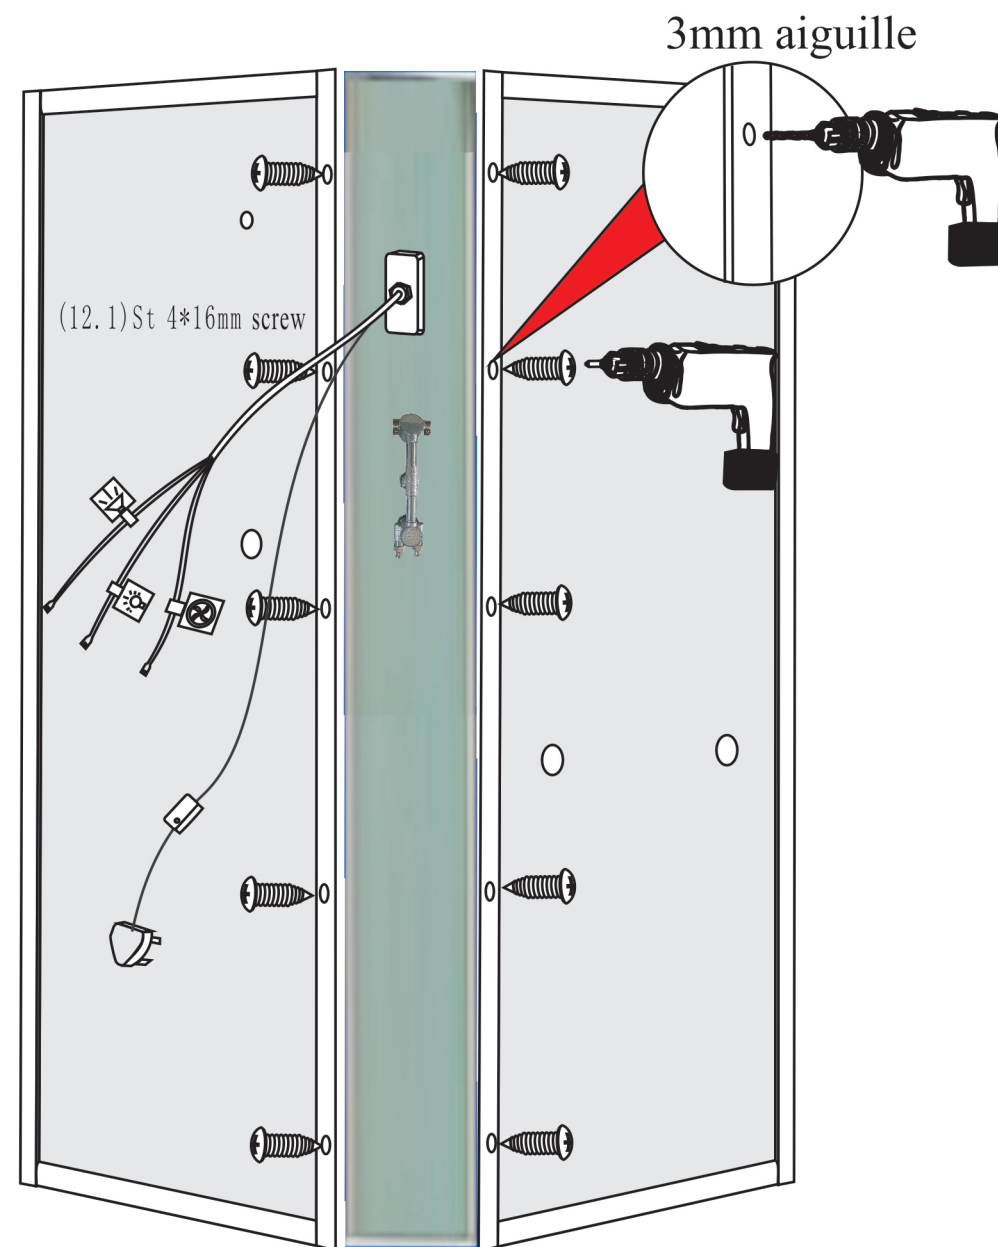


(11)

4,Installation Procedure

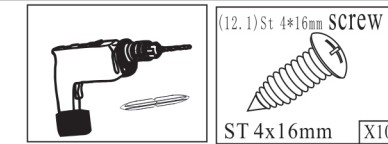


9:) Connect back board and glass room by screw (15.1), fit the pipes.

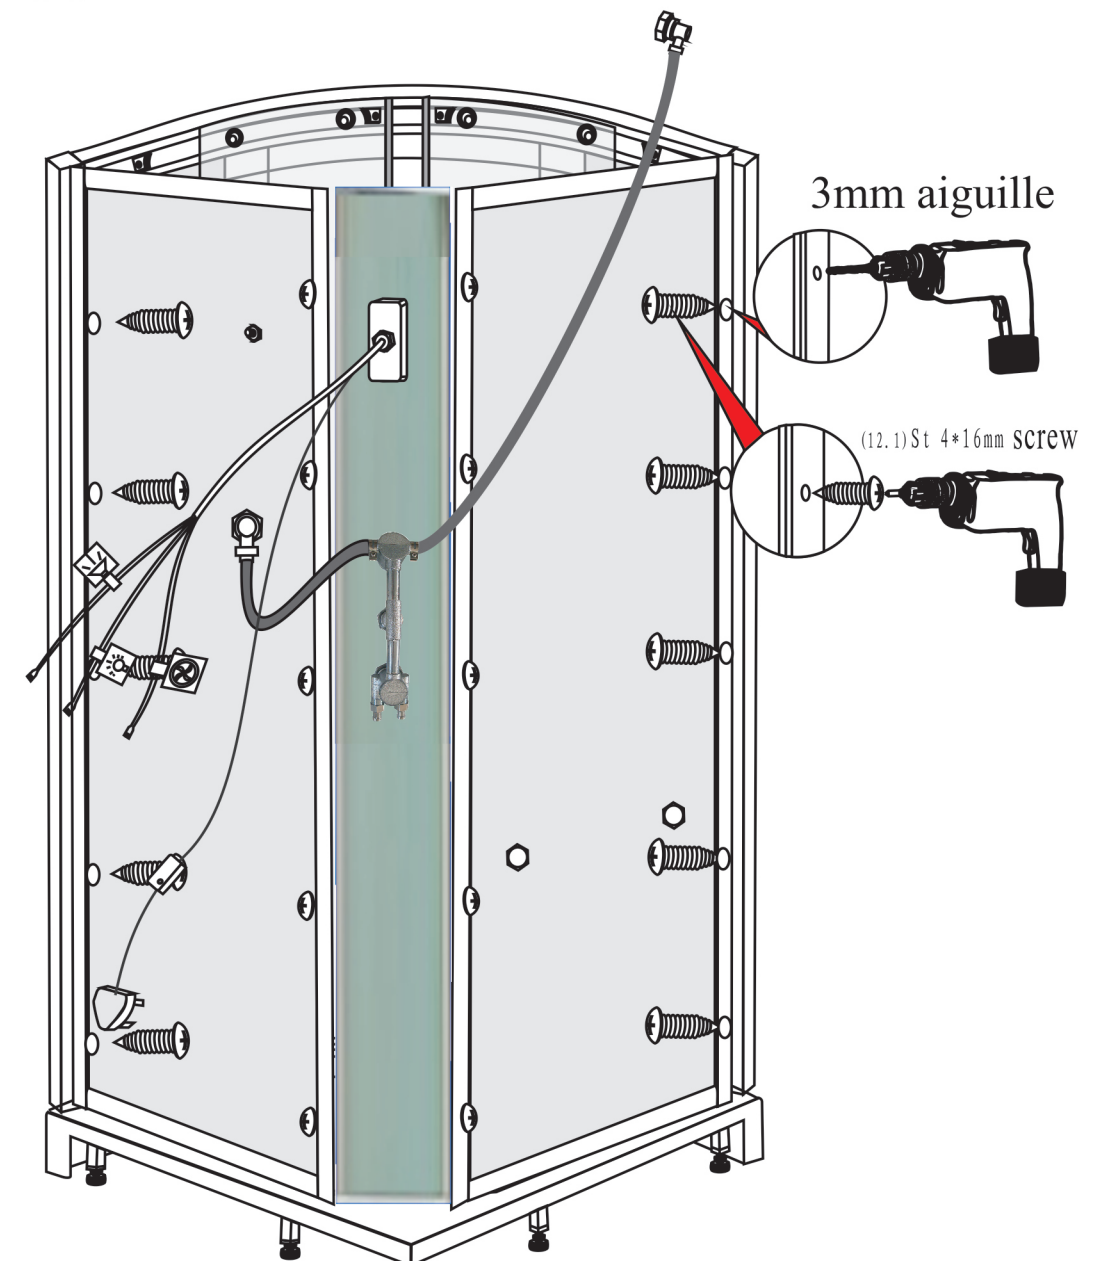


(12)

4,Installation Procedure

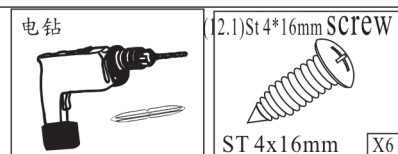


11 :) Put the back board and glass room on the tub, connect them and fix them by screw (15.1)

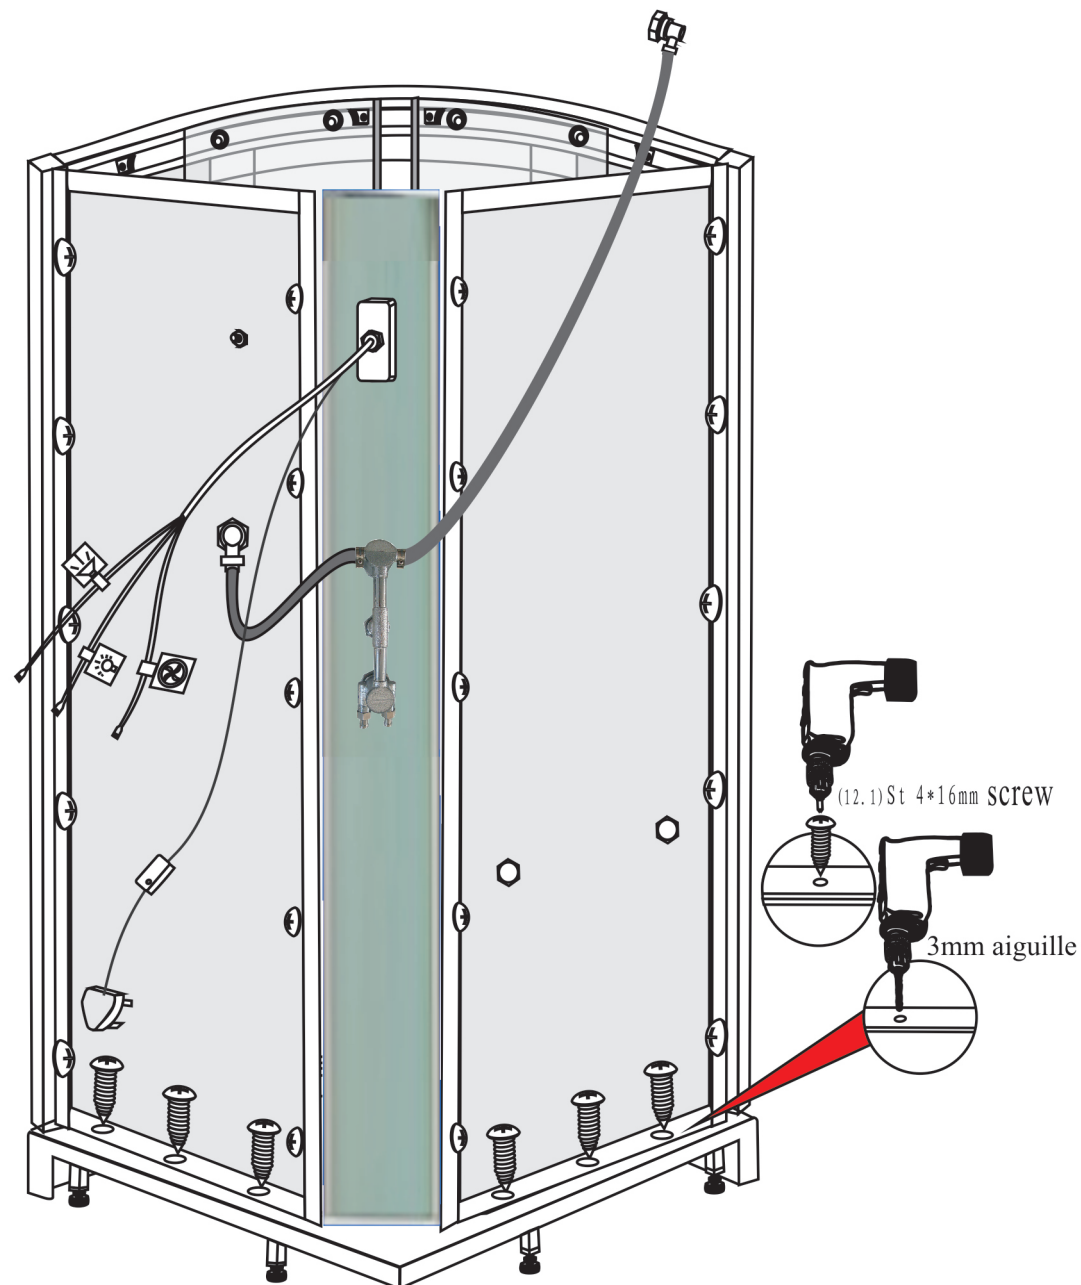


(13)

4,Installation Procedure

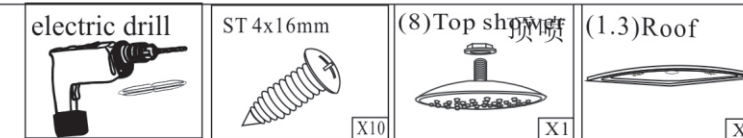


12.) Fix top cover with glass room by (15.1) ST4*16 screws. Connect all of pipes and wires as picture.

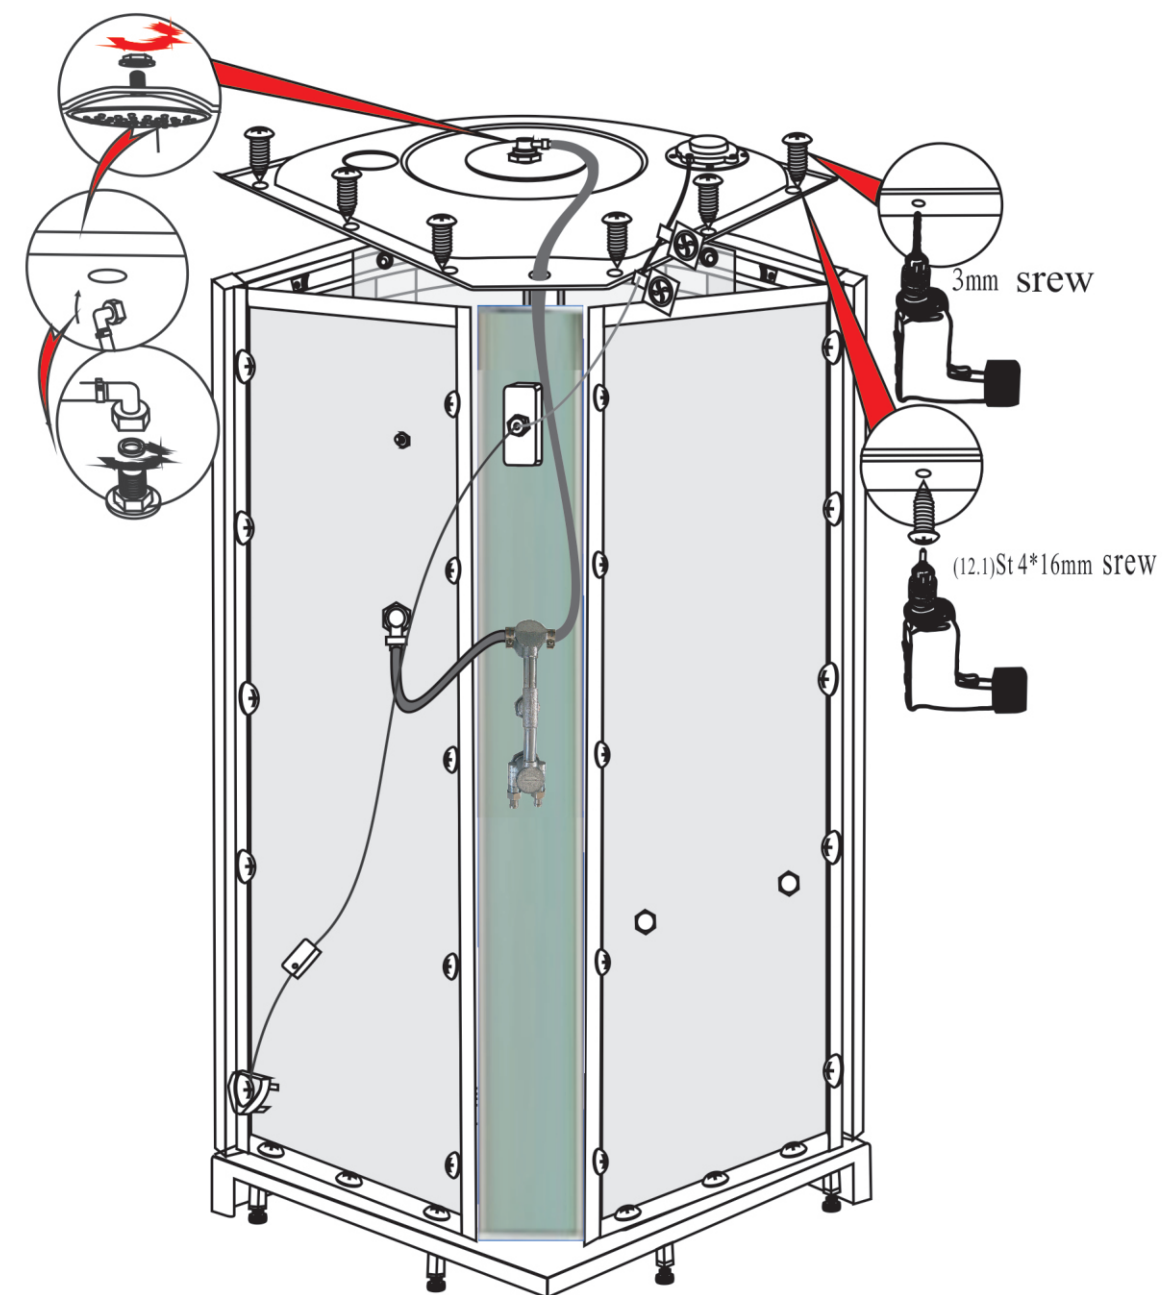


(14)

4,Installation Procedure

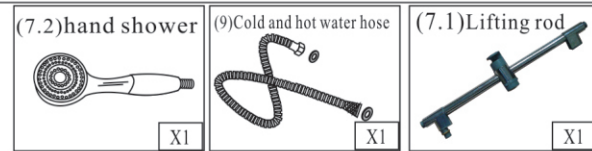


8:) Fit the soap container, handle shower, and glass holder.

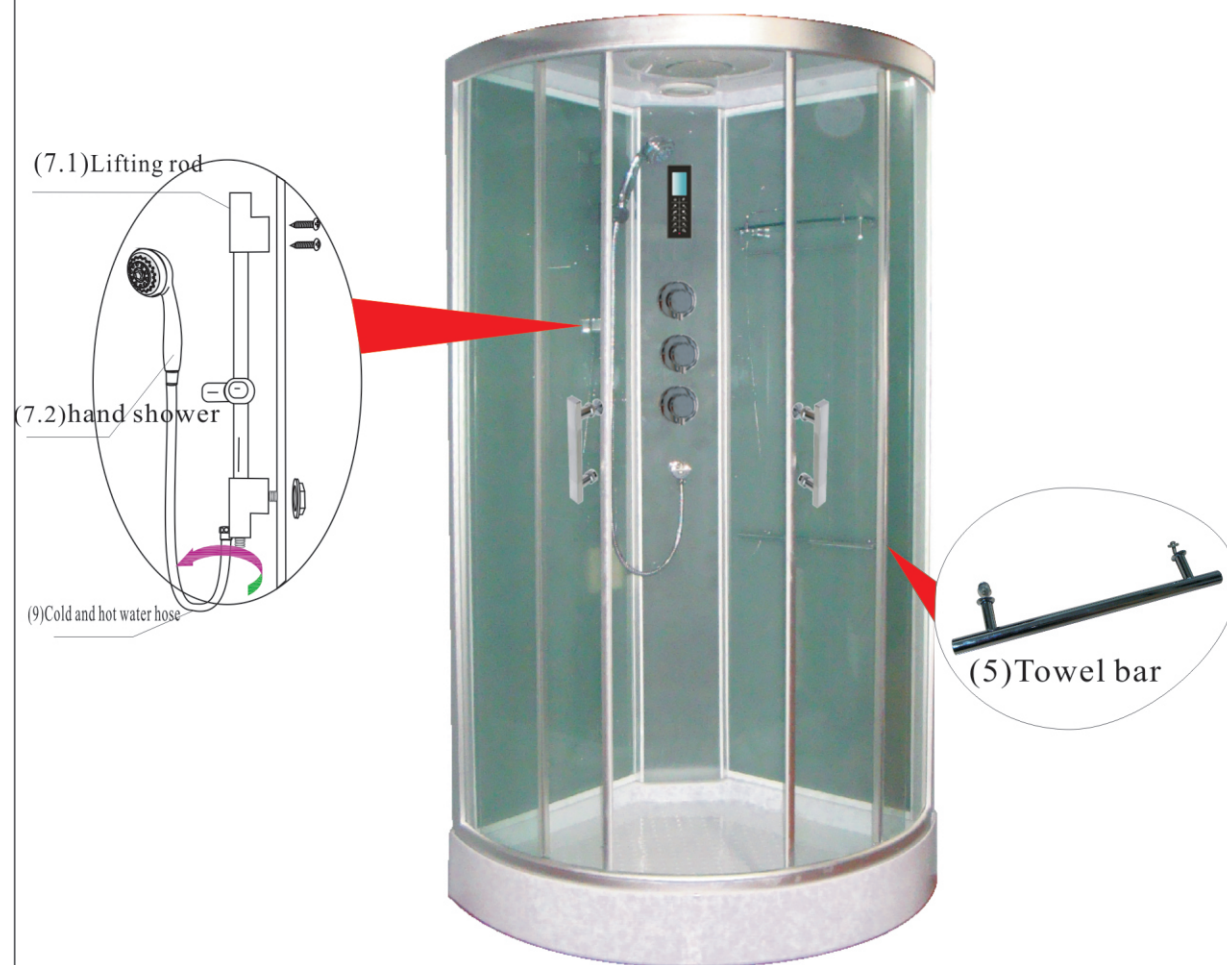


(15)

4,Installation Procedure

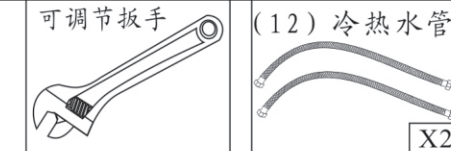

13. Connect cold and hot water with installed shower room by adjustable spanner, then plug in .

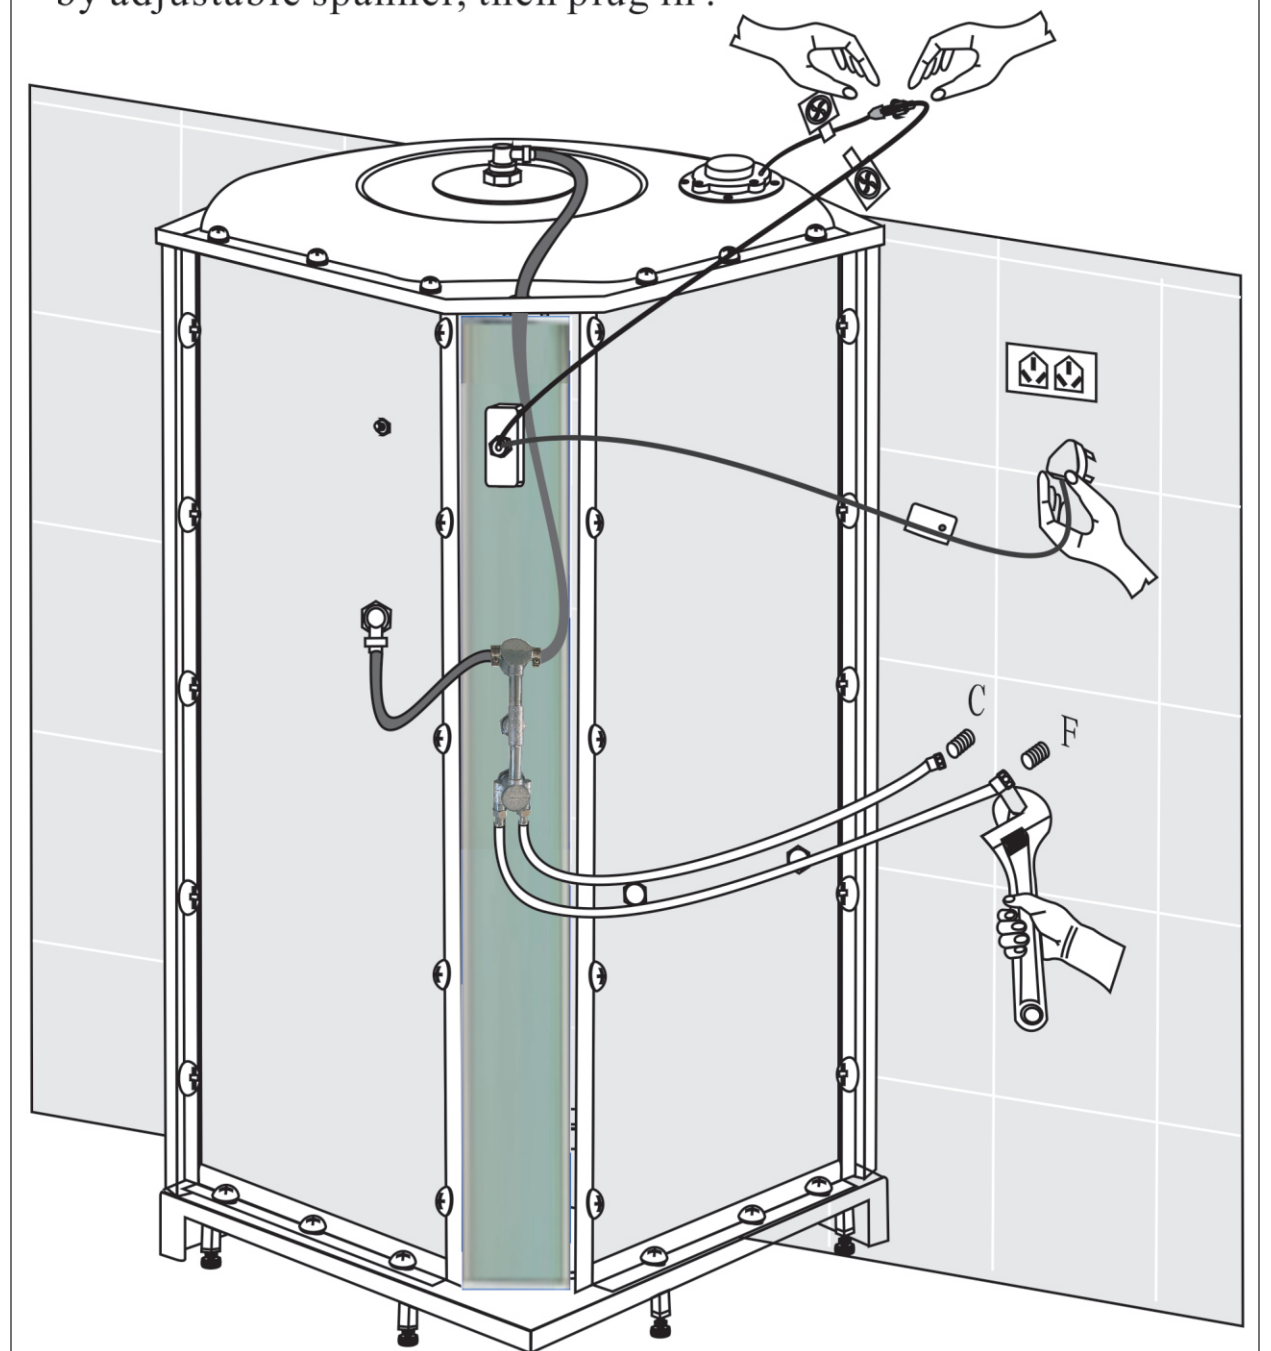

(16)


5.Trouble shootings

Troble	Cause	Remedy
No power	1.Electric power don't connect well,leak swtich is cut off.	Access to power
	2.Fuse wire is broken,switch of control panel is failure.	Maintain or replace
	3.GFCI is out of work	Check GFCI
No head shower	1.water pressure is abnormal	Check water pressure
	2.Cold and hot water switch is closed.	Turn on the cold and hot water switch
	3.chocking nozzle	Clean
Water pipe leakage	1.Seal ring damaged	Replace seal ring
	2.Tie in don't connect well	Connect it again
No radio	1.Connecting wire is cut	Make connection
	2.Loudspeaker is broken	Replace a new one
Phone unuable	1.Telephone wire don't connect well	To make contact telephone line
	2.Control panel is broken	Maintain or replace
No light	1. Bulb is broken,ballast is broken	Replace
	2.Break of ballast	To make contact
	3.Control panel is broken	Maintain or replace
No exhaust	1.Fan is broken	Replace
	2.Tie-in is not connect well	To make contact
	3.Control panel is broken	Maintain or replace


If complete shower room cant work normally, please check it as compare above then obstacle avoidance.

If customers cant make sure the cause of obstacle or lack of ability mantianance.Please contact distributer.

6.Electric appliance instruction

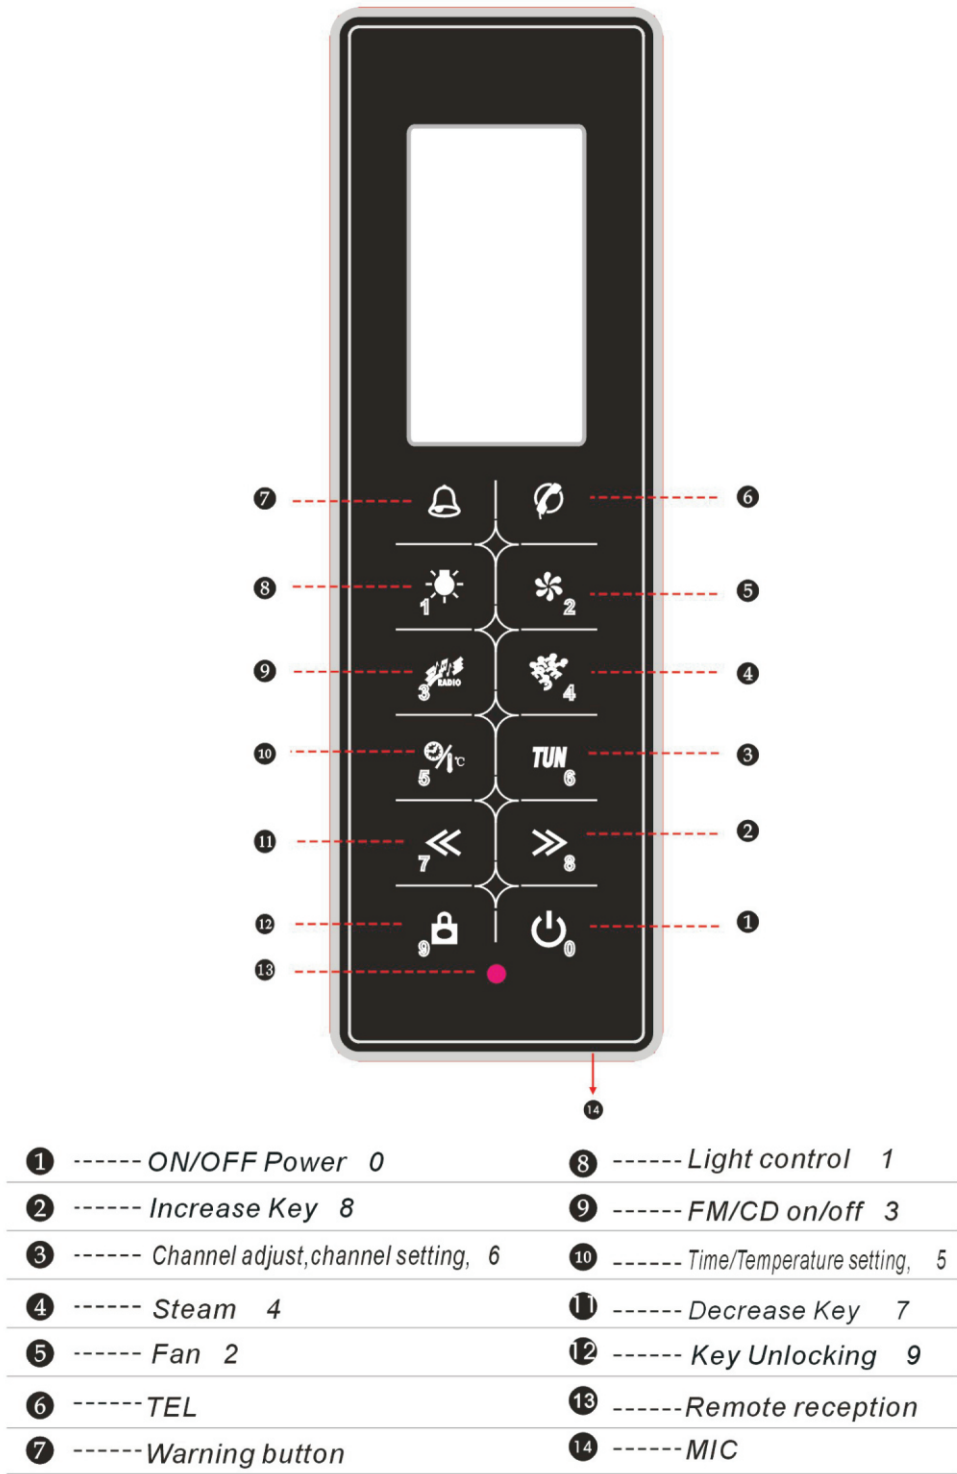


6.Electric appliance instruction

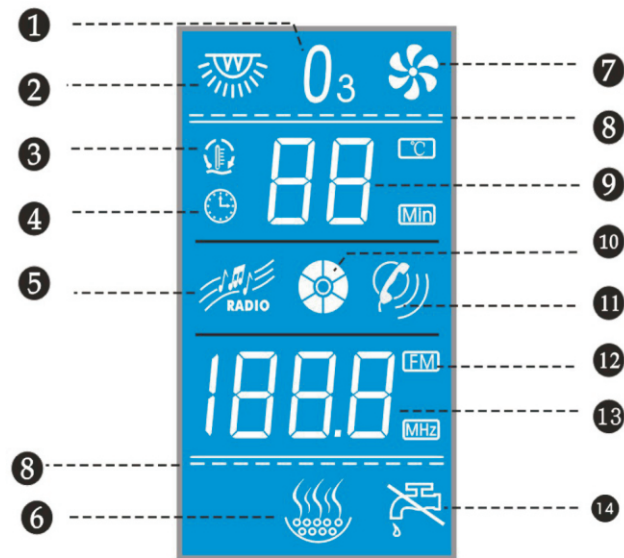

① ----- Ozoner	⑧ ----- Locked mark
② ----- Light	⑨ -----Temperature
③ ----- Temperature setting	⑩ ----- CD
④ -----Time setting	⑪ ----- Telephone
⑤ -----Radio	⑫ -----FM tuner setting
⑥ ----- Steam	⑬ ----- FM tuner
⑦ ----- Fan	⑭ ----- Lack of water

6.Electric appliance instruction

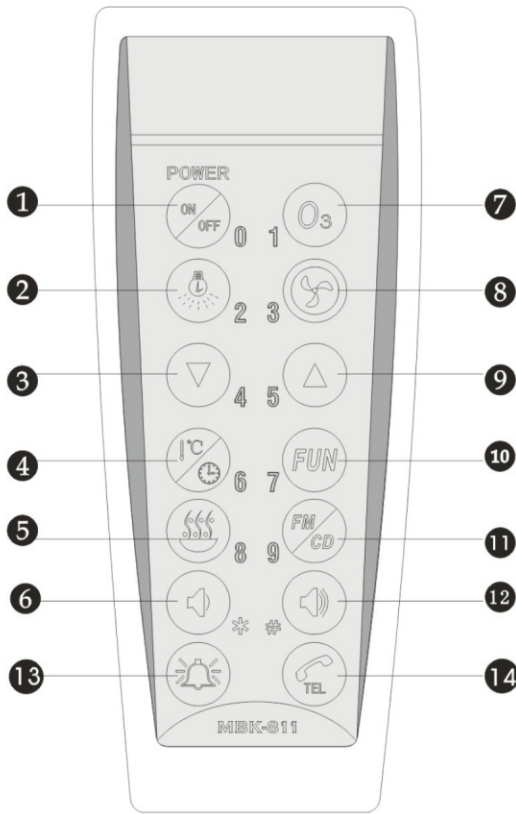



Remote control

① ----- On/off Switch and unlock	⑧ ----- Fan
② -----Lam	⑨ ----- Increment (Time/temperature/FM)
③ ----- Devalue (Time/temperature/FM)	⑩ ----- FM radio
④ ----- Steam bath time and temperature setting	⑪ ----- FM / CD switch
⑤ ----- Steam	⑫ ----- Increase volume
⑥ ----- Decrease volume	⑬ ----- Alarm
⑦ ----- Ozone	⑭ ----- Telephone


6.Electric appliance instruction

Control Panel Operation Instructions

1. power on/off

When system on standby state, press this  key(2 seconds or more),then display on, simultaneously lights on;Press  key again,system off(if no any further operation in 1hour,system auto-off);When system off,touch the panel anywhere,key light will turn on,but it will be off in 5 seconds if no power on.




2. Ozoner

When system is activated,press button  on remote control to start ozone sterilization,press this button again to close it.System is preprogrammed to carry out 10minutes' ozone sterilization automatically after system deactivation.

3. Fan

When system on,touch the panel  key,fan will work on;then touch it once again,fan function closes;the same time there will be fan mark on/off in display.


4. light

When system on,firstly touch the panel  key,top light will be off/background light on;touch once again the  key,top light and background light turn on;third touch this  key,top/background light off.


 


5. FM/CD

When system on,firstly touch the panel  key,radio function on;and radio tuner display on;then touch its  key again,radio function switch into CD;and CD mark will show in display;and touch it once again,CD function shut off.




6. Radio tuner searching(radio on work)

Auto-search/store:press  key for 2 secs or more,auto-search/store function on,tuner range from 87.5-108.0MHZ(fixed tuner quantity 1-32 available,it depends on signal situation).


6.Electric appliance instruction

②、Man-search/store:touch  key,tuner will start flashing,press key  /  to choose the one you like more,then touch the key  store the new tuner (add new tuner into prefer-list).

③、Tuner switch:press key  /  to increase/decrease the tuner.

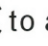


④、Volume adjustment:press  key, and press key  /  to adjust the voice volume(range from 0-15DB).

7. Steam




When system on,press the key  to start steam function,steam mark will be on;(temperature set at 45 degrees and the time set at 45 minutes by default)




When lack of water,that mark flashes and steam shut off.

8. Telephone

 

When telephone ring,FM or CD function pause,press  to answer the telephone,and the telephone figure light,when preess again telephone function shut down and FM or CD function get back.If there is no call press this key is for diall,then press number for diall.when in call state you can press  or  for adjust volume.

9. Steam adjustment

①、steam time adjusting:key  to choose time, then press  /  key to increase steam time(range from 1-99mins).


②、steam temperature:press  to choose temperature,key  /  to raise/lower the temperature(range from 20-60℃).

10 . Unlocking

If there is no any further operation on touch panel in 20secs,system will be locked auto,mark  will flashes, press  key for 2 secs or more to unlock panel,then all of keys active on.

6.Electric appliance instruction

11 . Warning

When system on, press key  to open warning function,the same time light and fan are all starting workingm;touch it again to shut it off.

Technical Information

Working Conditions and Property				
<i>Voltage Rating:</i>	AC 220 V	<i>Normal Frequency:</i>	50Hz～60Hz	
<i>Rated Current:</i>	13.6A	<i>Power Rating:</i>	2860W	
<i>Insulating Resistance:</i>	> 20 M	<i>Drain Current:</i>	<i>Measured upto enterprise safety standard</i>	
<i>Waterproof Grade:</i>	IPX5	<i>Leak Protection:</i>	(15 ~ 30)mA	
Load Configuration Parameters				
LOAD TYPE	RATED LOAD VOLTAGE	RATED LOAD FREQUENCY	RATED OPERATING POWER	QUANTITY
<i>Steam</i>	Ac220 V	50Hz/60Hz	2.8kW	1
<i>Top Light</i>	Ac12 V	50Hz/60Hz	32W	1
<i>Exhaust</i>	Dc12 V	—	4W	1
<i>Electromagnetic Valve</i>	Dc12 V	—	5W	2
<i>Speaker</i>	—	—	8 Ω/10W	1-2
<i>Background Light</i>	Ac12 V	50Hz/60Hz	4W	1
<i>Ozone Sterilizer</i>	Ac12 V	50Hz/60Hz	5W	1

Due to a policy of continous improvement the manufacturer reserves the right to change the specification without prior notice

To extend the life of this controller,the time intervals of continuous power supply off/on must be 30 seconds or more , or the system will display “10℃ ” when it is turned on. when it happens, please take off the plug, wait for at least 30seconds,put it on then the system will work properly.