


WARNING!

Don't touch the steam outlet when the steam function is on ,and don't block it at anytime.

Operation Manual


MK117L

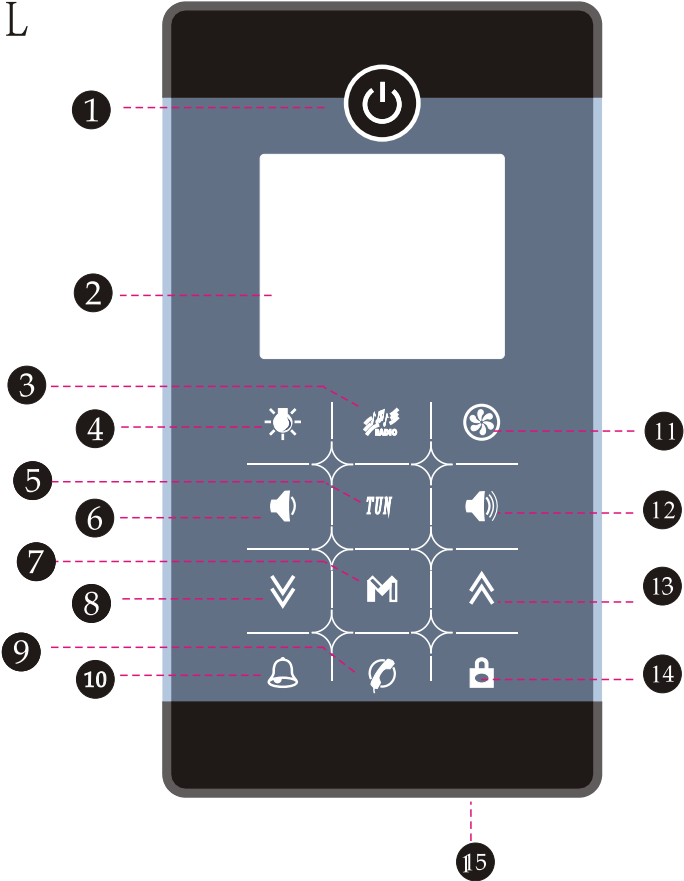


- | | |
|---------------------------|----------------------------|
| ① -----Power ON/OFF | ⑨ ----- Telephone Key |
| ② -----Display | ⑩ ----- Warning Key |
| ③ -----FM Key | ⑪ ----- Fan Key |
| ④ -----Light Key | ⑫ ----- Volume Increase |
| ⑤ -----Tuner | ⑬ ----- Frequency Increase |
| ⑥ -----Volume Decrease | ⑭ ----- Unlock Key |
| ⑦ -----Vol/Tun Switch | ⑮ ----- Microphone |
| ⑧ -----Frequency Decrease | |

1.Function Instruction


(1)ON/OFF

Press and hold the Power  button for approx.2 seconds, system will be turned on, displaying temperature, then press the Power  button then turn system off and background lights will dim.


(2)Fan

Press the Fan  button, then Fan will be turned on and the Fan Indicator will be on Display; Press it again, Fan will be turned off.

(3)Light

Press the Light  button, then top light will be turned on and the top Light Indicator will be on Display; Press it again, then top light will be turned off; Press it third time, Top light and background lights will be turned on, press it then top light and background light will be turned off.



(4)Radio

When the system is turned on, press the FM  button on the control panel or remote control to turn the radio on(frequency and volume will be as previous setting). Press it a second time, Radio will be turned off.




(5)Tuner

For the automatic channel search function press TUN on the control panel for more than 2 seconds, the channel search and storage function will begin to work. The radio channel frequency ranges from 87.5-108.0FM.

For the manual channel switch, press the  /  button, increase or decrease frequency.

For volume adjustment, press the  /  button to change the volume. (volume ranges 0-15DB)


(6)Telephone

When there is incoming call, radio function will be suspended, then press the  button to answer the phone. Press it a second time, turn off phone and radio function comes back. When the phone is on, press the  /  button to adjust the phone volume.

(7)Lock/Unlock

When the system is turned on and left idle for 10seconds the control panel will automatically lock and the background lights will dim. To unlock the system press and hold the Power button for approx.2 seconds, the LCD background light will then come on indicating the control panel is unlocked.


(8)Warning

When the system is turned on, press  button, warning will be turned on, fan and light will be on the same time; press it a second time, warning will be turned off.

2. Technical Information

Electrical Information				
Voltage Rating	AC 220 V	Normal Frequency	50Hz～60Hz	
Rated Current	3A	Power Rating	60W	
Insulating Resistance	> 20 M	Drain Current	In line with corporate standards for product testing.	
Waterproof Grade	IPX5	Leak Protection	(15～30)mA	
Load Configuration Parameters				
LOAD TYPE	RATED LOAD VOLTAGE	RATED LOAD FREQUENCY	RATED OPERATION POWER	QUANTITY
Top light	Ac12V	50Hz/60Hz	32W	1
Fan	Dc12V	—	4W	1
Speaker	—	—	8Ω/10W	1 — 2
Background Light	Dc12V	50Hz/60Hz	4W	1

Note: Due to a policy of continuous improvement the manufacturer reserves the right to change the specification without prior notice.

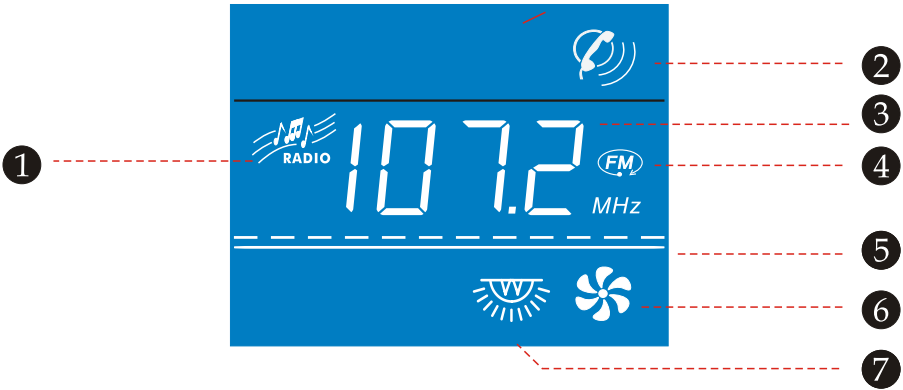

- ① -----Radio Indicator
- ② -----Telephone
- ③ -----Frequency Indicator
- ④ -----Frequency Indicator
- ⑤ -----Lock Reminding
- ⑥ -----Fan Indicator
- ⑦ -----Lighting Indicator