

## Feature and Parameters

### 1. Specification and Function:

- complete name: Computerized Steaming Bathroom;
- model: GL-112;
- size: 1200x1200x2100mm;
- glass color: White or Blue;
- water protect level: IPX4
- function:


- ◆Computer Control
- ◆Steaming Bath
- ◆Perfume Oil Box
- ◆Time Setting
- ◆Top Shower
- ◆Flexible Sliding Shower
- ◆Backside Sharp Massage Nozzle
- ◆Sole Massage Device
- ◆Mirror
- ◆Cool& Hot Water Wrench Valve

- ◆Audio Input
- ◆Telephone System
- ◆FM Radio
- ◆Alarm System
- ◆Ozone Disinfection
- ◆Ventilation Fan
- ◆Roof Lamp
- ◆Background Light
- ◆Goods Shelf
- ◆Thermal Faucet (optional)

### 2. Water and Electric Technical Parameters

Power Parameters				Water Supply Parameters			Diameter of the Pipe Joint	
Voltage	Frequency	Control Voltage	Steam Generator Power	Supply Pressure	Operative Pressure	Rate of flow	Cool&H of Water Supply	Drainage
AC200V ~AC240V	50HZ /60HZ	DC12V	3.0kW	$\geq 0.02$ MPa $\leq 0.7$ Mpa	$\geq 0.2$ Mpa $\leq 0.4$ Mpa	8~10L/min	$\phi 15$	$\phi 40$

### 3. Product Size, Water and Electricity Preparation

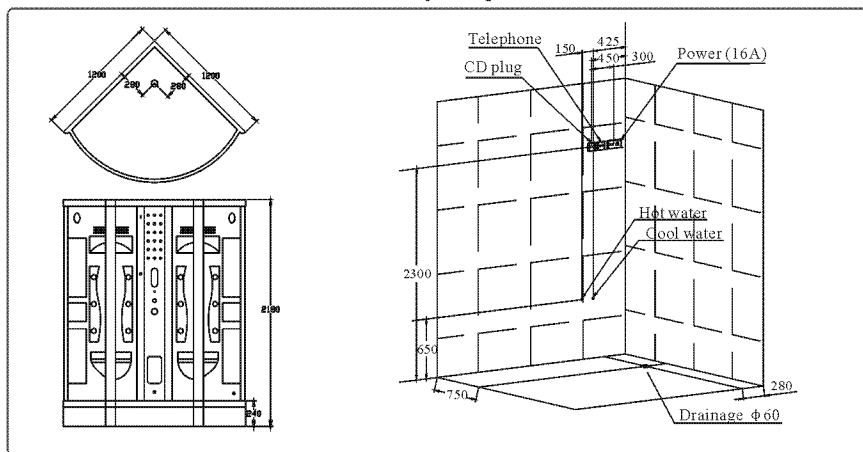

## Installation

### 1. Caution

- 1.1 The installation of this product must be made by qualified electrician or professional people who is appointed by GAT dealer.
- 1.2 The local electric parameters must be accord with electric parameters of this product.
- 1.3 The power supply wire of this product must permanently connect to fixed wiring. This product should be supplied through a residual current device(RCD) having a rated residual operating current not exceeding 30 mA, and test it if work well.
- 1.4 The product has been carefully inspected to rigid quality standards before shipment, for ensure the safe using and high performance, do not modify, add, or reduce any water or electrical parts without manufacturer's permission.
- 1.5 When connection the water supply, place two(one for cool water and the other for hot water) general water valves in the water supply outlet on an easy-operationed place.


### 2. Tools

- |   |                       |
|---|-----------------------|
| 2.1 \$ "+"\$ shape screw driver, "\$ -\$" shape screwdriver | 2.2 stepladder        |
| 2.3 & 8-10、12-14 open wrench, adjustable wrench             | 2.4 adjustable wrench |
| 2.5 electric drill  | 2.6 measure ruler     |
|   | 2.7 gradientier       |


### 3. Installation steps

#### 3.1 mounting tray with back enclosure:

- ▶▶ Check all packaging of the product, if there is nothing wrong, go ahead the installation;
- ▶▶ Place the tray level at indoor location, adjust base stand to level upper tray surface;
- ▶▶ Fasten back enclosure on tray with M6x25bolt and nuts;
- ▶▶ Find out the sole massage device(1 set), sliding shower head(1 piece), flexible pipe(2 pieces), connect them.

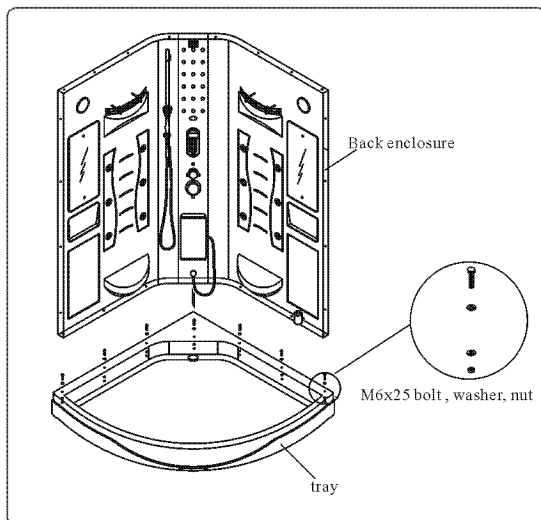


- » Fasten connector in the correct direction to below and upper joint ends of corner column with M4x16 (small head) screws.
- » Make the connector cut in the tracks, fixed glass cut in side column glass flute, use M4x12 (small head) screws fasten corner column to below and upper tracks by connector.
- » Clean up the frontal glass enclosure, put it onto tray and adjust place, make sure the holes on the side column aim at the holes on the back enclosure, fasten side column to back enclosure with M4x16(big head) screws.

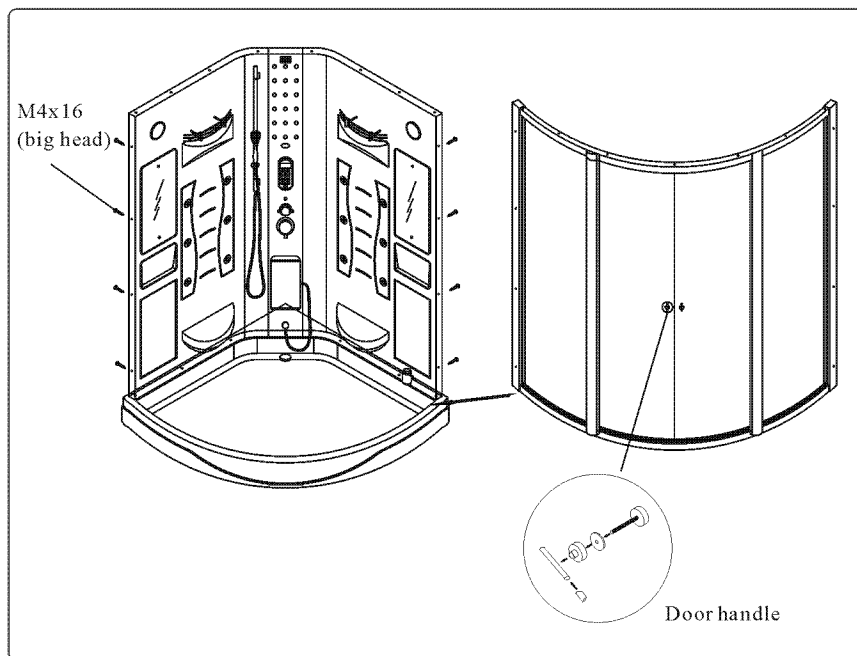

### 3.3 Mounting top cover:

- » Set top cover onto installation location, level holes on the top cover frontal parts with holes on the glass enclosure, fasten top cover and glass enclosure with M4x12(big head) screws, level holes on the top cover back parts with holes on the back enclosure, fasten top cover and back enclosure with M6x20 bolts and nuts.
- » Clean the whole steaming bathroom, complete the mounting.

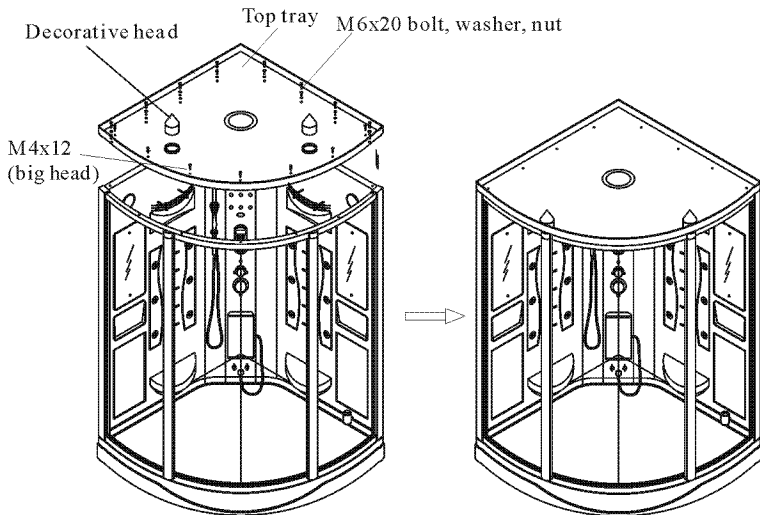

#### 4. Water connection

▶ The joint of the top shower is apart for packing. Let top shower pipe joints through the hole in back of the top cover, connect the joint to the top shower on the top cover.

▶ The drainage pipe of the steaming generator, when turn off the whole control system, the high temperature water(if you have steaming bathing) which is in the steaming generator will be drain, make sure to properly connect it with the drainage below the tray.

▶ Connect the hot&cool water supply hose to indoor prepared tie-in, caution which is hot water or cool water(refer to the panel of hot&cool water wrench valve), the connection parts must use attached by our packing.

Caution: To cut off the water supply easily after finishing your bath anytime, please place two general water valve between the supply outlet and bathroom inlet on a easy-operated place.

▶ Insert tray drain hose into prepared waterspout drainage, keep the inlet depth less than 10cm.

#### Sketch of water supply

