

Backrest Disassembly

Tool:



Wrench



Special wrench



Screwdriver



Knief



Blower



Pipe clip




Glue


Step 1. Take out the screw cover on two sides of aluminium column by hand, then unscrew the screws by the cross screwdriver and open the column.



Step 2. On the back of column, unscrew the four jets by screwdriver then unscrew the two white pipes by wrench that through the back jets to the bottom of column

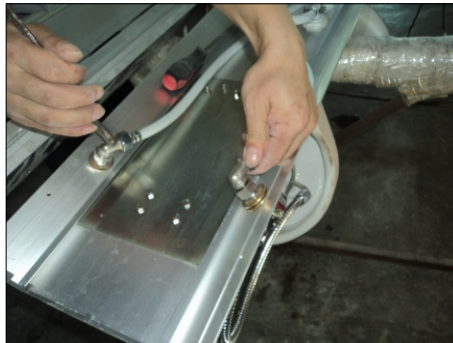

Step 3. Use the blower to soften the white pipe, then cut off the pipes that connect to the jets by knife.

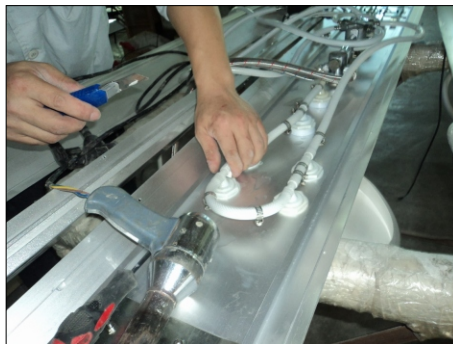

Step 4. Plug screwdriver into the side nozzle of the jet to fixed the jet, meanwhile swirl the jet by the special wrench and take out the four jets.



The end!

Assemble

Step 1. Put the four jets into the holes on the backrest, then assemble the white plastic parts on the back of jets and fasten the jets by wrench.



Step 2.
Connect the white pipe, first to put the clip into the pipe,



Second to wipe some glue onto the layup of pipe and nozzle on the jet, then connect the jets with suitable length of white pipe.



For the last two bottom jets, connect it with the arc-shaped white pipe.




(P.S. Cut the white pipe according to the distance between the jets)




Step 3. First to screw the jets by special wrench, then fix the clip right into the layup of pipes and fasten the screws of pipe clip.



Step 4. Put the pipes through the jets to connect the pipe joint at the bottom.

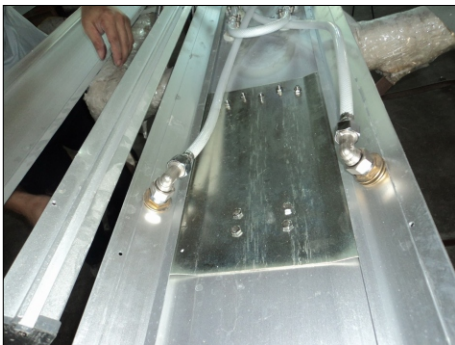

Step 5. Close the two columns and fasten the screws.

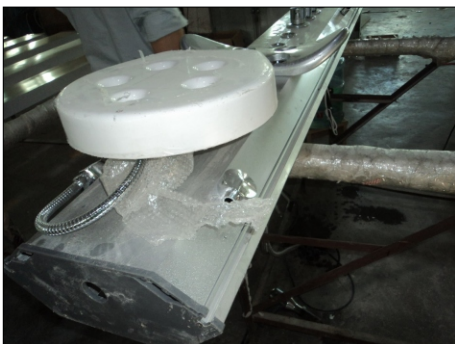

The end