

ZERO GRAVITY MASSAGE CHAIR

ZERO GRAVITY MASSAGE CHAIR PLACE S THE BODY IN THE LEAST
STRESSFUL AND COMFORTABLE POSITION FOR EFFECTIVE MASSAGE.

FIVE " ONE-TOUCH" AUTO PROGRAMS.

MUSIC MASSAGE TRANSFERRING VARIOUS MASSAGE TECHNIC.


U DISC PROVIDE, MP3 DECODE SYSTEM, WITH HI-FI EARPHONE.

HEATING FUNCTION.

INNOVATIVE SUB+ MAIN REMOTE CONTROLLER.

24 AIR BAGS.

VFD SCREEN.

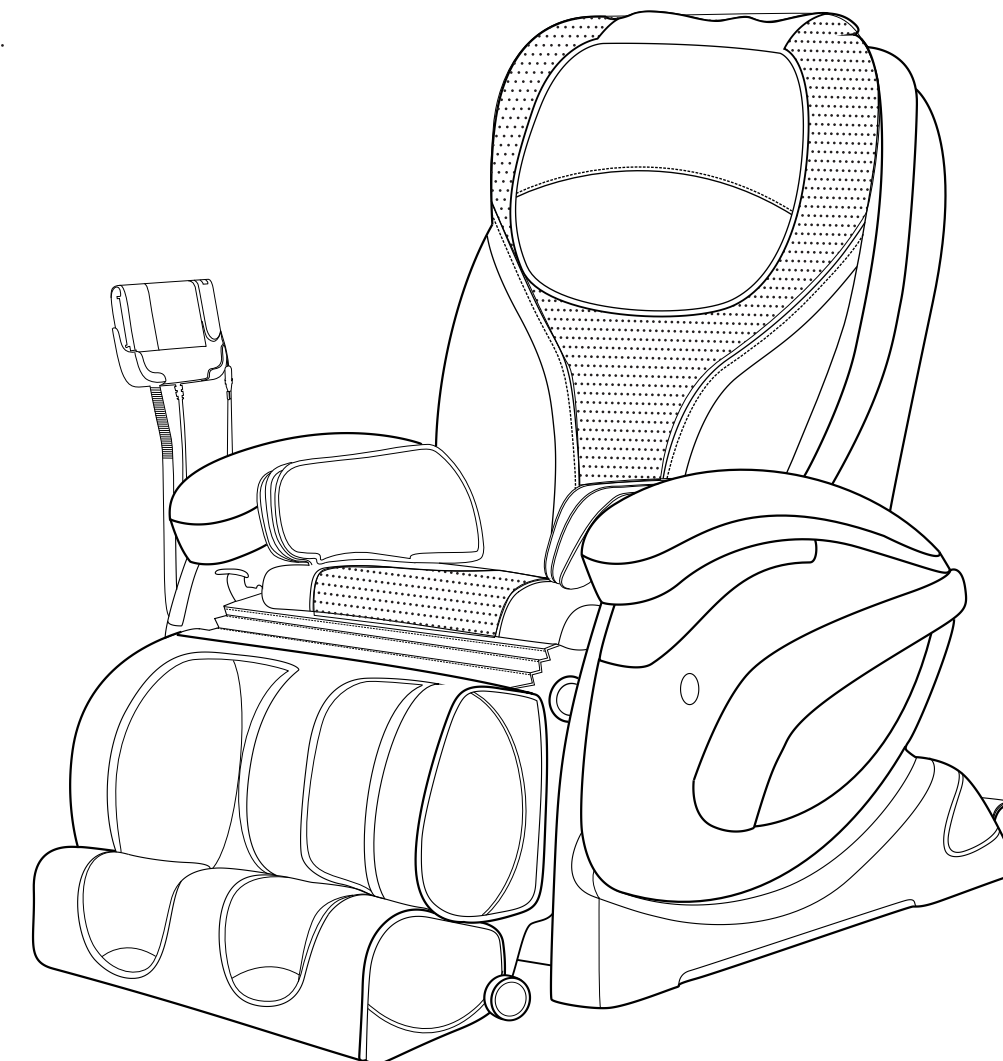

PRINT SAMPLE

OPERATIONAL MANUAL

Thanks for you choose our Zero Gravity Massage Chair. Before operating the Massager, please read this Users’Manual thoroughly for the correct methods of usage, especially the notes on Safety.
This manual should be kept available for future reference after you have read it through.

Contents

Important Safety Instructions1-4

Names of Parts and Functions..... 5-6

Installation of Parts.....7-8

Remote Controller Instruction.....9-12

Preparation before Massage.....13-16

Massage Programs..... 17-22

Care and Storage.....23

Specifications.....23

Troubleshooting.....24

Important Safety Instructions

DANGER

-To reduce the risk of electric shock:

1. Always unplug this appliance from the Electrical Outlet immediately after using or before cleaning.

WARNING

-To reduce the risk of burns, fire, electric shock, or injury to persons:

1. This appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Keep the cord away from heated surfaces.
5. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
6. Never drop or insert any object into any opening.
7. Do not use outdoors.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Connect this appliance to a properly grounded outlet only. See Grounding Instruction.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This product has a grounding plug. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

PLEASE SAVE THESE SAFETY

Important Safety Instructions

1. USAGE ENVIRONMENT

- Do not use your Chair in an excessively humid or dusty environment, as it may cause electrical shock or machine trouble.
- Do not put your Chair in room temperature higher than 40°C.
- Do not expose your Chair to heaters, stoves or direct sunlight.
- Do place and use your Chair on a flat floor level.

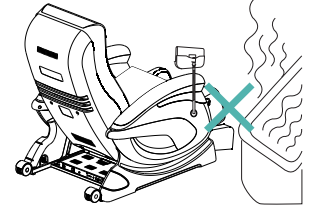

CAUTION

-You should use the Chair in a cool room, do not increase the room temperature abruptly, that may result in machine trouble. It is recommended that you increase the temperature gradually to a normal level.

2. UNSUITABLE USERS

The following users must consult their doctor before use:




CAUTION

- Being unwell.
- Malignant tumours.
- Severe heart diseases.
- pregnant or menstruating.
- Recover from surgery.
- Spinal disorders, bent or abnormal spinal conditions.
- Hyperpietic.



3. SAFETY PRECAUTIONS DURING USE

- To ensure safe and correct use of the Chair, do not operate the Chair without reading this operation manual carefully.
- Do not use the Chair with other therapeutic equipment or electric blanket, etc, as it may result in inefficacy or injury.
- Do not allow children or pets to play around the Chair, i.e. behind the Backrest, under the seat or Footrest of the Chair. It may result in injury during operation of the Chair.

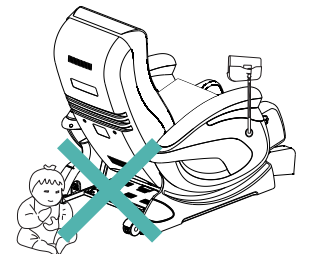

Important Safety Instructions

- Do not rest or place heavy objects on the Armrests, Footrest or Backrest. It may result in machine trouble or injury to the user should these objects topple.
- Do not use the Chair when your body is wet.
- Do not operate the Chair with wet hands.
- Continuous long application of the massage at a position of your body may result in excessive stimulation and may be counter-effective.
- Do not insert your hand or foot along the paths of the Massage Nodes during the operation of the Chair, as it may cause injury to the user.



CAUTION

- Always sit in an upright position during the operation of the Chair.
- You may place a blanket or towel over the Backrest if you prefer a softer massage.
- Using the Massage Chair as a bed is not encouraged.
- Do not apply Massage Nodes directly on the head, joints of elbows and abdomen, etc.
- The recommended usage time is 15 minutes, however, you are encouraged not to use more than 5 minutes on the same spot.

4. WHEN THE CHAIR SHOULD NOT BE USED

In the following events, please switch the power OFF immediately and disconnect the AC power cord from the Electrical Outlet.

Contact our centre for servicing:

- If the Chair is spilt accidentally with water or not in operation, continuous to use under these conditions may result in electrical shock.
- If abnormal or severe pain is felt during massage, stop operation immediately and consult your doctor.
- If you find any malfunction or any other abnormal condition during operation.
- If there is a power failure, injury may be caused when power is back unexpectedly.
- If there is severe lightning.

NOTE: Lift the Backrest Pad regularly to check for tears in the upholstery of the Central Cloth



- Do not disassemble the back cover from the Chair, touching inside may result in electrical shock.
- The Chair must only be serviced or repaired by our Service Centre and user must not disassemble or repair the Chair oneself.

Important Safety Instructions

6. Things to Note about Power Plug and Cord

Check that the voltage corresponds with the specifications indicated for the Chair (only for alternative current).



- Do not disconnect the AC Plug from the Electrical Outlet roughly.
- Do not connect or disconnect the AC Plug from the Electrical Outlet with wet hands. It may result in electrical shock or machine troubles.
- When disconnecting the AC Plug, pull it out by holding the plug and not by the cord.
- Although the operation will be stopped automatically by the Auto-Timer function, do not fail to switch off the Main Switch after operation.
- Do not place the AC cord under the Chair as it may damage the cord and result in fire or electrical shock.
- Do not use the Chair if the power cord/pulg is damaged, use attachments that recommended by our company only .
- Do not use the Chair if the Electrical Outlet is excessively loose.


7. Caution for the Remote Controller

- Do not sit, step or place heavy objects on the Remote Controller.
- Do not drop the Remote Controller. It is recommended to place it in the Remote Controller Holder when not in use.
- Do not exert excessive force on the Remote Controller.
- Do not operate the Remote Controller with wet hands.
- Do not operate the Remote Controller in bathroom or other locations with high moisture.
- Do not operate the Remote Controller using sharp-edged or hard objects, this may result in damage.



Names of Parts and Functions

- 
 - Check the voltage corresponds with the specifications indicated for the Chair (only for alternative current).
 - The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- 
 - Advise a minimum distance of 1 metre from AV devices such as television or radio, to prevent signal interference.

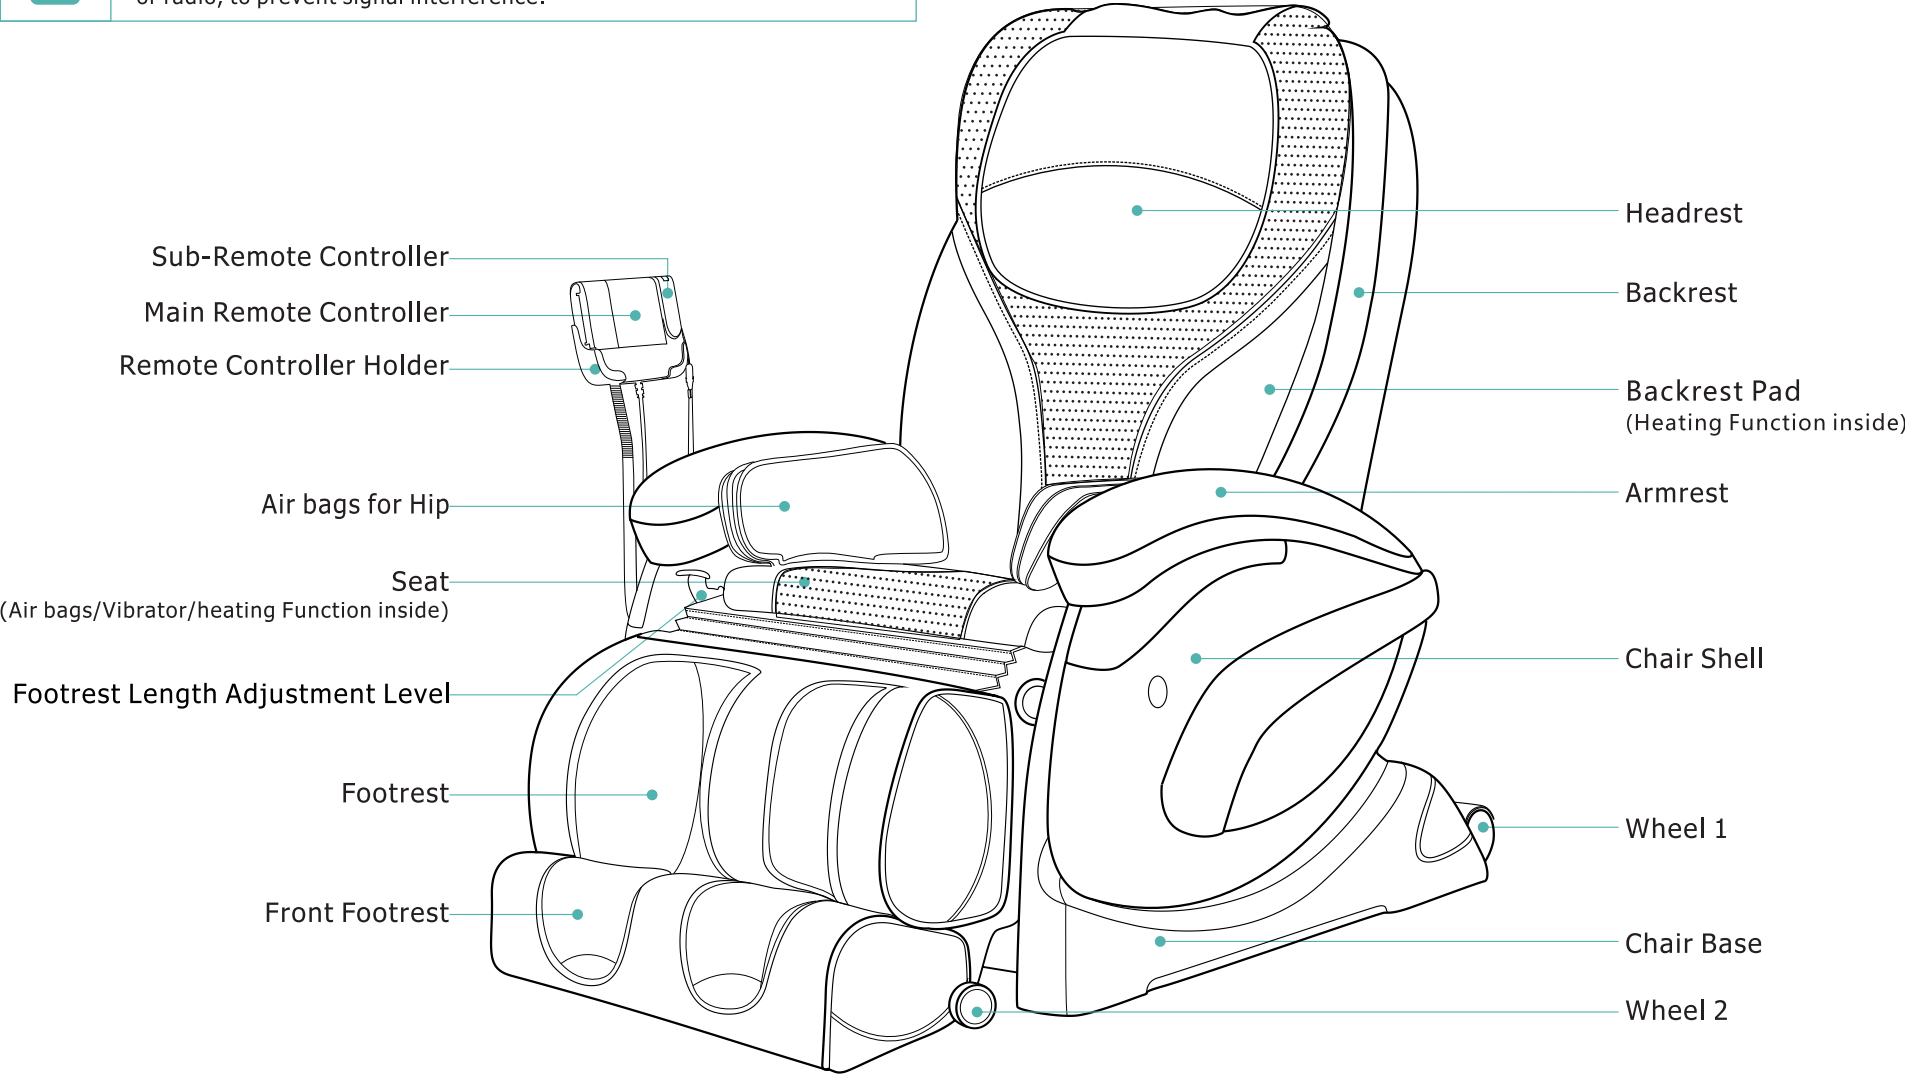

Names of Parts and Functions

Line of Connection to Remote Controller

Line of Connection from Plug to Electrical Box

Fuse

Electronic Outlet

AC Plug

Main Power Switch

Electronic Box

Front Footrest Angle Adjustment Knob

U Disc(to Save Music)

Earphone

USB Port

Earphone Port


Telecommunication Port

connector for Remote Controller


Installation of Parts

How to Install the Cell for Sub-Remote Controller


- 1.Push the front of the Cell Cap while simultaneously pull it out
- 2.Insert a round 3V Cell into the Cell Bucket.
- 3.Close the Cell Cap and it will be ready to work.




• Long time no use, please take the Cell out.

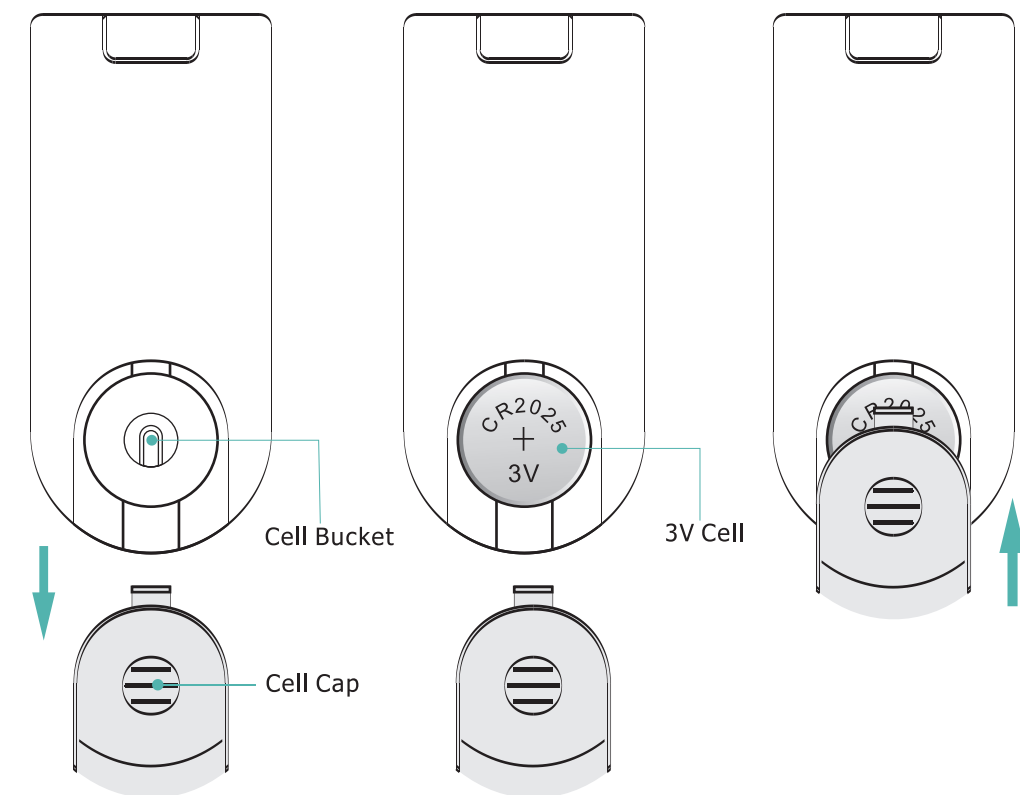

Installation of Remote Controller

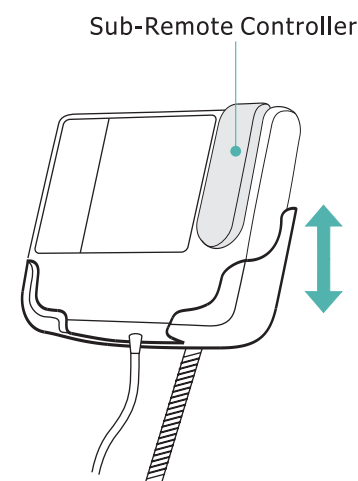

Place the Remote Controller as shown

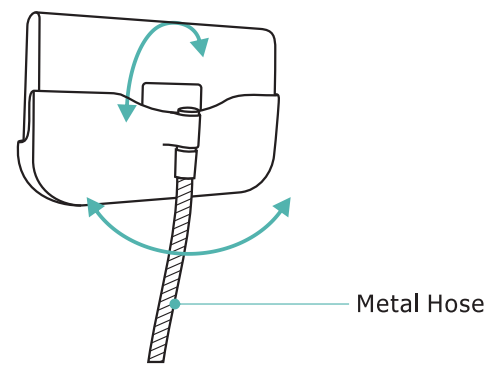

Adjust the Remote ControllerHolder freely


Installation of Parts

Placing of the Chair

- Secure sufficient space around the Chair for reclining purpose.
- Make sure that there is an allowance of more than 45cm in the front of and 75cm behind the Chair.





• Put a carpet under the chair to prevent scratching of the flooring.
• Make sure that there is no obstruction around the chair for a safe recline during operation.

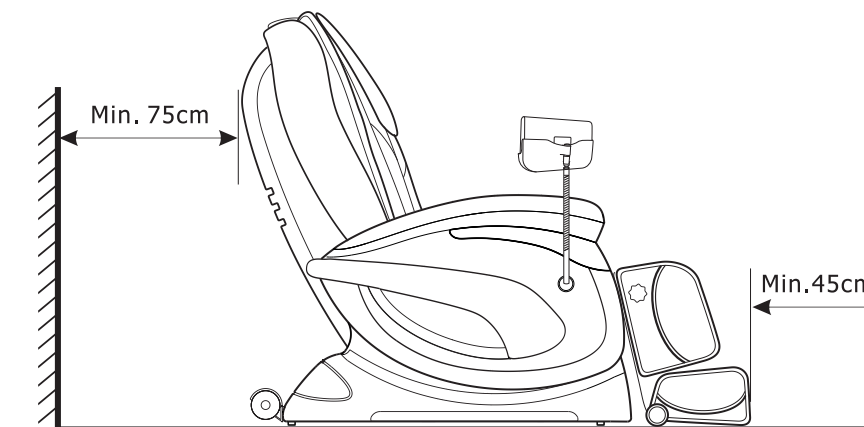

Backrest Pad Installation

- Backrest Pad is attached to the Backrest by zipper, to load or unload Backrest Pad, only zip the zipper.(A)
- Install Back Heating Function:
 - a. Insert plug① with plug② end to end only.
 - b. To separate, pull them out.
- Turn the Backrest Pad to behind the back of the Chair if you prefer a more intense massage.(B)

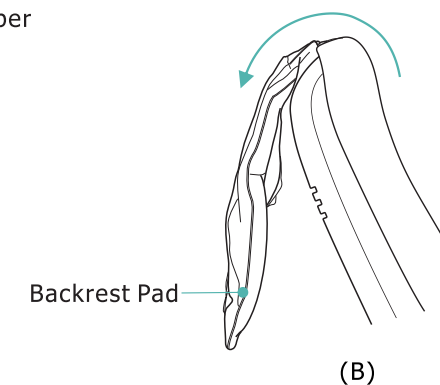
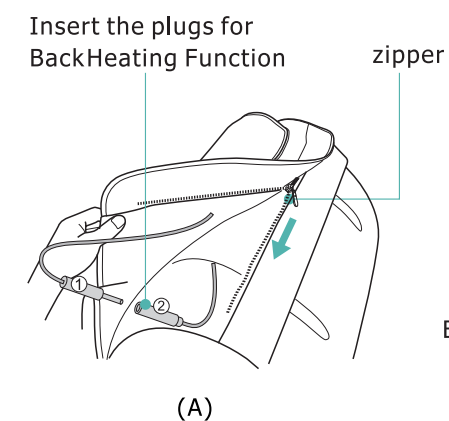


Headrest Installation

- Attach the Headrest to the Backrest Pad using velcro tapes.(C)
 - a. In bonding, stick them together.
 - b. To separate, take it away directly.


Softening Pad Installation

- Place the softening Pad at the base of the Backrest to help absorb some of the roller stimulation. Remove it if you prefer a more intense massage.(D)

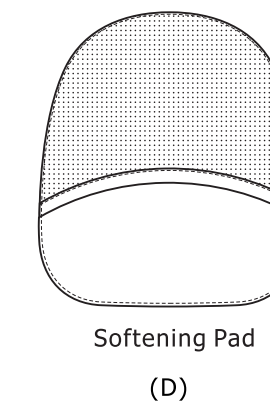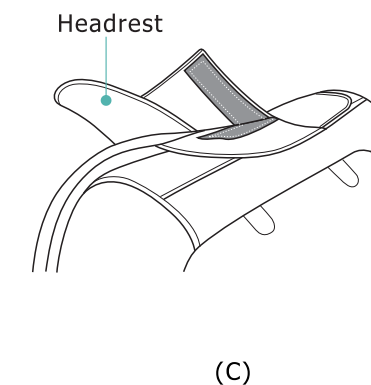


Remote Controller Instruction

Main Remote Controller

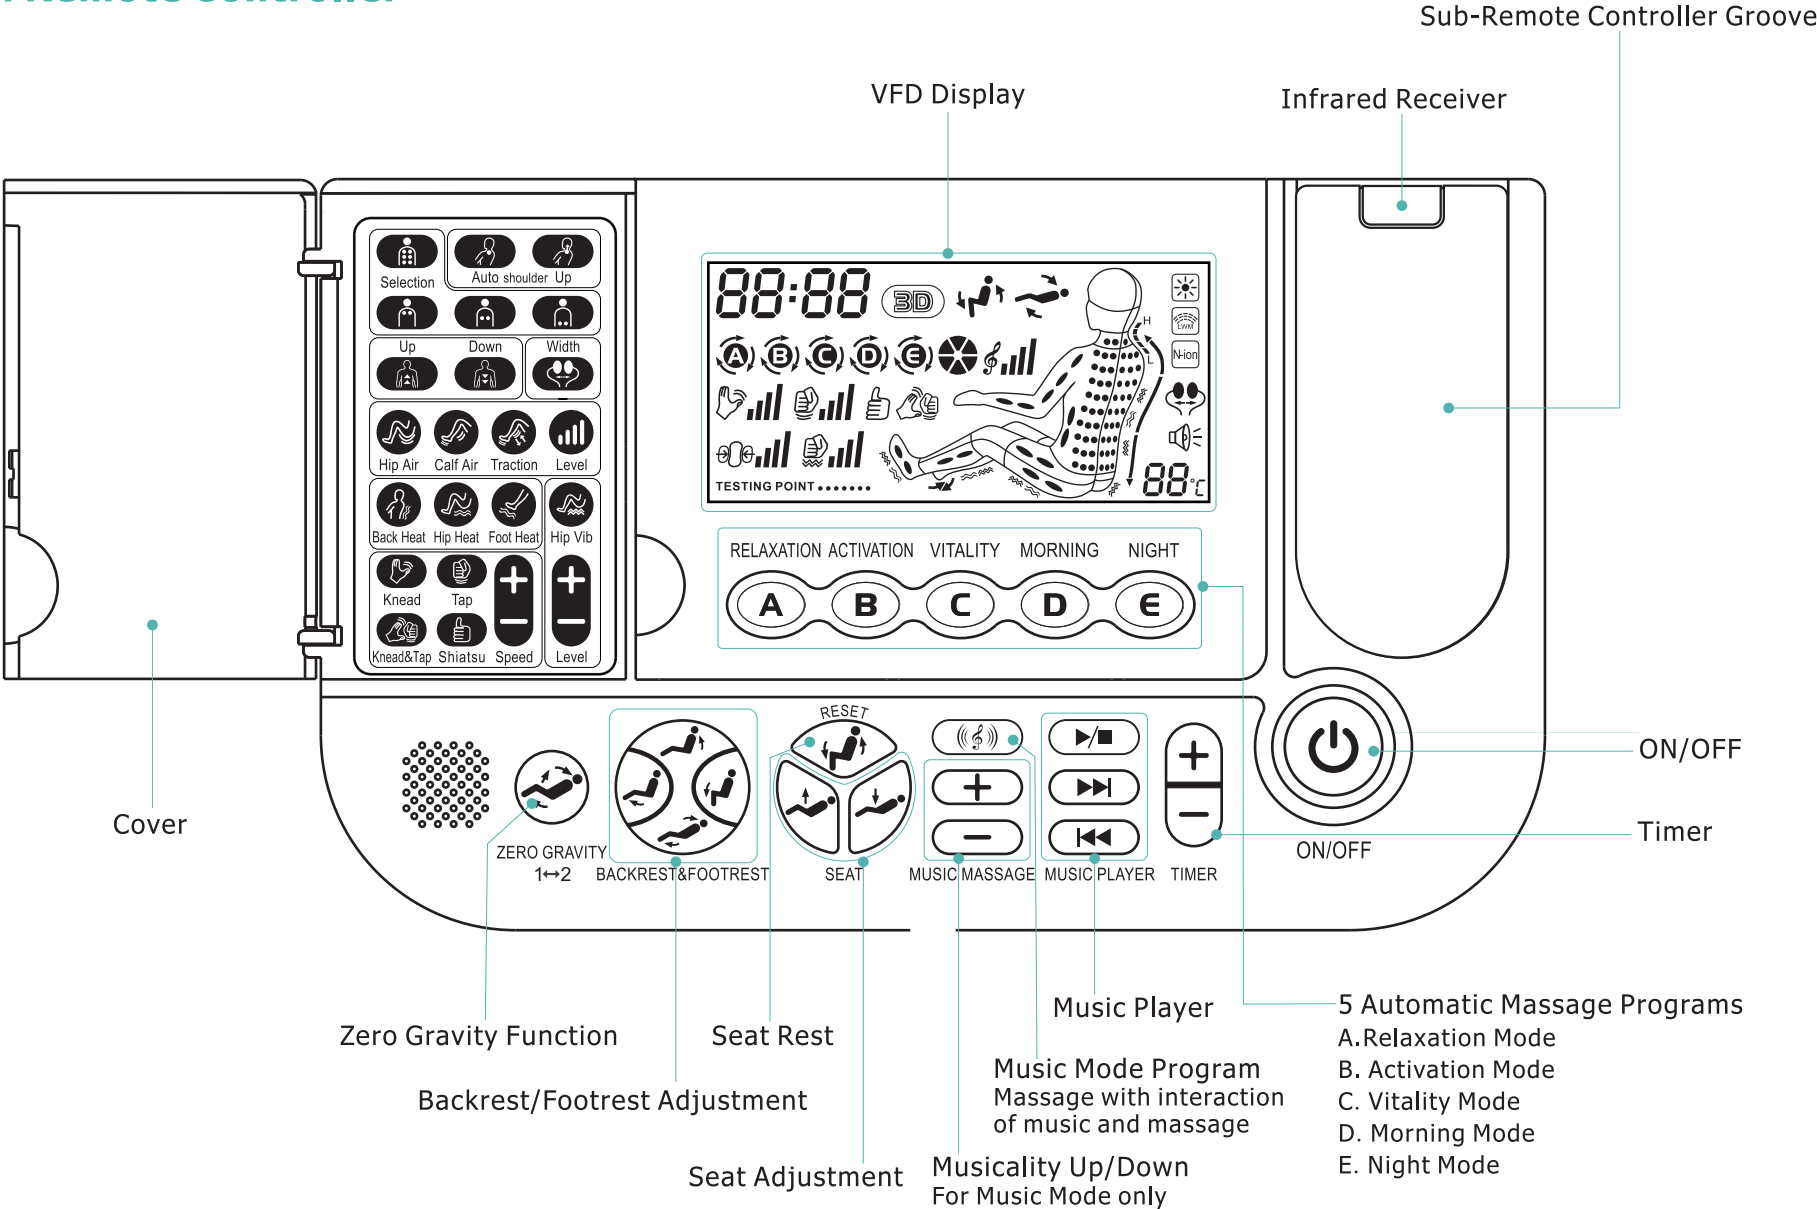


Remote Controller Instruction

Sub-Remote Controller With Infrared Ray

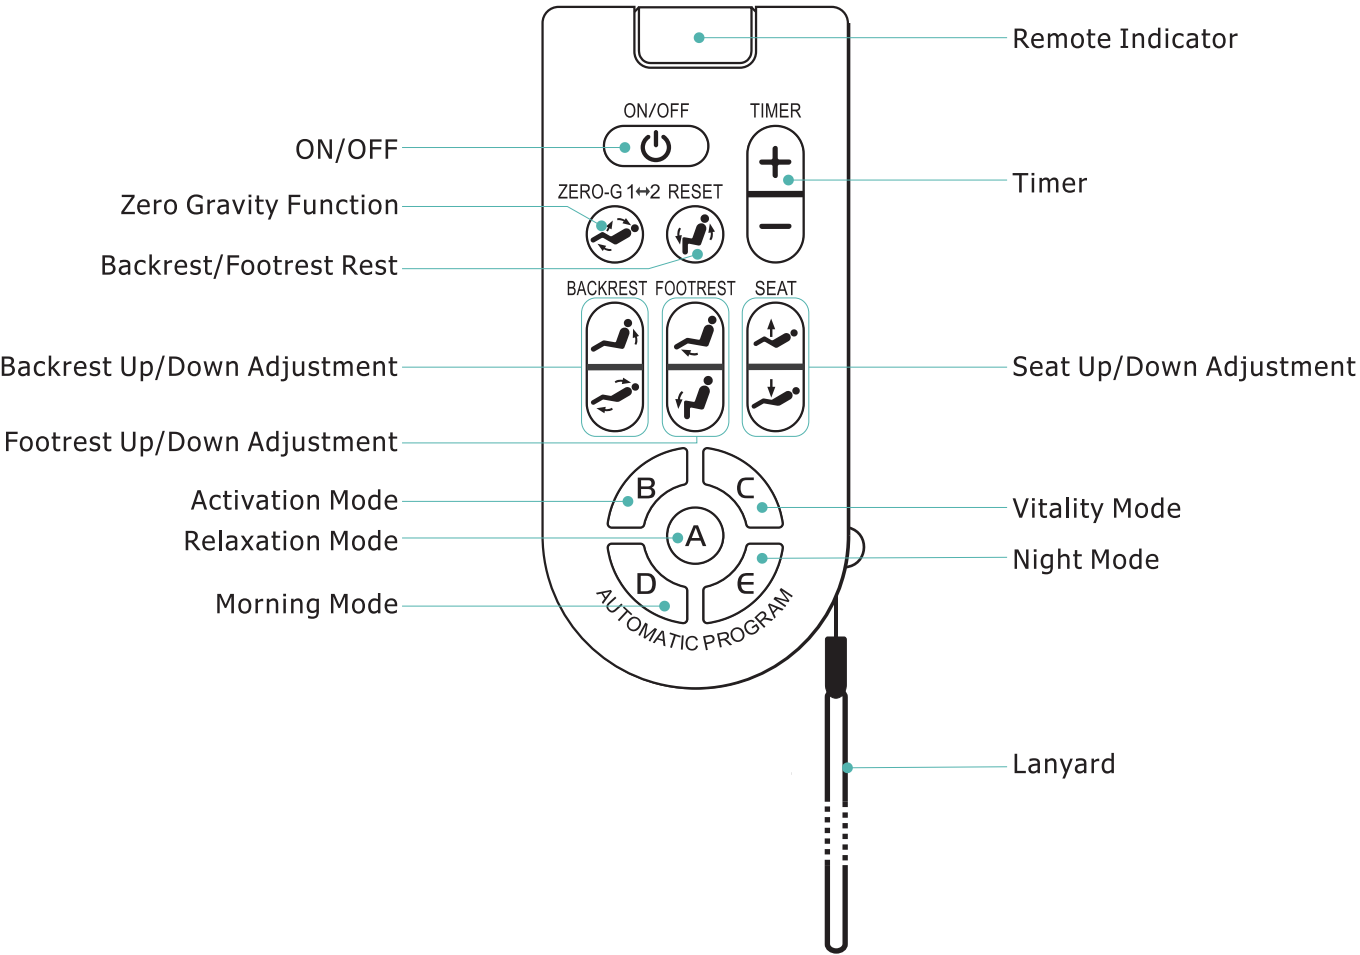


Remote Controller Instruction

Manual Remote Controller Panel

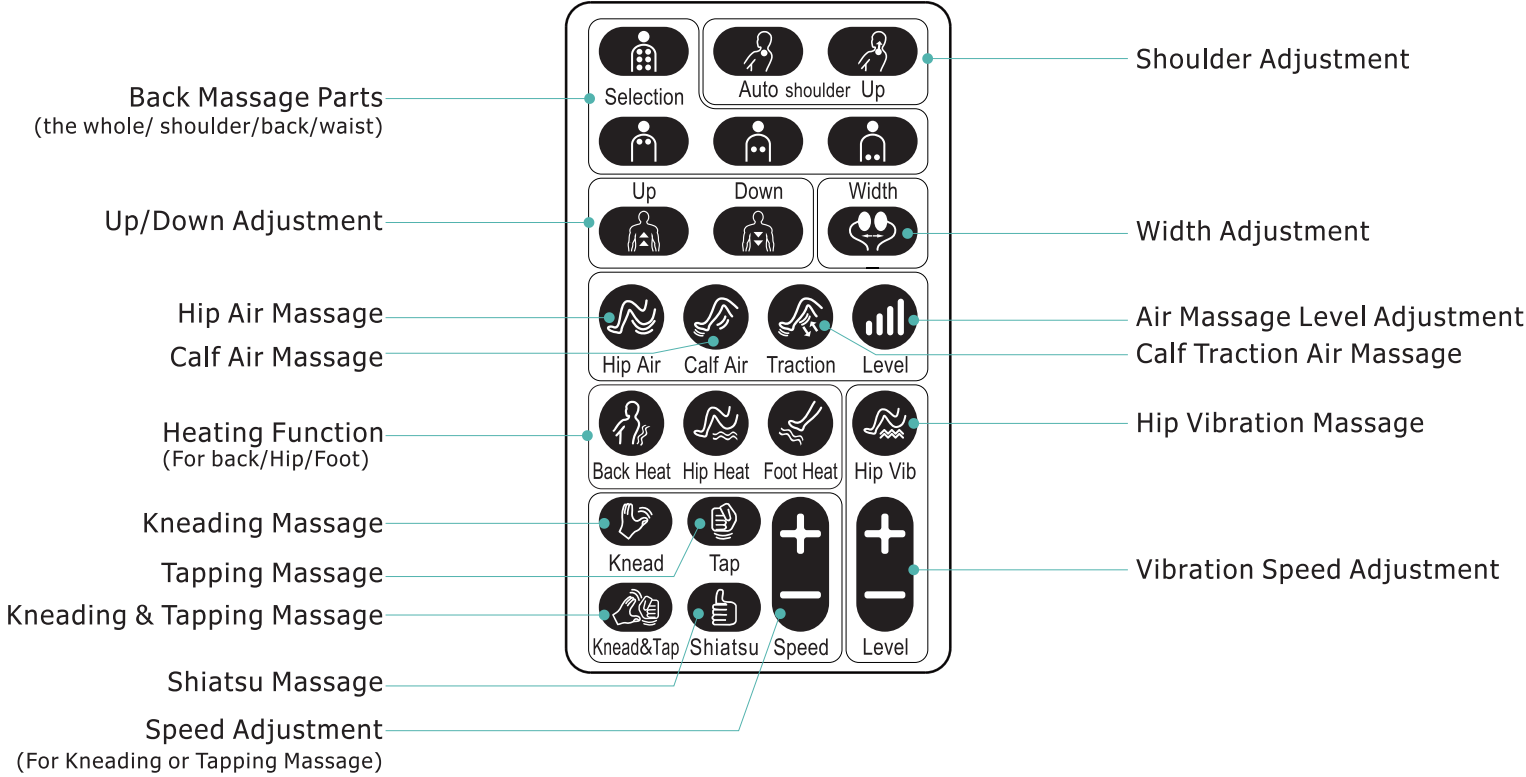

Remote Controller Instruction

VFD Display

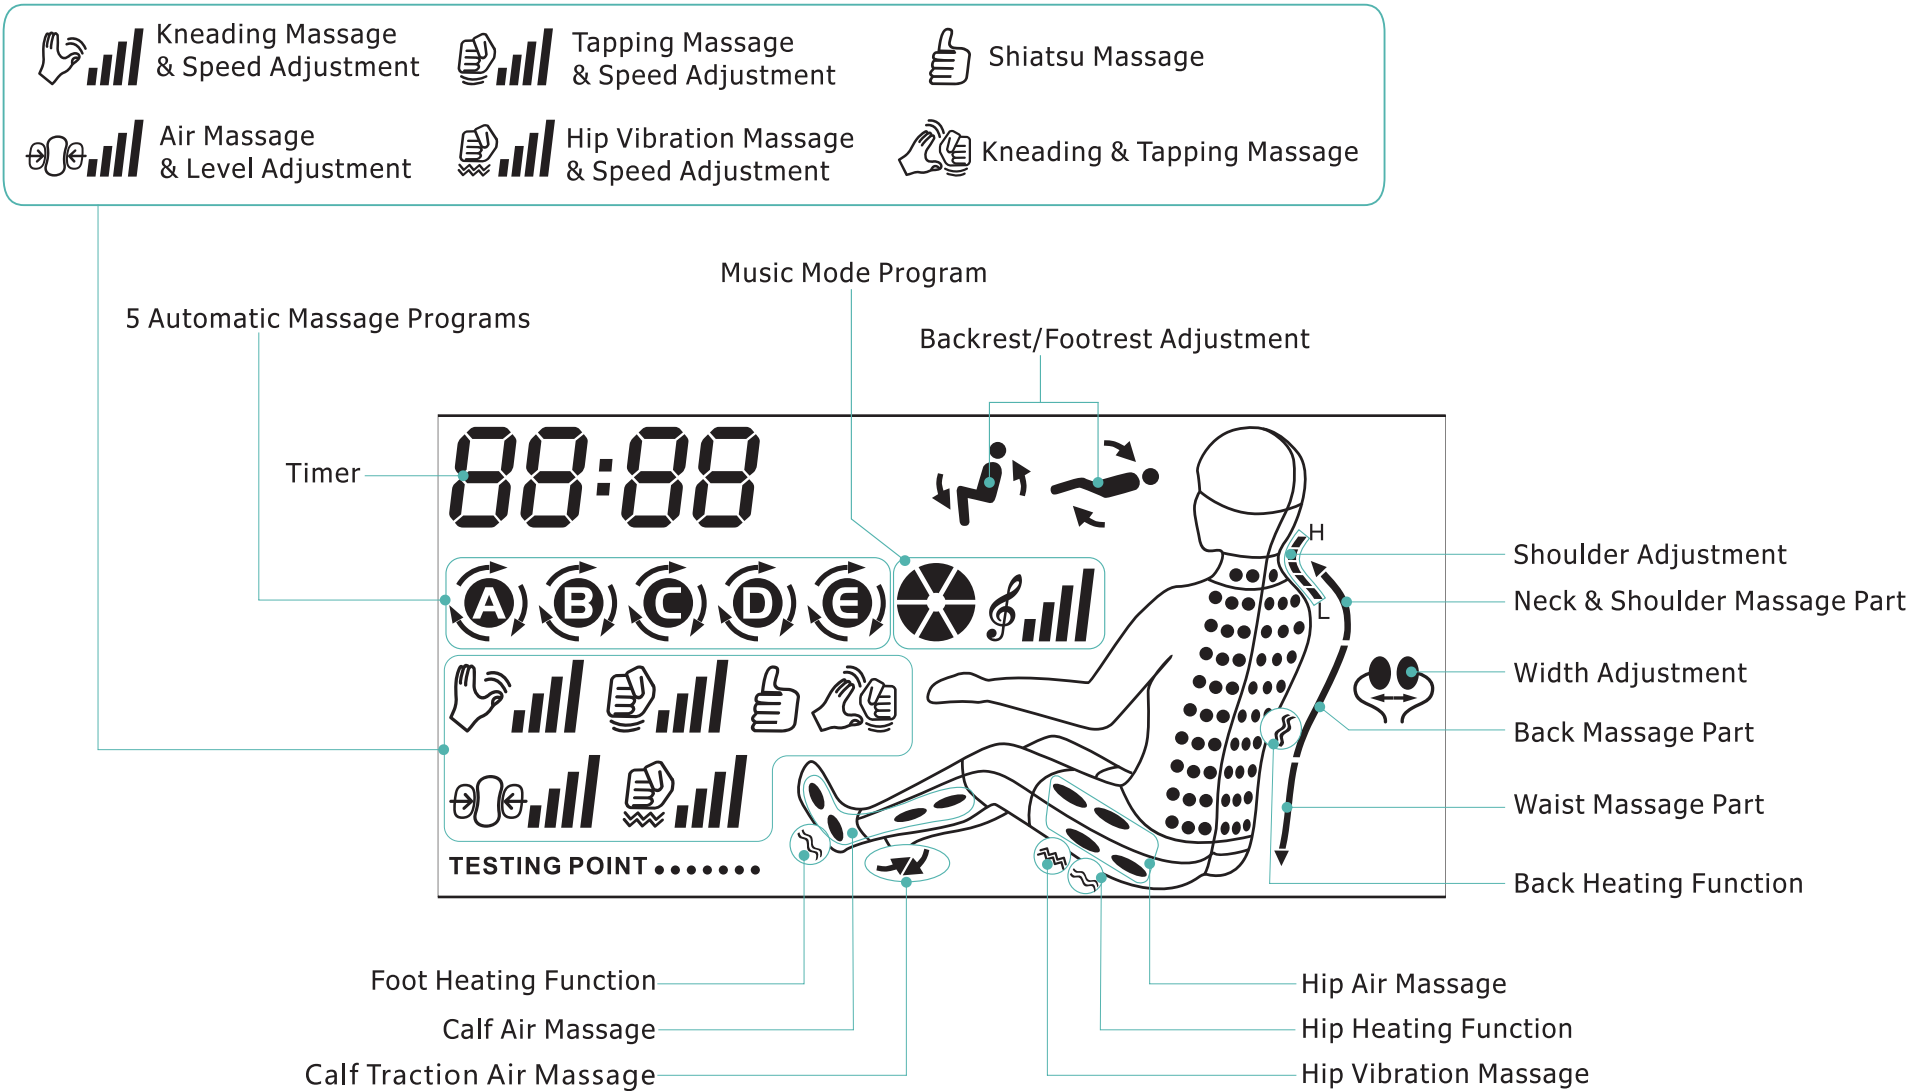

Preparation Before Massage

Power On

- 1.Connect the AC Plug to the Electrical Outlet.
- 2.Turn on the Main Power Switch located on the Electric Control Box.
- 3.Press the "ON/OFF" button, it is ready to work after scanning the shoulder position.

CAUTION


- Make sure that the AC cord is not placed under the chair base.
- Make sure that all switches are at the OFF position(including the Main Power Switch) before the AC Plug is connected ot an Electric Outlet.



How to Use the Reclining System

Footrest


- 1.To lift: Press the"Footrest Up"button until the Footrest is upward to your desired height.
- 2.To lower: Press the"Footrest Down"button until the Footrest is downward to your desired height.

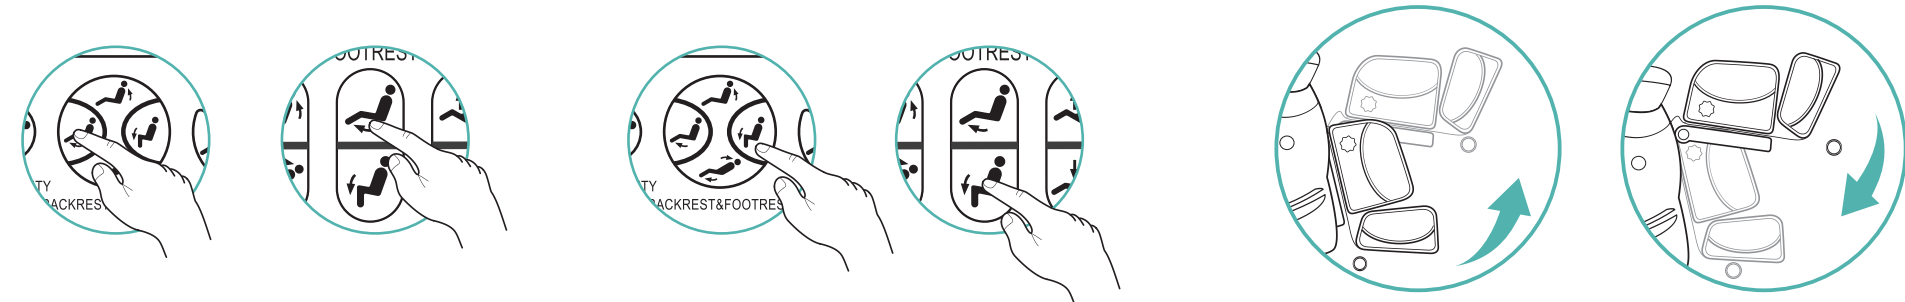


Preparation Before Massage

Seat

- 1.To recline: Press the"Seat Up"button until the Seat upward to your desired.
- 2.To incline: Press the"Seat Down"button until the Seat is downward to your desired .

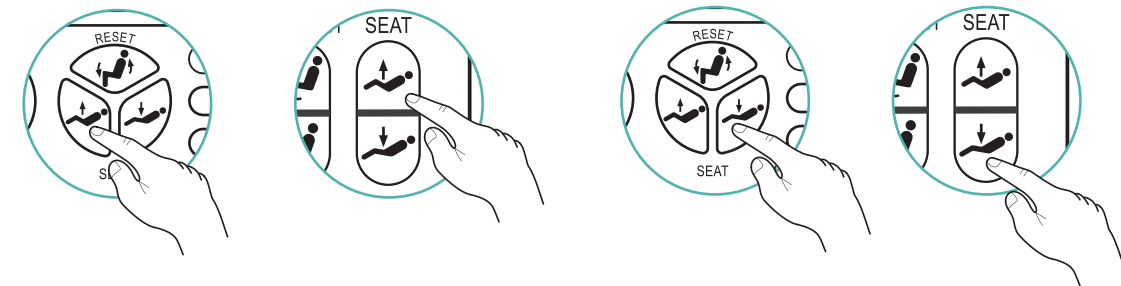



• Keep hands and fingers away to prevent injury.

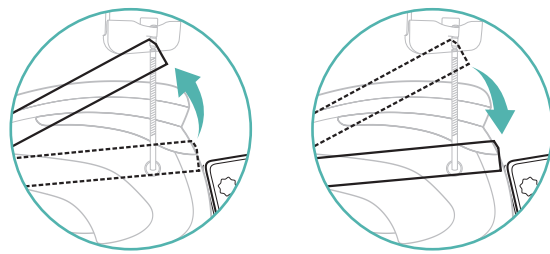

Zero-Gravity

- Zero-Gravity Position 1: Press the"Zero-Gravity" button, the Backrest, Footrest and Seat adjust automatically to the body's perfect and natural position. All massage functions can be used in this position.
- Zero-Gravity Position 2: Press it again, the Footrest are further elevated and Backrest reclined for extreme circulation and relaxation.

• It is unsuitable for Hyperpietic under the Zero -Gravity Position 2.
• Do not allow children or pets to play around the chair, it may result in injury.

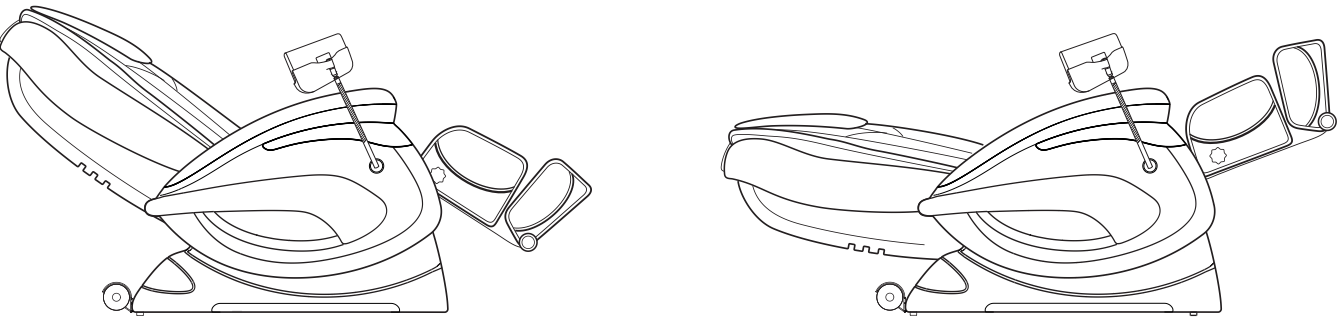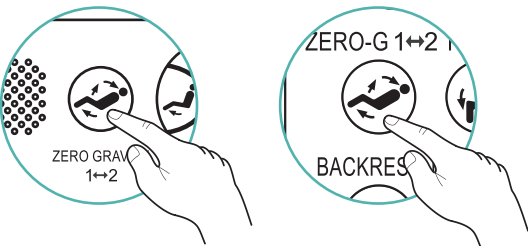


Position 1

Position 2

Preparation Before Massage

Backrest

- To recline: Press the "Backrest Down" button until the Backrest is down and Footrest is up to your desired angle.
- To incline: Press the "Backrest Up" button until the Backrest is up to your desired angle.

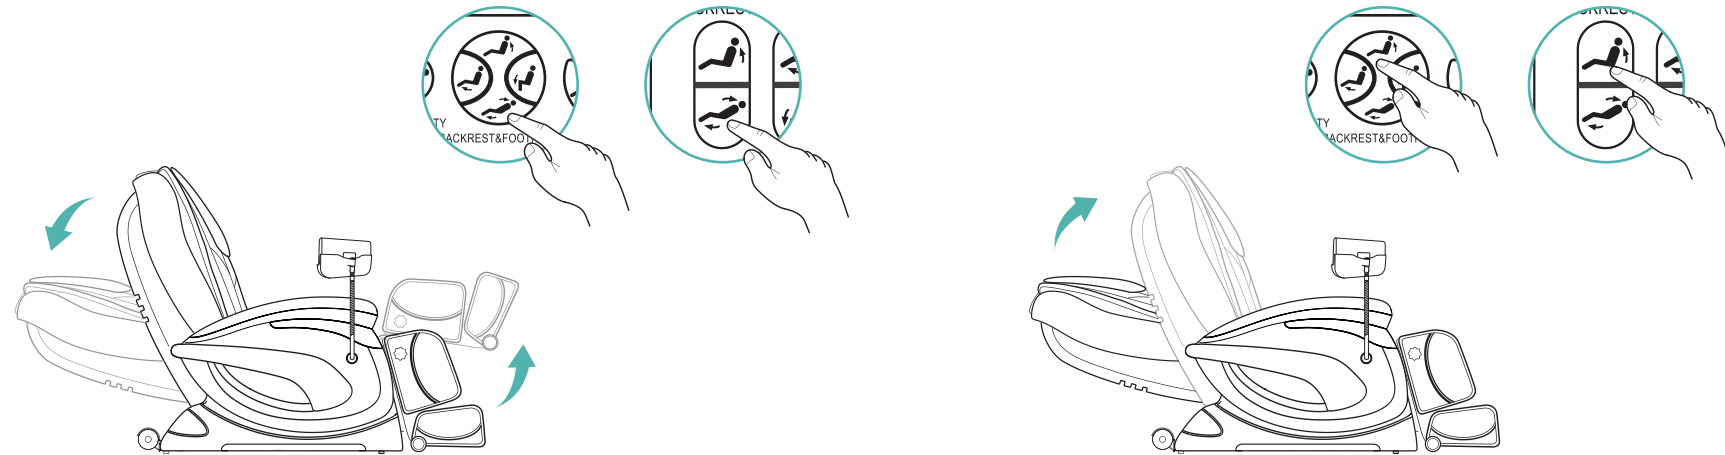


Rest

- To rest: Press the "Reset" button, the Backrest, Seat and Footrest is to the initial position.

How to Adjust the Front Footrest Angle

- The angle of the Front Footrest could be adjusted to suit for users by Front Footrest Angle Adjustment Knob as shown.
1. Rotate it counterclockwise slightly and adjust the angle freely with feet. Release it to be locked.
 2. Reset: Just rotate it counterclockwise slightly again.

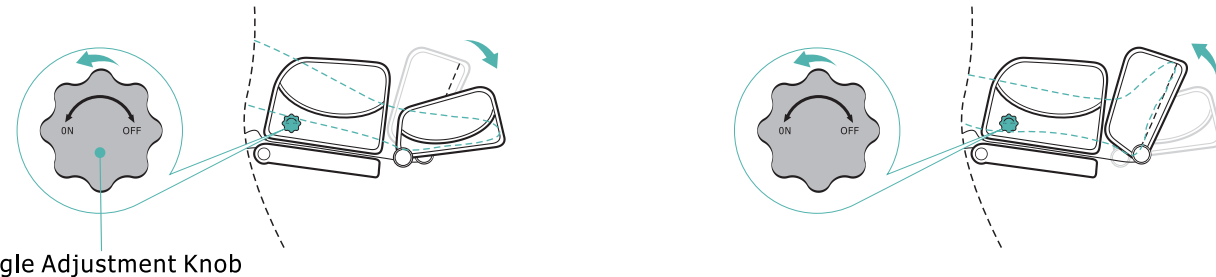


Front Footrest Angle Adjustment Knob

Preparation Before Massage


How to Adjust the Length of the Footrest

- The length of the Footrest can be adjusted to the comfort of the user by lifting the Footrest Length Adjustment Lever.
1. To lengthen: Lift the lever and push out the Footrest with your feet to get the proper position and loosen the lever to lock the Footrest.
 2. To shorten: Just lift the lever and the Footrest is to the initial position automatically.

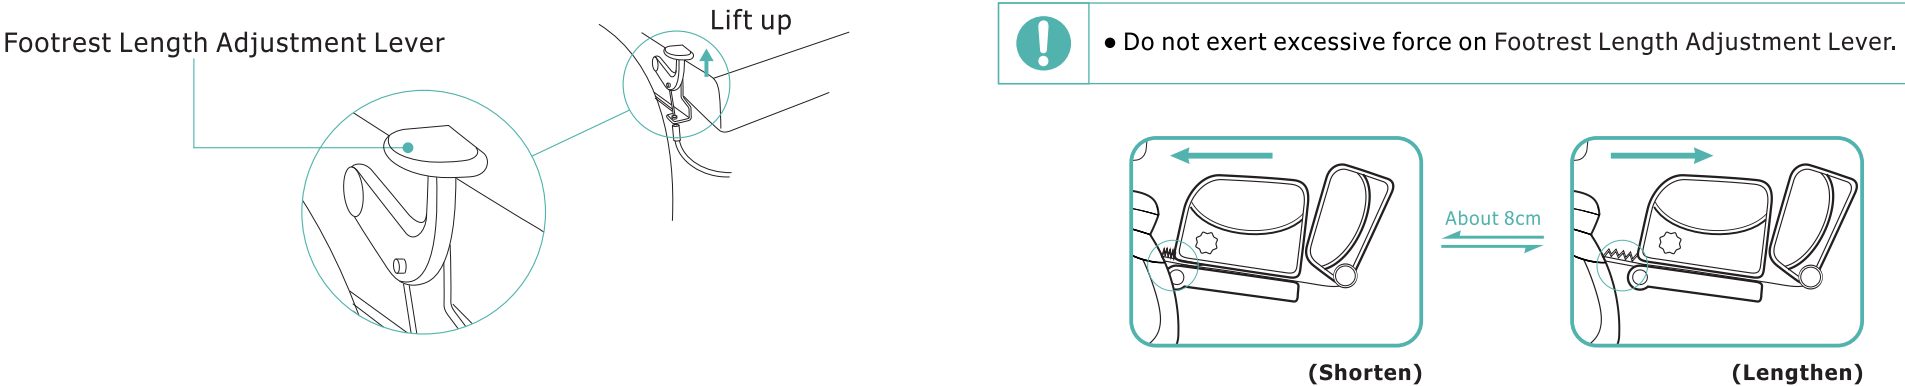

Moving the Massage Chair

- Move: There should be two more person, one hold the Footrest upward the other turn the Backrest backward causes the wheels to be well-grounded then push it to move.

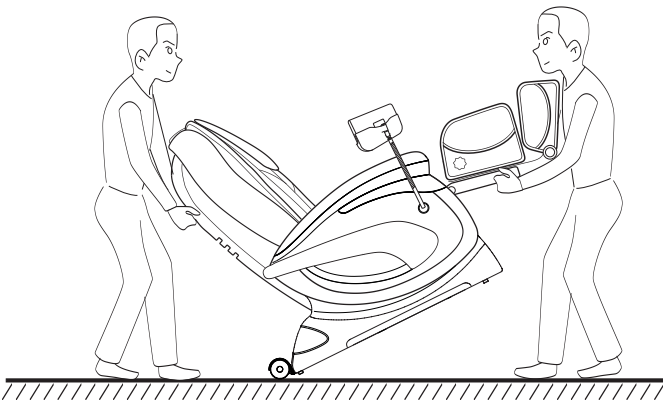

- CAUTION**
- Please pull out AC Plug from Electric Outlet before moving Chair.
 - Do not move the chair when someone is sitting on it.
 - The Chair is rather heavy. Take sufficient care when lifting it.




- !**
- Do not move the Chair by catching the Chair Shell, it may cause injury or mechanical trouble.

Massage Programs

Timer


1.The default massage time is 30 minutes and the massage procedure will be closed automatically after 30 minutes.

2.How to set the time: a. Press button  to be increased by 5 minutes

b. Press button  to be decreased by 5 minutes

After setting of the time, the machine will begin to count down till the remaining time is zero and then the procedure will be closed automatically.

3.In changing of Automatic Massage Programs and Manual Programs, the remaining time won't be changed.

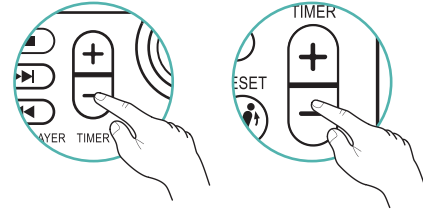


Choosing Back Massage Parts



●Press following buttons to choose one of 4 massage parts. When it is chosen, the correspond icon is lighting on the LCD.

—  The Whole Course: It will give massage up and down from neck to waist.

—  Shoulder Part: It will give massage up and down from neck part to the upper back.

—  Back Part: It will give massage up and down from upper back to lower back.

—  Waist Part: It will give massage up and down from lower back to waist part.

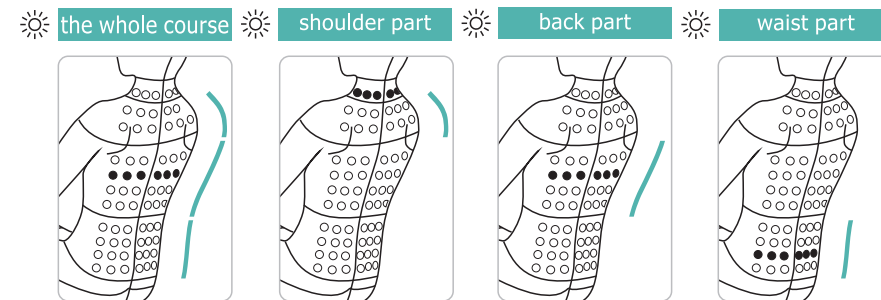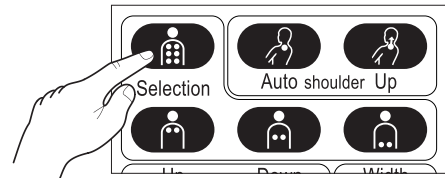


Up/Down Massage

●This function is for Kneading Massage, Tapping Massage and Kneading & Tapping Massage only.

●It is 2 method to use this function During Back Massage:

1.Press“Up”or“Down”button continuously, the Massage Nods will move up or down. Release it, the nods will stop on your desired part.

2.While the nods massage on you desired part, just press“Up”or“Down” button once and the nods will stop there for a spot massage.

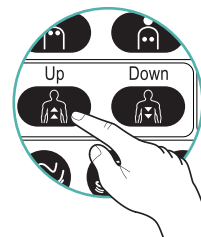


Massage Programs

Shoulder Adjustment

1.Press “Auto Shoulder” button, optical sensor will scan the curvature of your body, detecting the exact acu-points unique to each individual. at the same time, the Massage Nods begins to move to suit the position of your shoulder.

2.Press the “Manual Shoulder Up” button to adjust the position to the upmost shoulder.

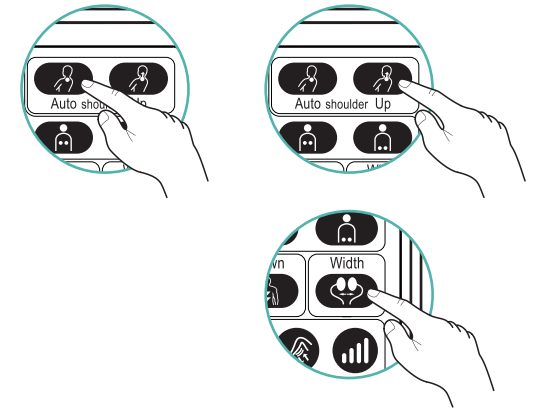

Width Adjustment


1.It is suitable for Tapping Massage and Shiatsu Massage only.

2.Press “Width” button to adjust the massage width according to your desire.

After Use

●Press the “ON/OFF” button to stop massage and the Massage Nods return to original position.

●To avoid malfunction and accidents with children, do remember to switch off the Main Power Switch and disconnect the AC Plug from the Electrical Outlet after use.

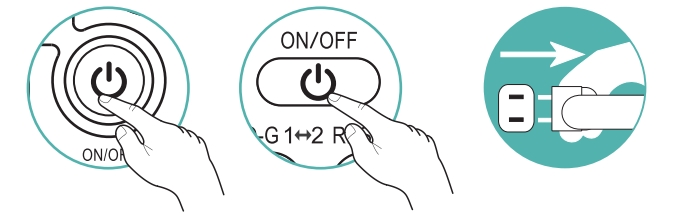


There are 3 series of massage: 1.Automatic Massage Programs 2.Message along with Music Rhythm 3.Manual Massage Programs

1.How to Use the Automatic Massage Programs

This menu of 5 specialised massage programs which is designed to meet specific well goals with a simple touch of the Remote Controller.

Choose from a range of 5 different kinds of pre-programed massages.

A-- Relaxation mode B-- Activation mode C-- Vitality mode D-- Morning mode E-- Night mode

The Automatic Massage Programs buttons 


The correspond icons  on the LCD

●To start massage, press any one of the 5 buttons, you can enjoy a continuous massage on the whole body. Press the buttons again to stop massage.

Massage Programs

2. Massage along with Music Rhythm (Massage program with interaction of music and massage)

1. Download your favorite songs in Mp3 type into the U disc and insert it into the USB Plunge (on the Electric Control Box).
2. Connecting the Earphone to the Earphone Plunge and put on your head, press the "Music Mode" button for massage with music rhythm and press or to adjust musicality intensity (4 grades).
3. Press "Music Player" button to select music. (This Function can be used under other massage programs)
4. Adjust the volume by Volume Control of the Earphone.

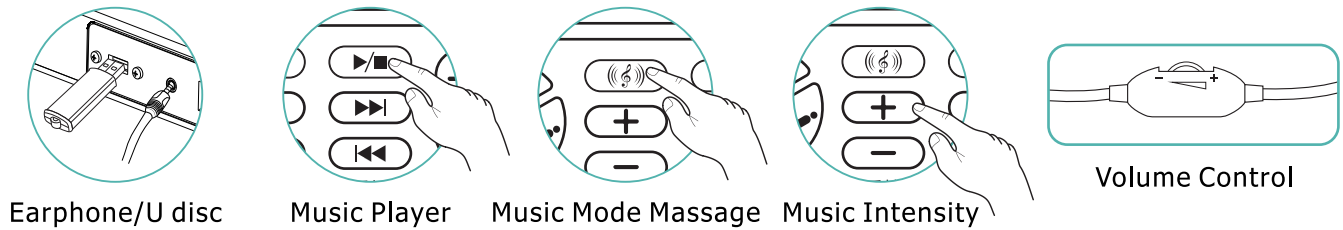

3. Manual Massage Programs

It allows you to mix and match from a choice of massage actions, you can adjust massage action's speed, level or position to suit yourself.

• A.4 Back Massage Programs:

- Kneading Massage
- Tapping Massage
- Kneading & Tapping Massage
- Shiatsu Massage

• B.3 Air Massage Programs:

- Hip Air Massage
- Calf Air Massage
- Calf Traction Air Massage

• C.1 Vibration Massage Program:

- Hip Vibration Massage

• D.3 Heating Functions:

- Back Heating Function
- Hip Heating Function
- Foot Heating Function

Choosing of Manual Programs, please see the following form for detail.

| MESSAGE PROGRAMS | VFD | SPEED ADJ. | LEVEL | WIDTH | PARTS | UP/DOWN |
|-----------------------|-----|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Kneading | | <input checked="" type="checkbox"/> | | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Tapping | | <input checked="" type="checkbox"/> | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Kneading & Tapping | | <input checked="" type="checkbox"/> | | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Shiatsu | | | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | |
| Hip Air Massage | | | <input checked="" type="checkbox"/> | | | |
| Calf Air Massage | | | <input checked="" type="checkbox"/> | | | |
| Calf Traction Massage | | | <input checked="" type="checkbox"/> | | | |
| Hip Vibration Massage | | | <input checked="" type="checkbox"/> | | | |
| Back Heating Function | | | | | | |
| Hip Heating Function | | | | | | |
| Foot Heating Function | | | | | | |

Massage Programs

A. Back Massage Programs

1. Kneading Massage

- Press the "KNEADING" button, it begins to Kneading Massage and the correspond icon is lighting on the VFD.
- Press button to select one of 4 massage parts.
- Press or button to adjust the Massage Nods position up or down for a spot massage.
- To adjust the speed, press the or button and the correspond icon will show on VFD Screen: .
- Press the "KNEADING" button again to stop massaging.




2. Tapping Massage

- Press the "TAPPING" button, it begins to Tapping Massage and the correspond icon is lighting on the VFD.
- Press button to select one of 4 massage parts and adjust the Tapping Massage width by press button according to your desire.
- Press or button to adjust the Massage Nods position up or down for a spot massage.
- To adjust the speed, press the or button and the correspond icon will show on VFD Screen: .
- Press the "TAPPING" button again to stop massaging.




4. Kneading & Tapping Massage

- Press the "KNEADING & TAPPING" button, it begins to Kneading & Tapping Massage and the correspond icon is lighting on the VFD.
- Press button to select one of 4 massage parts.
- Press or button to adjust the Massage Nods position up or down for a spot massage.
- Press the or button to adjust speed and the correspond icons will show on VFD Screen: .
- Press the "KNEADING & TAPPING" button again to stop massaging.

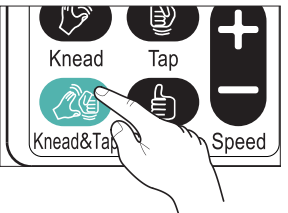

3. Shiatsu Massage

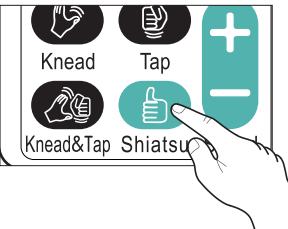


- Press the "SHIATSU" button, it begins to Shiatsu Massage and the correspond icon is lighting on the VFD.
- Press button to select one of 4 massage parts and adjust the Shiatsu Massage width by press button according to your desire.
- Press the "SHIATSU" button again to stop.




Massage Programs




B. Air Massage Programs

1.Hip Air Massage

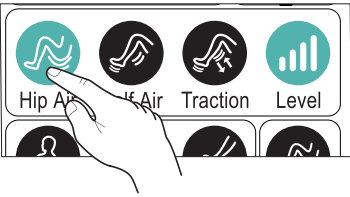- Press the "HIP AIR" button, it begins to Air Massage on Hip and the corresponding icon  is lighting on the VFD.
- Press the  button to adjust the level and the corresponding icon  is lighting on the VFD. There are 4 levels can be selected.
- Press the "HIP AIR" button again to stop massaging.






2.Calf Air Massage

- Press the "CALF AIR" button, it begins to Air Massage on Calf and the corresponding icon  is lighting on the VFD.
- Press the  button to adjust the level and the corresponding icon  is lighting on the VFD. There are 4 levels can be selected.
- Press the "CALF AIR" button again to stop massaging.







3.Calf Traction Air Massage


- Press the "CALF TRACTION" button, it begins to Air Traction Massage on Calf and the correspond icon  is lighting on the VFD.
- Press the  button to adjust the level and the corresponding icon  is lighting on the VFD. There are 4 levels can be selected.
- Press the "CALF TRACTION" button again to stop massaging.



Massage Programs


C. Hip Vibration Massage


- Press the "HIP VIB" button, it begins to vibration massage on Hip and the correspond icon  is lighting on the VFD.
- To adjust the speed, press the  or  button and the correspond icon will show on VFD Screen: .
- Press the "HIP VIB" button again to stop massaging.

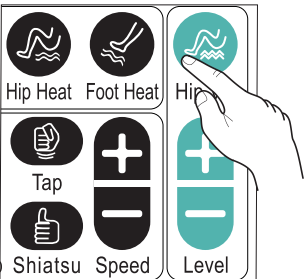


D. Heating Massage Function


1.Back Heating Function

- Press the "BACK HEAT" button, it begins to Back Heating Function and the correspond icon  of Back Part is lighting on the VFD.
- Press the "BACK HEAT" button again to stop massaging.

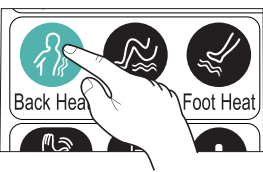


2.Hip Heating Function

- Press the "HIP HEAT" button, it begins to Hip Heating Function and the correspond icon  of Hip Part is lighting on the VFD.
- Press the "HIP HEAT" button again to stop massaging.

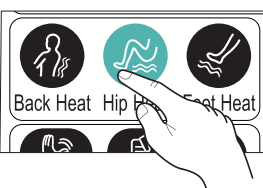

3.Foot Heating Function

- Press the "FOOT HEAT" button, it begins to Foot Heating Function and the correspond icon  of Feet Parts is lighting on the VFD.
- Press the "FOOT HEAT" button again to stop massaging.



Care and Storing

1.Storing the Chair

- Make sure the power is turned off and pull out the plug from the outlet when it is kept.
- Wipe off dust and dirt from the Chair. Keep the Chair clean and away from places of high humidity. Damp and dust will shorten the machine's life and may become the causes of mouldy or dirty marks.
- If the Chair is not in use for a long period of time, cover the Chair with a dustproof cover to protect it from dust.




- Please keep away from direct sunlight or heating appliances like heat stove. It could cause discolouration or deterioration.

2.Cleaning of Remote Controller

- Remove fouling on the Remote Controller with a piece of dry cloth. As a wet cloth may cause damage.

3.Cleaning of Leather

- To clean the leather sections, wipe with a piece of cloth impregnated with neutral detergent at first. Then remove the detergent with a soft cloth wetted with water and air dry.
- Use a piece of dry cloth to wipe over the painted areas.



- Don't use diluents, volatile oil or bleaching powder will cause discolouration or cracks.
- Do not use the iron.

Specifications

Name: Zero Gravity Massage Chair

Rated voltage: AC100-120V ☐ AC220-240V ☐

Rated frequency: 50/60Hz

Power consumption: 260W

Working time: 30minutes

Net weight: 93kg

Note: Specifications are subject to change without notice.

Troubleshooting

If you encounter problems with the operation of the Chair, Please check the following points to see if they can be rectified. If the Chair still does not work or malfunctions, please switch off the Chair and remove the AC Plug from the Electrical Outlet. Contact our Service Centre for servicing.

Do not disassemble or attempt to repair the Chair by yourself.

| Conditions | Possible Cause or Action |
|---|--|
| Loud sound during Kneading, Tapping | These sounds are results of mechanical structure and are not indicators of machine trouble. |
| Knocking sound at the change of massage function | |
| Sound of the air pump | |
| The Chair does not operate by using the Remote Controller | Check the AC plug is firmly connected to the Electrical Outlet. |
| | Confirm that the main power is switched on. |
| Massage Nods stop moving | Do not lean too hard against the Backrest. |
| Stop working during the massage | Working too long, stop working for a moment. |
| | Overheat protection start, stop working for a moment. |
| | Time out (Timer) or power out. |
| | Fuse burned, please change it. |
| | The chair maybe is interfered by unsteady voltage, power it off and restart after a moment. |
| No hearing the mp3 music sound | Turn the volume control of earphone. |
| | Check the earphone connection, maybe is loose. |
| | Check the U disc, maybe is bad. |
| | Check the U disc, maybe is no mp3 music inside. |
| | Please adjust the music intensity to highest level. |
| The Hip Air Massage do not work correctly | Check the air tubes of the Seat Cushion that are connected fully and make sure the air tubes are unfolded. |
| The Sub-Remote Controller is disable | Ensure the signal is fully accepted by the Remote Receiver. |
| | Replace the Cell. |
| Remote Controller emit fitful sound | One button is locked, please check and reset it. |