Simple Shower Room Installation Instruction 601-10 SIZE:80x80x193cm SIZE:90x90x193cm

Cautions in Installation and Using

Thanks for selecting our shower room series. To guarantee safe and normal operation as well as prolong service lifetime. Please read Instruction carefully before installation.

Note: We are dedicated to improving products quality, find something new in what is old, we would if there is difference in the Instruction until further notice. Any discomfort, we ask your pardon.

Directory
1:Tool contents 2
2:Accessory list 3-4
3:Pipe and drain installation drawing 5
4:Installation Procedure 6-18



-: Self-prepared tools

Name	Tool	
Track level bar		
tape measure		
Ajustable spanner	3	
Rubber hammer		
Phillips srewdriver		
Scissors		
Glass cement	Silicone Scalant	
Power Drill		
3mm aiguille		
6mm aiguille		
"+" shaped aiguille		

(1)

二:Accessory list

Item	Name	Accessory	Quantity
1	(1.)Tray		1
	(2.1)left fixed glass		1
2	(2.2)Arch flexible door glass		1
	(3.1)inner upright column		1
3	(3.2)Upper and down rail		2
	(3.3)Magnetic strip		4
4	(4.1)Plastic conner junction		2
5	(5)eccentric wheel		8
6	(6)Handle		1
7	(7.1)Waterproof belt		4
/	(7.2)"U"shaped belt		2
8	(8.1)Glass positioning fixture		8
	(8.2)Glass holder panel		4

二:Accessory list

Item	Name	Accessory	Quantity
9	(9)Plastic bulger		8
10	(10.1)St4x25mm screw		8
	(10.2)St4x12mm screw	√ ((†)	8
	(10.3)St4x10mm screw	4	4
11	(11)Decoration to take	11.1 0 11.2	6

3. Pipe and drain installation drawing

Demension:90*90*213cm 80*80*213cm

C=Cold water inlet

H=Hot water inlet


D=Drain



4:Installation Procedure




(1) Lace the base on a solid floor and adjust the feet so that it is level. Check carefully using a spirit level. Remove film before installation.

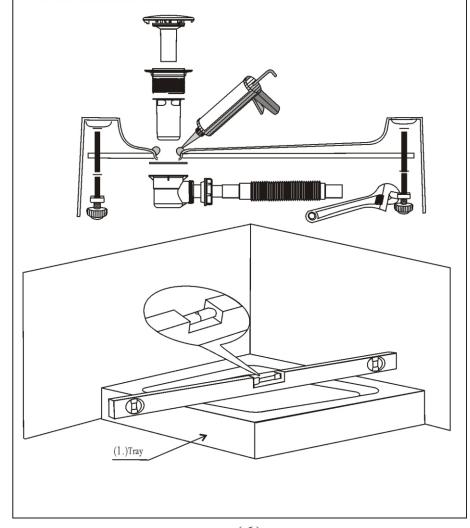


(5)




2): Identify (3.2)upper and down rail, then connect them with (4.1)plastic conner junction. Then use St4x10mm screw fixing them, and connect (3.1)inner upright column tightly by screw St4x16mm.

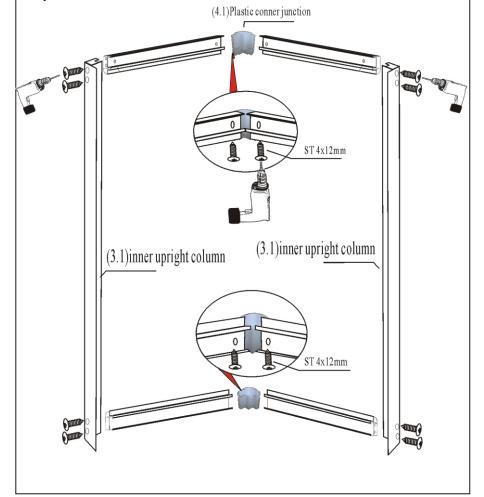

4: Installation Procedure




3):Hit slightly the glass into the curve of inner upright column by rubber hammer after fitting (7.2) U shaped belt with left and right fixed glass.waterproof belt to the other side of 2 piece of fixedglass, and fix the glass with glass holder panel by screwSt4x16mm.

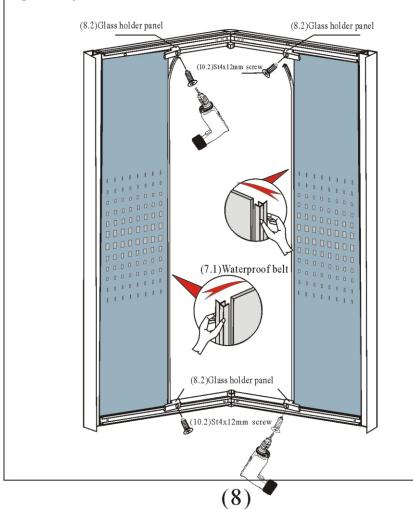




(4)Insert eccentric wheel into the holes of movable doors, then adjust the wheels to make it smooth in moving; and then fix screws by spanner; Fit the cover of the wheels.

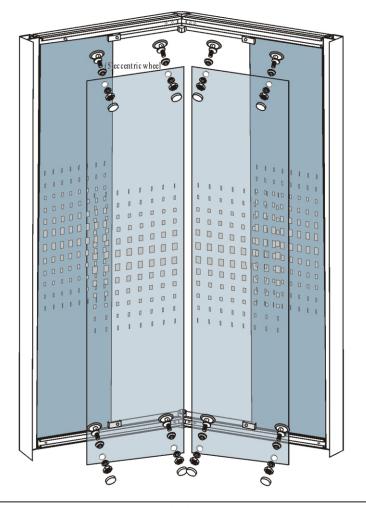


4:Installation Procedure

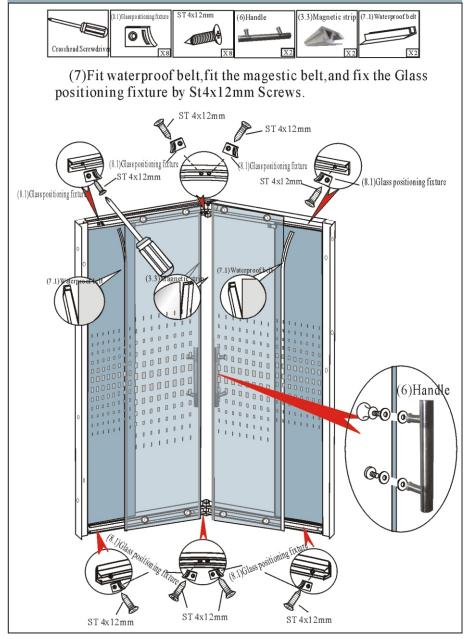





(8)Mark the wall position by pancil as soon as push the glass room against the wall where it should be fixed.

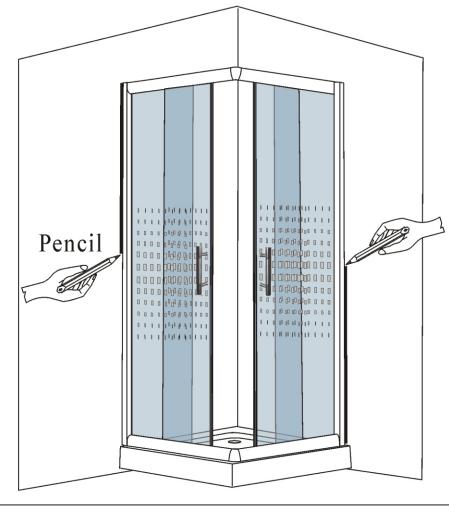

4: Installation Procedure



(9) Make the column agaist wall upright, and mark the hole where should be screwed; and use power drill with 6mm drill screw hole.

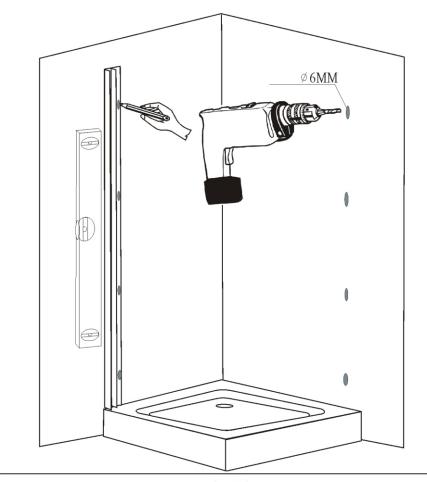


(11)

(12)




(10)Remove the glass room, and insert the Plastic bulger into screw holes by rubber hammer.

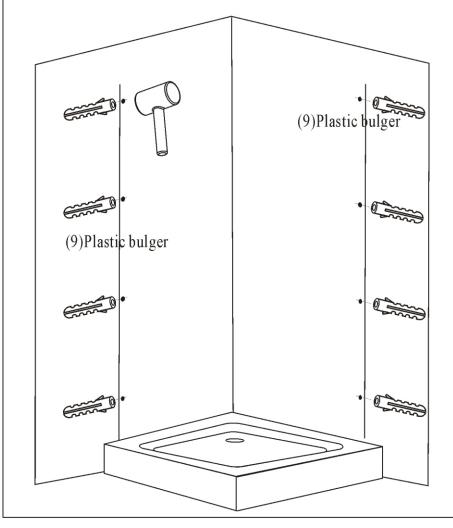

4:Installation Procedure



(11)Paint Glass cement in the column side against wall, then use ST4x25mm fixing the frame of glass room.

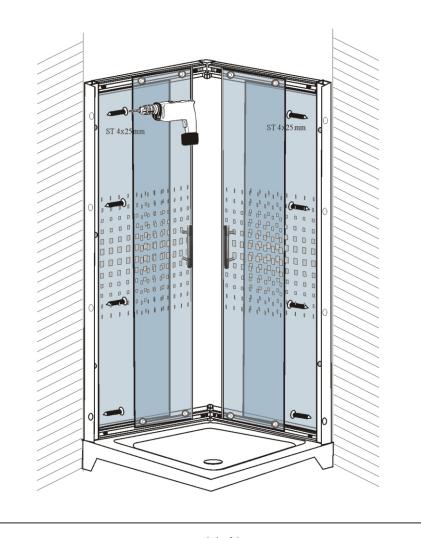



(13)Pressurize Glass cement into the connection tray with ground.

