

7, Trouble shootings

Troble	Cause	Remedy
No power	1. Electric power don't connect well, leak switch is cut off.	Access to power
	2. Fuse wire is broken, switch of control panel is failure.	Maintain or replace
	3. GFCI is out of work	Check GFCI
No head shower	1. water pressure is abnormal	Check water pressure
	2. Cold and hot water switch is closed.	Turn on the cold and hot water switch
	3. chocking nozzle	Clean
Water pipe leakage	1. Seal ring damaged	Replace seal ring
	2. Tie in dont connect well	Connect it again
No radio	1. Connecting wire is cut	Make connection
	2. Loudspeaker is broken	Replace a new one
Phone unuable	1. Telephone wire dont connect well	To make contact telephone line
	2. Control panel is broken	Maintain or replace
No light	1. Bulb is broken, ballast is broken	Replace
	2. Break of ballast	To make contact
	3. Control panel is broken	Maintain or replace
No exhaust	1. Fan is broken	Replace
	2. Tie-in is not connect well	To make contact
	3. Control panel is broken	Maintain or replace

If complete shower room cant work normally, please check it as compare above then obstacle avoidance.

If customers cant make sure the cause of obstacle or lack of ability mantianance. Please contact distributer.

Complete shower room Installation & Operation Manual

9026



SIZE: 130X130X225cm

Cautions in Installation and Using

Thanks for selecting our shower room series. To guarantee safe and normal operation as well as prolong service lifetime. Pls read Instruction carefully before installation.

Note: We are dedicated to improving products quality, find something new in what is old, we would if there is difference in the Instruction until further notice. Any discomfort, we ask your pardon.

Directory

Tool contents	3
Accessory list	4-5
Pipe and drain installation drawing	6
Installation Procedure	7-17
Note	18
Delivery and storage notice	18
Touble shootings	19


6:Notes

1. It is unadvisable to take a shower after drunk.
2. It is unadvisable to have a shower immediately after acute sports.
3. Please avoid bath or shower in morning.
4. Keep the temperature of dressing room near to the bathroomS
5. If you feel uncomfortable while having a shower, you should go out of the shower room as soon as possible.
6. The time of shower is advisable to be between 15 minutes and 20 minutes, no longer.
7. Drink water to supplement moisture after shower or bathing.
8. People who suffer from heart disease, high blood pressure, diabetes or who feel unwell or pregnant woman are unadvisable to have bathing, massage or shower.


7,Delivery and storage notice

- 1, It is prohibited to store organic solvent together, such as formic acid and methanol.
2. Handle with care if it need transport. Heavy stress, mechanical impact and sharp pounding is prohibited.
3. It should keep it dry and airy and make sure there is no etchant gas.

4. Installation Procedure

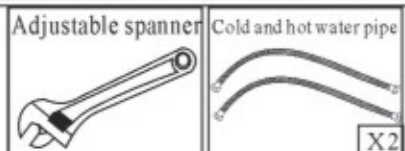

12.) Connect corresponding wires to the complete shower room, tighten cold and hot water pipe with

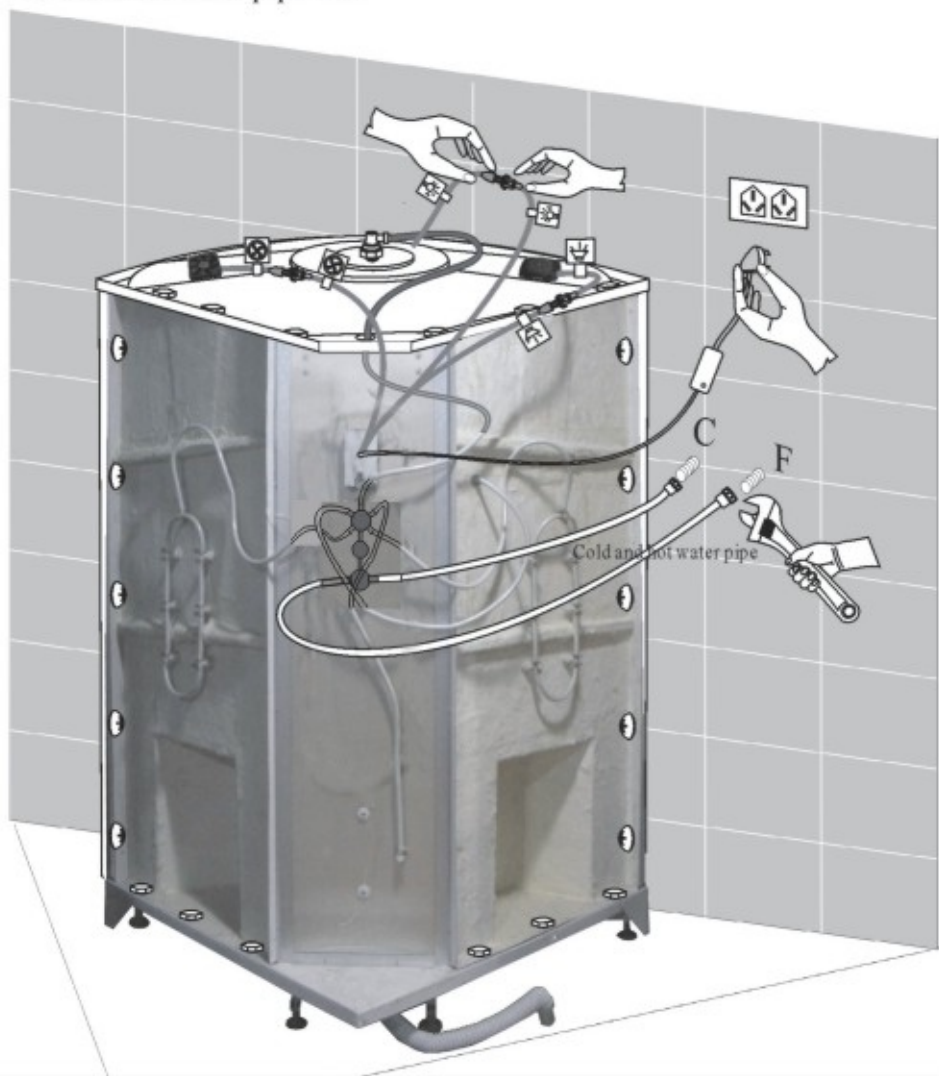














(17)

1. self-provide tool

Name	Tool
Track level bar	
tape measure	
Ajustable spanner	
Rubber hammer	
Phillips srewdriver	
Scissors	
Glass cement	
electric drill	
3mm aiguille	
6mm aiguille	
tap dril	


(2)

2. Partial accessory list


Item	Name	Accessory	Quantity
1	(1)Tub		1
2	(2.1)Left backboard		1
	(2.2)Middle backboard		1
	(2.3)Right backboard		1
3	(3)Roof		1
4	(4.1)Upper rail		1
	(4.2)Bottom rail		1
	(4.3)Side Upright column		2
5	(5.1)Arch fixed door glass		2
	(5.2)Arch flexible door glass		2
6	(6.1)Glass positioning fixture		8
	(6.2)Glass fixture		4
7	(7)Eccentric wheel		8

(3)

4. Installation Procedure

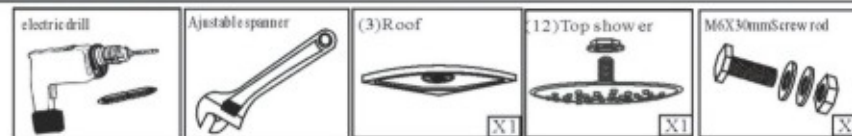


11.) Fix top cover with glass room by (14.2) ST4*16 screws. Connect all of pipes and wires as picture. Fix top shower to the roof, then move it to the backboard, drill holes with 6mm diameter drill bit, then fit screw rod, filling piece, then tighten screw nut with adjustable spanner.

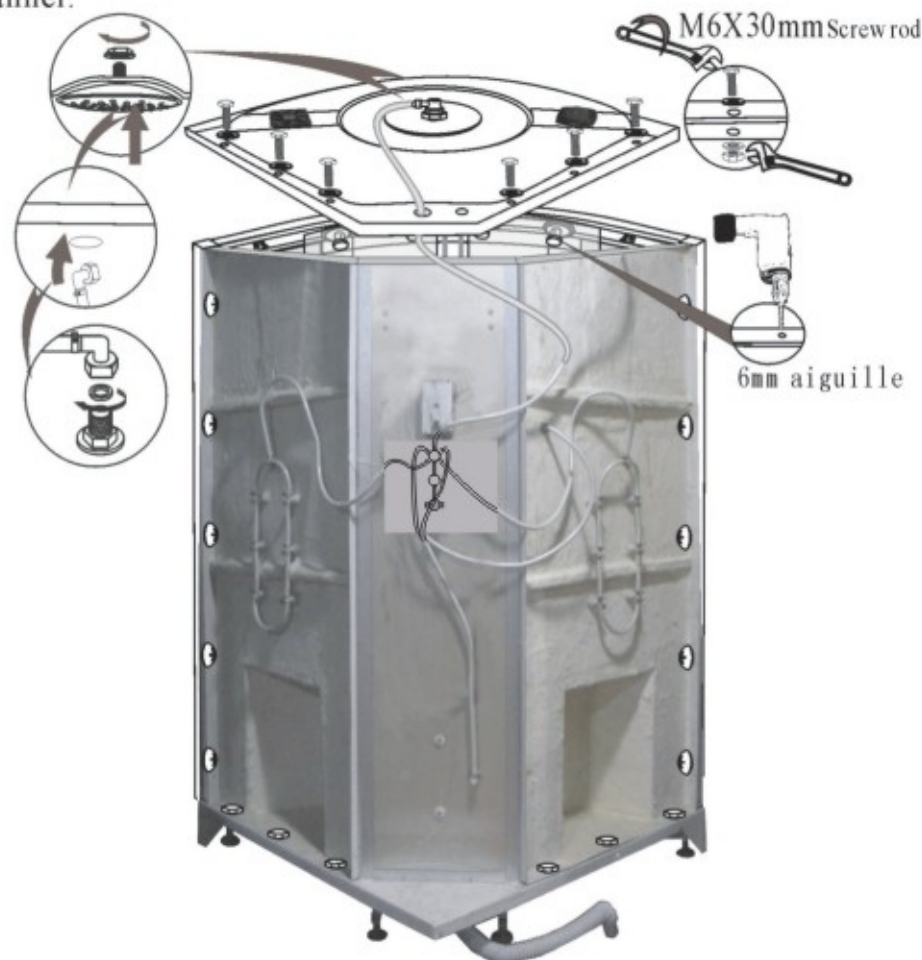


(16)

4.Installation Procedure

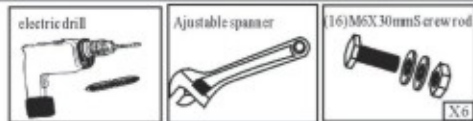

10.)Put the back board and glass room on the tub,connect them and fix them by screw

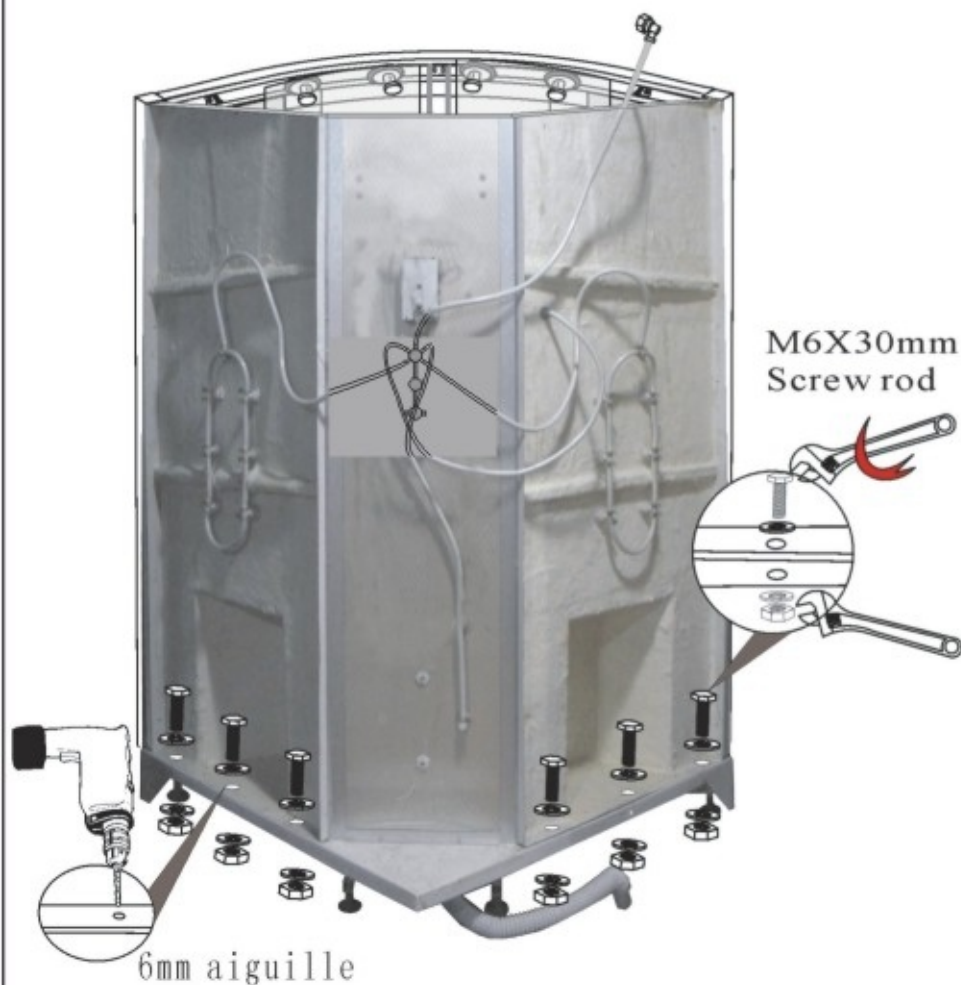

(15)

2.Partial accessory list

Item	Name	Accessory	Quantity
8	(8)Knob		2
9	(9)Foot massager		1
10	(10.1)Hand shower		1
	(10.2)hand shower tube		1
11	(11)Lifting rod		1
12	(12)Top shower		1
13	(13.1)Magnetic belt		1
	(13.2)Waterproof belt		2
	(13.3)U style thong		4
14	(14.1)St 4*16mm self tapping srew		20
	(14.2)St 4*10mm self tapping srew		10
15	(15)Shelf		10
16	M6X30mmScrew rod		12
	Ø8mmFilling piece		
	Ø6mmScrew cap		
17	Cold and hot water pipe		2

(4)

3. Pipe and drain installation drawing

Demension: 130*130*225cm

C=Cold water inlet


H=Hot water inlet

D=Drain




(5)

4. Installation Procedure

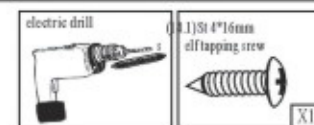


9.) Connect back board and glass room by self tapping screw.

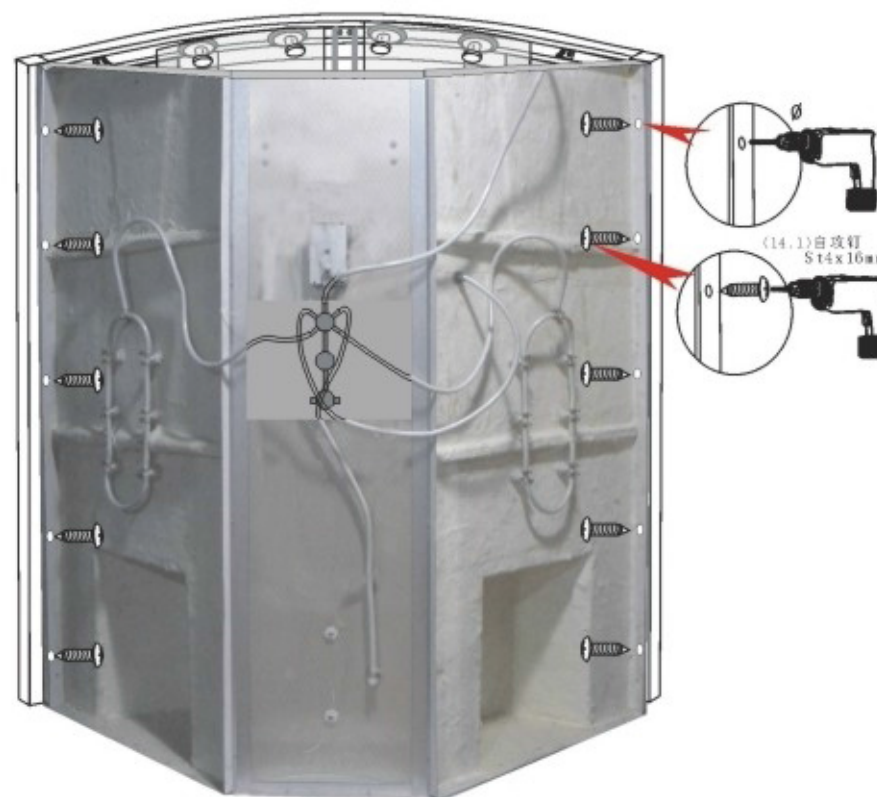


(14)

4. Installation Procedure

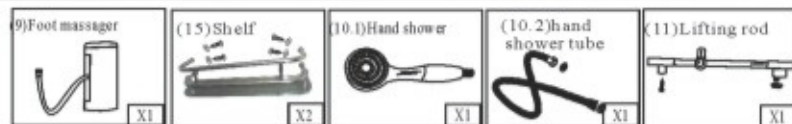

8.) Install corresponding accessory to backboard

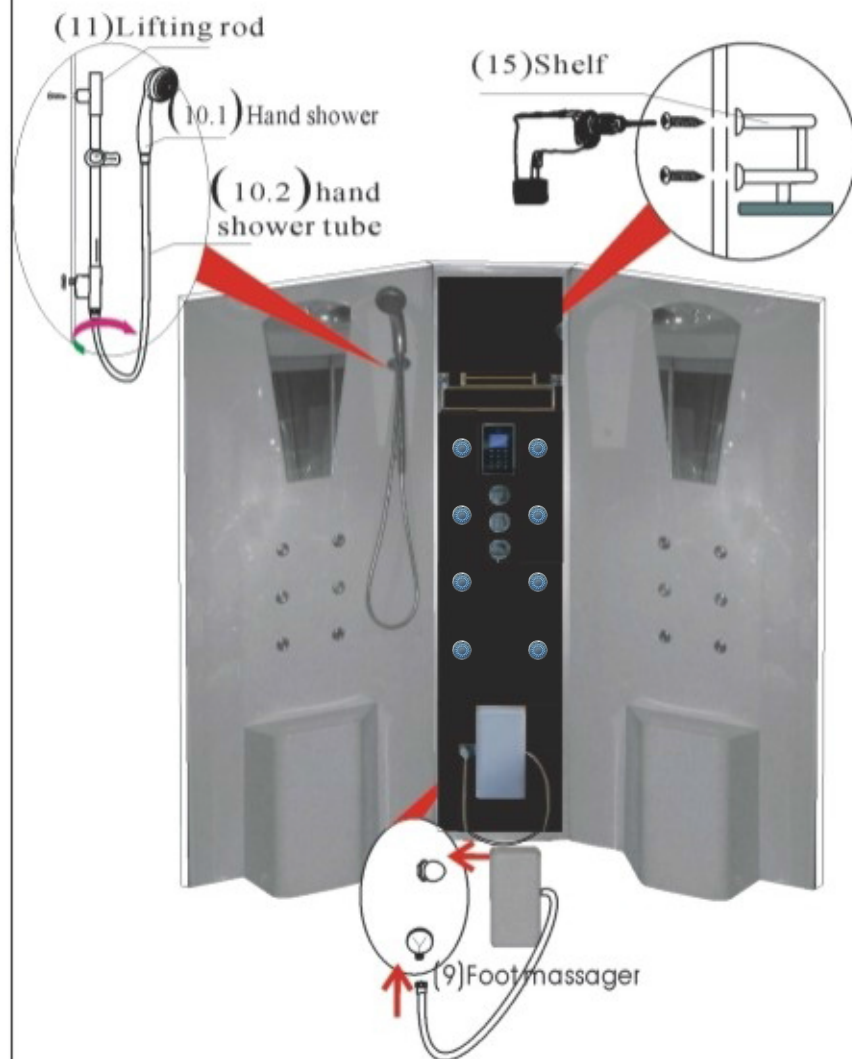


(13)

4. Installation Procedure




1.) Put track level bar on the tub, and adjust foot's screw by adjustable spanner, and keep it to the leveling

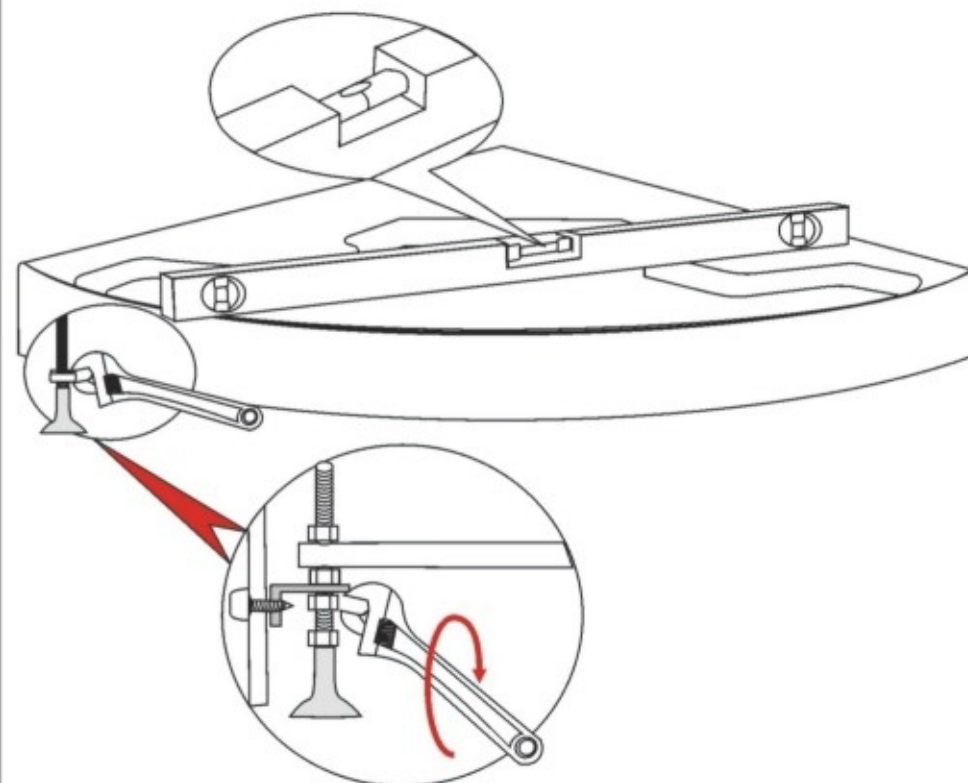


(6)

4. Installation Procedure

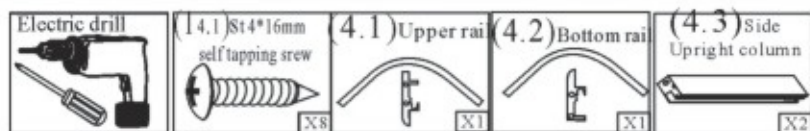


Build up the frame. Make sure the rails and upright aluminums are suitable. And find the difference between upper rail and bottom rail.

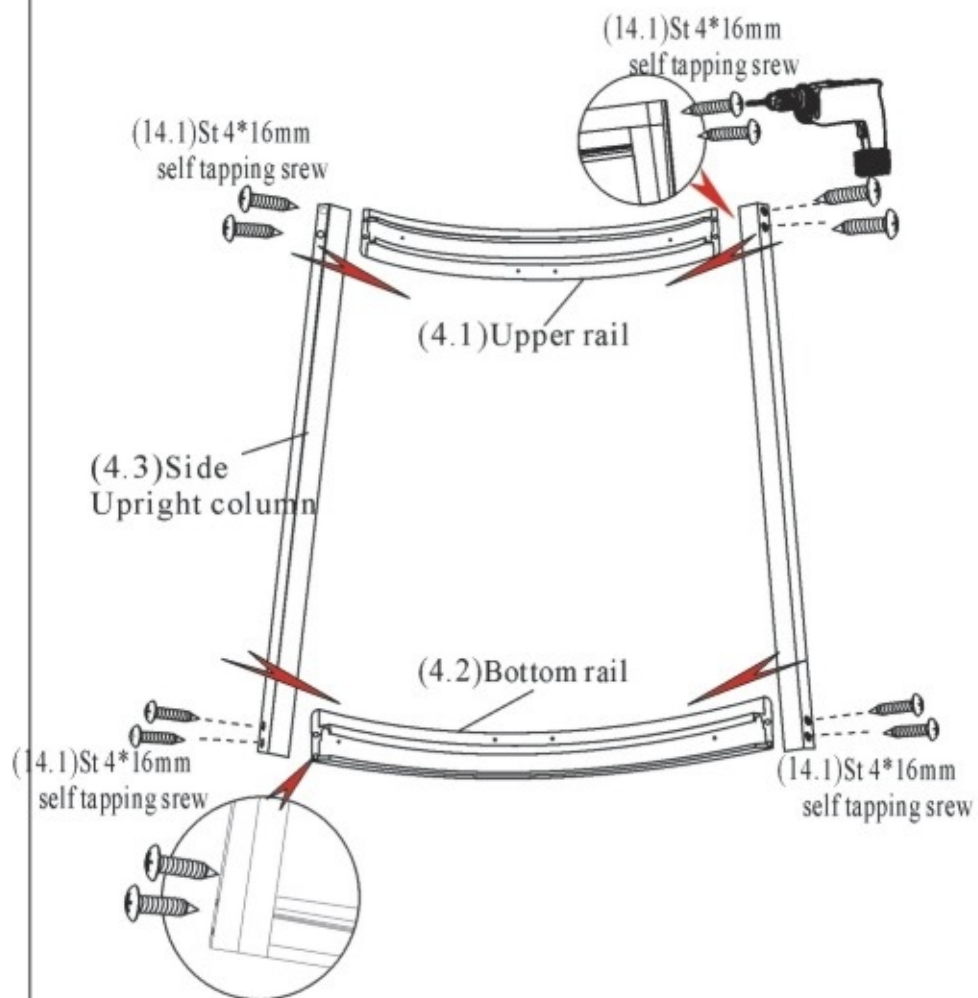


(7)

4. Installation Procedure

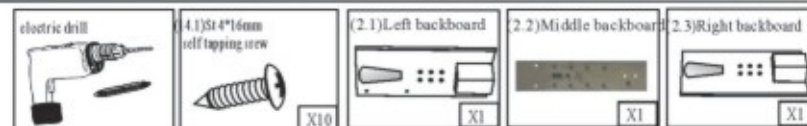


7.) Connect back board and glass room by screws, fit the pipes.

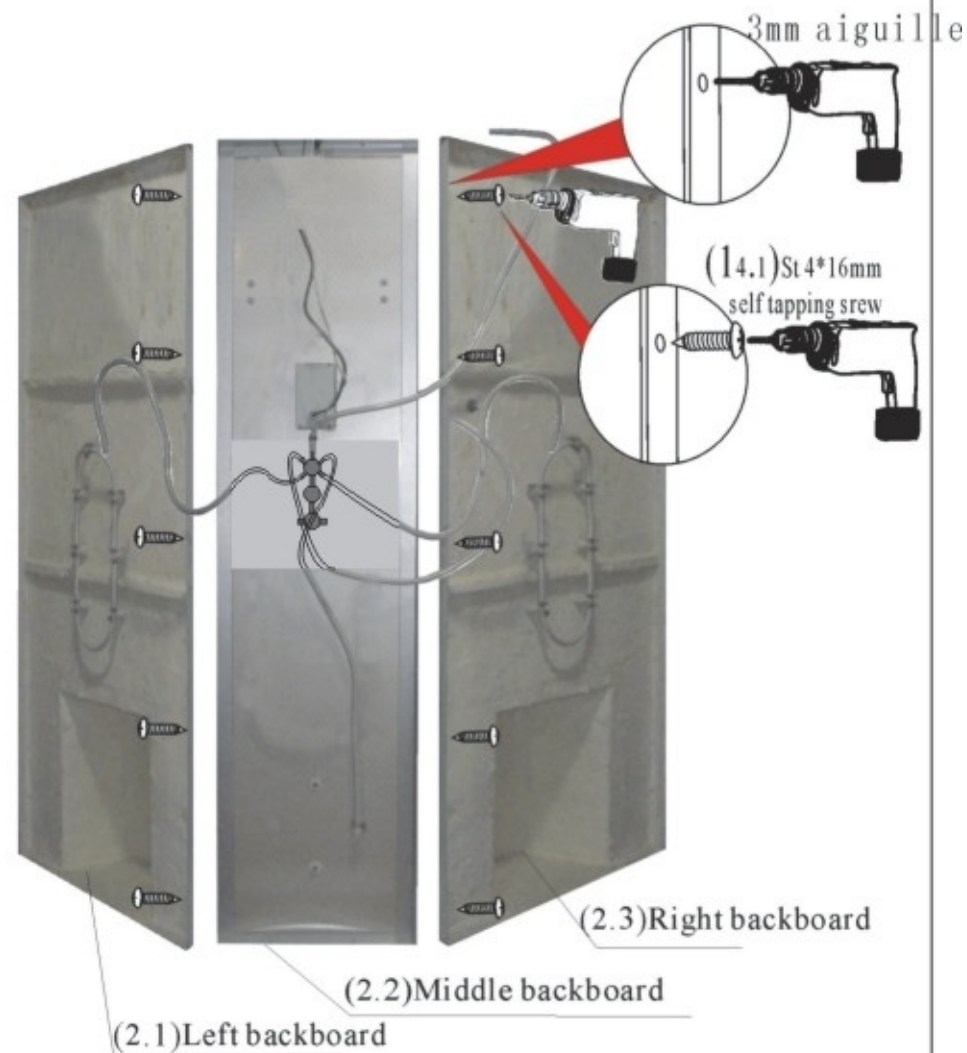


(12)

4. Installation Procedure

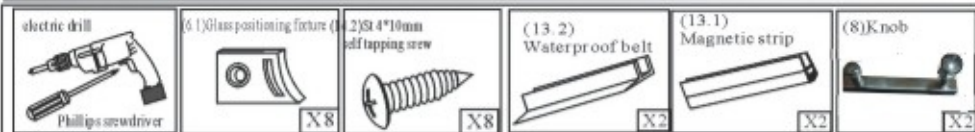


6.) Fit handle(8) into the door holes, fix them by its screws. Then fix the glass positioning fixture, waterproof belt and magnetic seal.

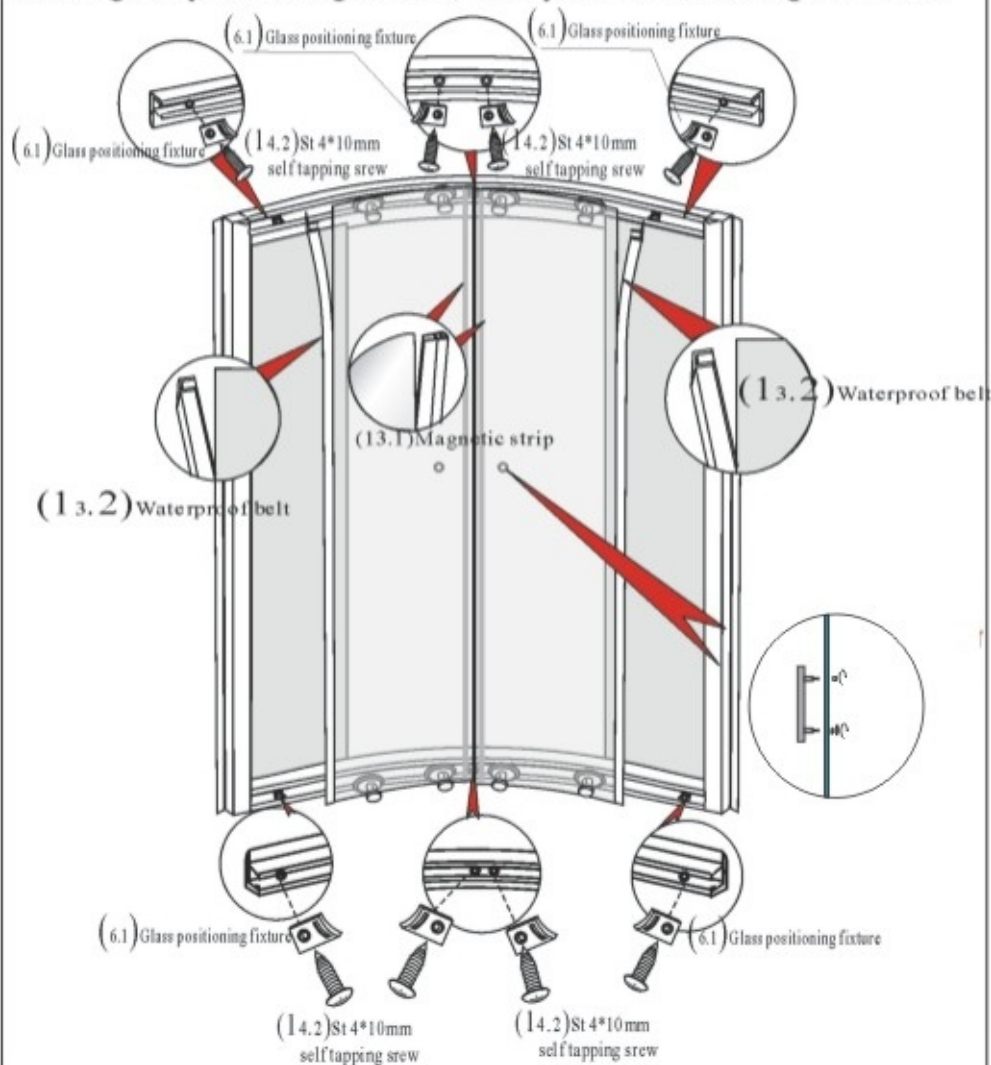


(11)

4. Installation Procedure

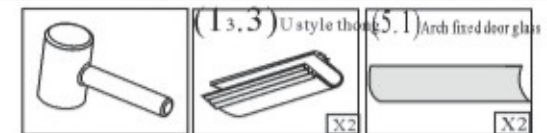

3.) Fix the fixed glass into the frame, after fitting the rubber seal into glass one side, and then knock the glass carefully by hammer.

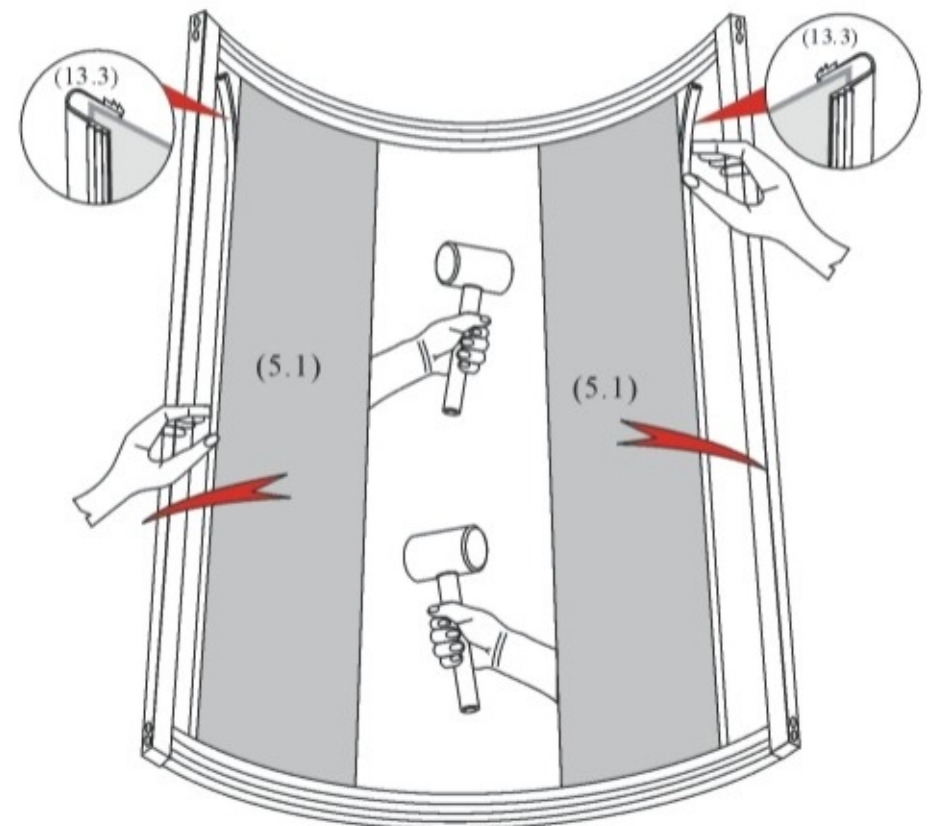


(8)

4. Installation Procedure




4.) Fit the rubber seal to glass, and use hammer to knock the aluminum panel, to make it fit with glass. Then, fix the aluminum panel by screws.

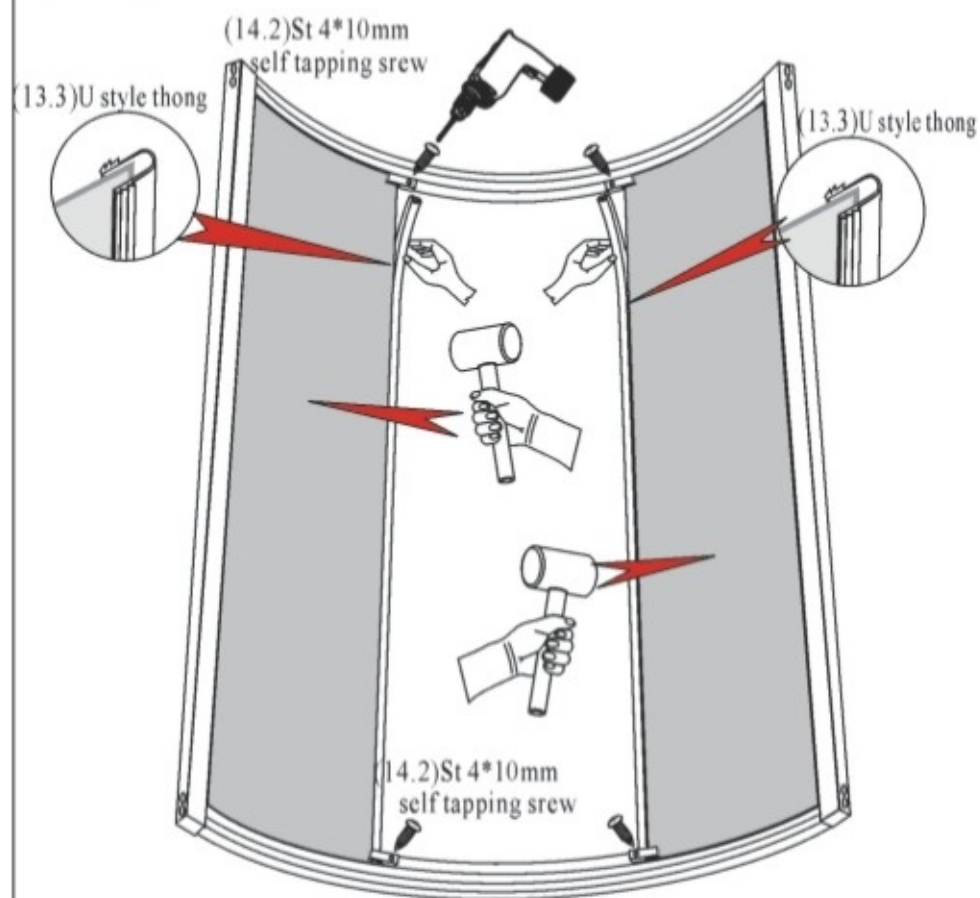


(9)

4. Installation Procedure

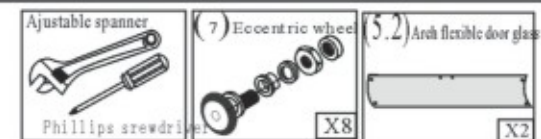

5.) Put eccentric wheel to glass door hole, fix them, then hang the door into the rails.

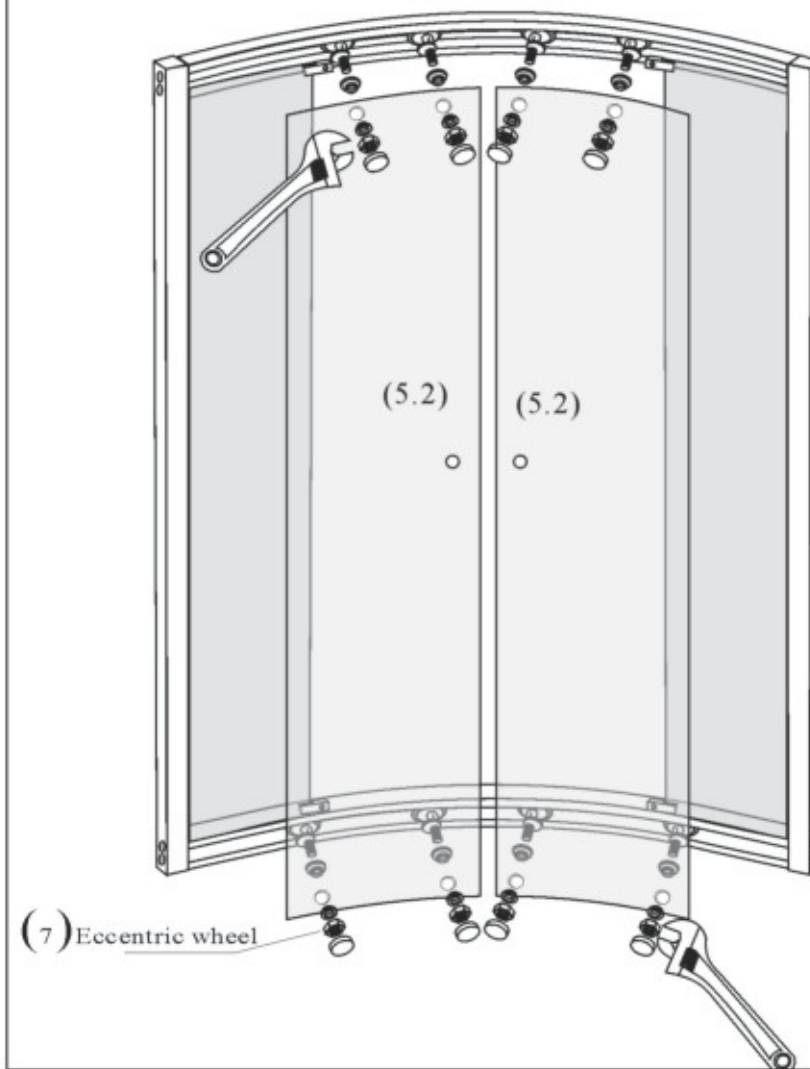

(10)