




1. Install the fixed aluminum: Make a mark on the wall according to the below picture. Then drill 6mm hole and insert with the Expansion colloidal. Install the fixed aluminum by ST6\*30 screw.  
( Please keep the fixed aluminum vertical)

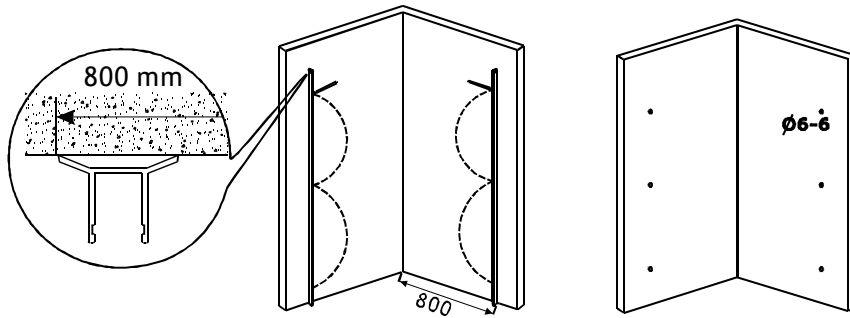

2. Take out the shower glass from the box. Follow the direction of the arrow on the glass (arrow up), push the adjustable aluminum (on the moving glass) into the fixed aluminum. (see Figure A). Install the magnetic strip. Adjust the adjustable aluminum (pull out or push in the fixed aluminum) until two doors can perfectly close

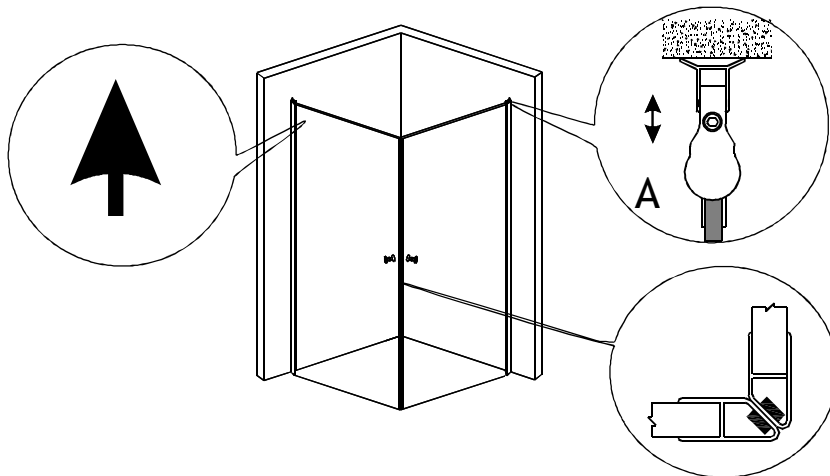

3. As Figure, drill diameter 3.2mm hole in the 200mm upper and lower ends of the aluminum profile. Screw the fixed and the adjustable aluminum by ST4\*20 screw. Cover screws with the decorative covers

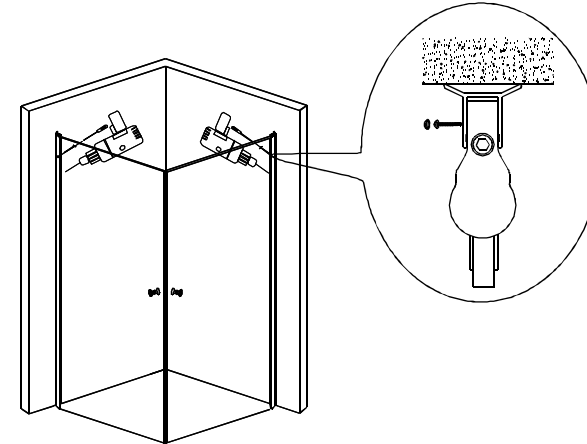

4. Installed waterproof tape under the door ,install the handle. Inject both sides of the shower cabin by Neutral silicone sealant

