


PQ22P(900X900)


1. Install the fixed aluminum bar: According to the below size showed on the picture mark a sign on the wall. Drill 6mm holes on the wall according the marks. Put the expand plastic screws into the holes. Use the ST6*30 screw to fasten the fixed aluminum.(NOTES: make sure the fixed aluminum already vertical,you may use the leveling guage to measure if it is already vertical)

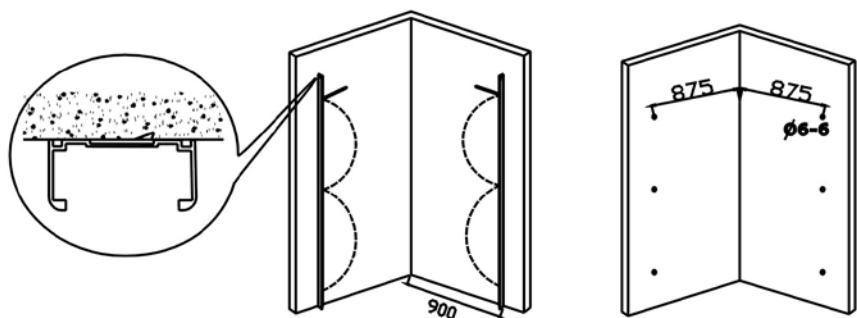


3. unload the top brack,install the moving aluminum bar with glass door. Then install the top brack again.

- install the Magnetic tape on the glass. Adjust adjusting aluminum bar to let the doors to close perfectly .
- As the picture A below, drill diameter 3.2mm holes in the upper and lower ends 200mm on the aluminum bars.


Use ST4*20 screw to fasten the fixed and adjusting aluminum. Cover the grey color cup.

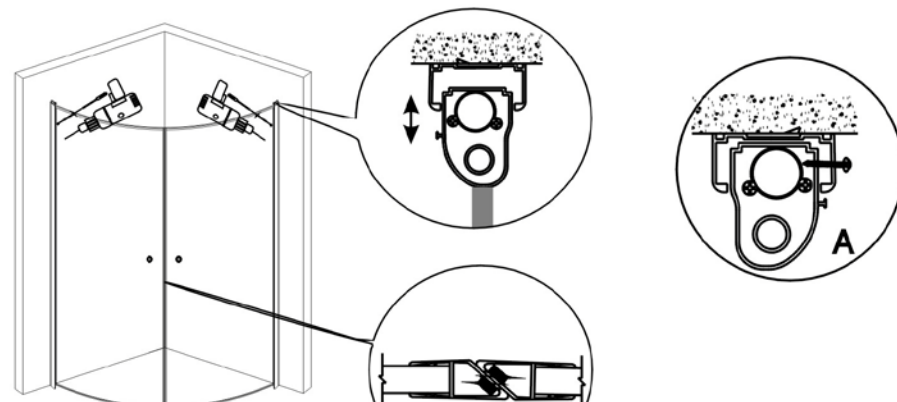

2. Install the brack to the adjusting aluminum bar. (Note: As the brackets are in sets, when installing the bracket, please set the side with waterproof bar for outside). Then push the adjusting aluminum bars to the fixed aluminum bars which are on the wall.

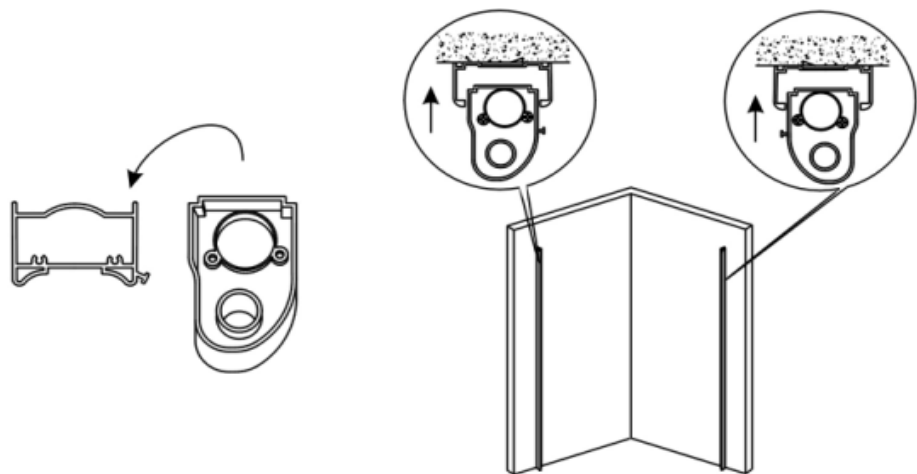

4. Install the side and the bottom waterproof bar. Install the handle. Glue the two side by the Neutral silicone sealant.Can be put into use after 24 hours.

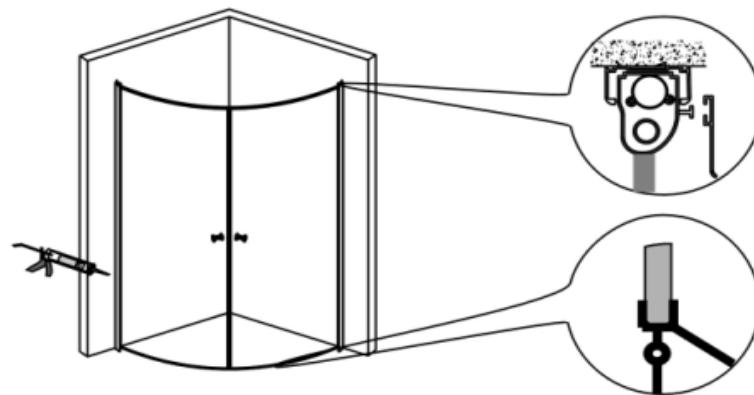


SHOWER ENCLOSURE

Installation Guide





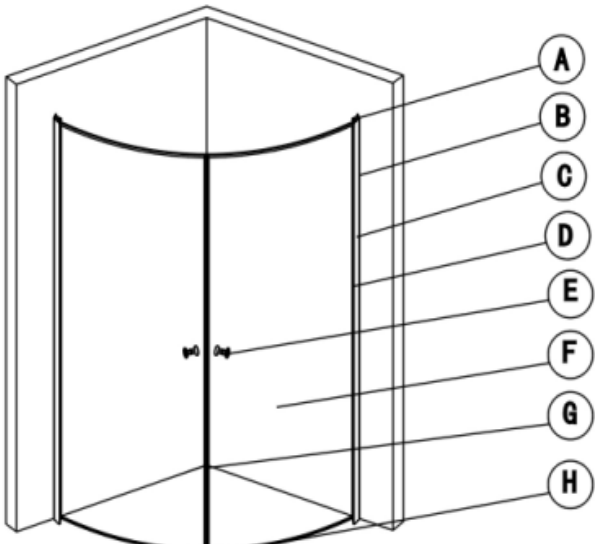


BEFORE INSTALLATION

1. Do not stand on the glass panels and components to avoid deformations and breakages.
2. Do not use concentrated bleach on the shower tray or drainage to prevent corrosion damages.
3. Do not use acid based sealant to corrosion.
4. Keep plastic sheets, bags and sharp objects from the packing material away from children to avoid injuries.
5. It is recommended that children, elderly and disabled persons be assisted when using the shower enclosure to avoid accidents.
6. It is recommended that both sides and the base of shower enclosure are sealed to prevent water leakages.



Model:PQ22(900X900)		QTY
Metarial		
A	Bracket	4
B	Fixed aluminum	2
C	Adjustable aluminum	2
D	Side waterproof bar	2
E	Handle	2
F	Temper glass	2
G	Magnetic tape	2
H	Bottom water proof bar	2

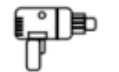INSTALLATION TOOLS CHECKLIST

- | | | |
|----|----------------|-------------------------------------------------------------------------------------|
| 1. | Leveling Guage |  |
| 2. | Pencil |  |
| 3. | Drill Bits |  |
| 4. | Screw Drills |  |
| 5. | Electric Drill |  |
| 6. | Tap Measure |  |
| 7. | Glue Gun |  |

