Complete shower room Installation & Operation Manual

H88-842 SIZE: 80x80x205cm



H88-844 SIZE:100x100x205cm



H88-843 SIZE: 90x90x205cm



H88-845 SIZE: 120x80x205cm



Cautions in Installation and Using

Thanks for selecting our shower room series. To guarantee safe and normal operation as well as prolong service lifetime. Please read Instruction carefully before installation.

Note: We are dedicated to improving products quality, find something new in what is old, we would if there is difference in the Instruction until further notice. Any discomfort, we ask your pardon.

Directory
1:Tool contents
2:Accessory list4-5
3:Pipe and drain installation drawing 6
4:Installation Procedure7-17
5:Notes18
6. Delivery and storage notice 18
7:Trouble shootings19
S. C. S.
CONTROL OF THE PARTY OF THE PAR
THE RESIDENCE OF THE PARTY OF T
THE RESERVE THE PARTY OF THE PA

1: self-provide tool

Name	Tool	
Track level bar		
tape measure		
Ajustable spanner		
Rubber hammer		
Phillips srewdriver		
Scissors		
Glass cement	Silicono Scalant	
Electric Drill		
3mm aiguille		
5mm aiguille		
tap drill		

2.Partial accessory list


Item	Name	Accessory	Quantity
1	(1)Tub		1
	(2.1)Left back board		1
2	(2.2)Middle back board	990000	1
	(2.3)Right back board		1
	(3.1)Side upright column		2
3	(3.2)Upper rail		1
	(3.3)Bottom rail	· · · ·	1
4	(4.1)Arch fixed door glass		2
4	(4.2)Arch flexible door glass		2
5	(5.1)Head shower syphon		1
	(5.2)Head shower		1
6	(6.1)lifting poker		1
0	(6.2)handle shower		1

2.Partial accessory list


Item	Name	Accessory	Quantity
6	(6.3)Hand shower tube	Ğ	1
	(6.4)Cold and hot water pipe	B	2
7	circular form knob		2
8	Shelf		1
9	(9.1)Upper wheel	9.1-2	4
	(9.2)Bottom wheel	9.2-1	4
	(10.1)Magnetic belt		2
1.0	(10.2)Waterproof belt		4
10	(10.3)U style thong		2
	(10.4)Glass locator card		8
	(10.5)Glass squeeze head		4
	(11.1)M4*25mm srew		10
	(11.2)St4*16mm self tapping screw	!!!!!!<b !	8
11	(11.3)St4*12mm self tapping screw	√	4
	(11.4)St4*10mm self tapping screw	<====(+	4

(3)


3. Pipe and drain installation drawing

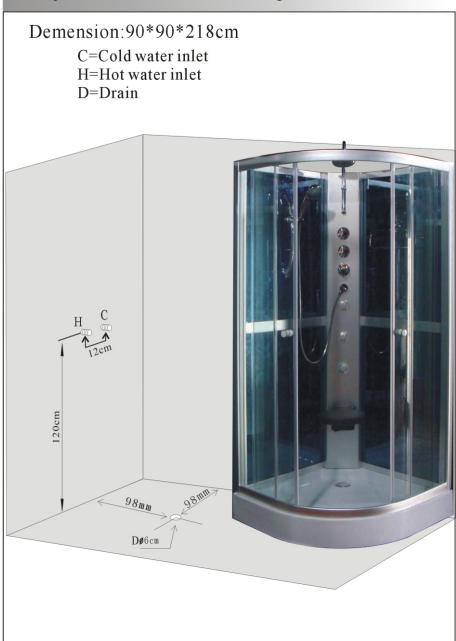

4.Installation Procedure




Put track level bar on the tub, and adjust foot's screw by adjustable spanner, and keep it to the leveling

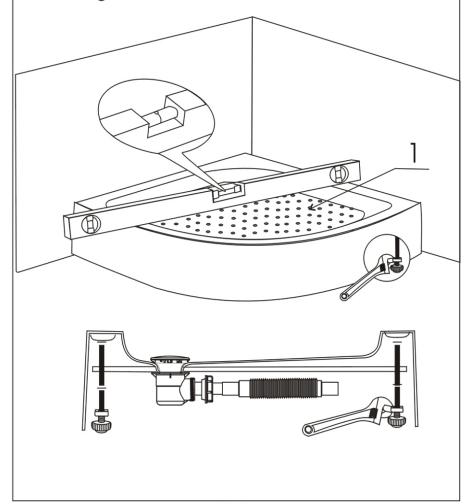


(5**)**


(6)





To aline three backboards and combine them vertically. Dig holes with 5mm diameter drill bit onhypodispersionThen tighten it with M4*25mm bolt.

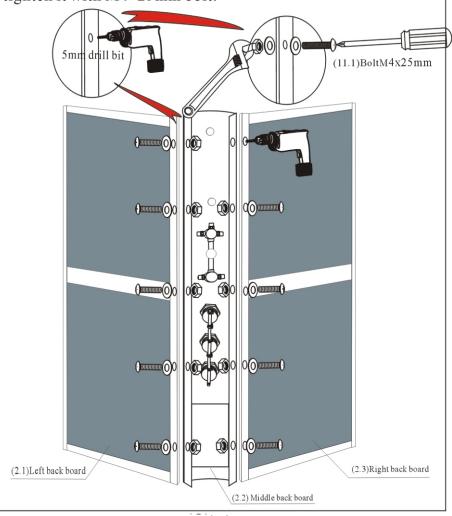


4: Installation Procedure

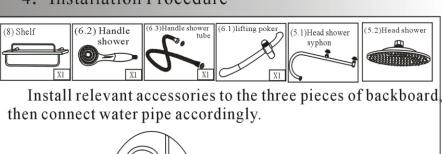

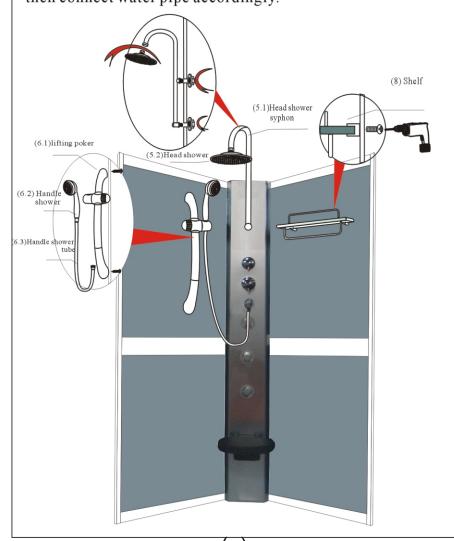




(3.2)-uuper rail,(3.3)-bottom rail, connect them by side upright column, tighten them with self tapping screw.

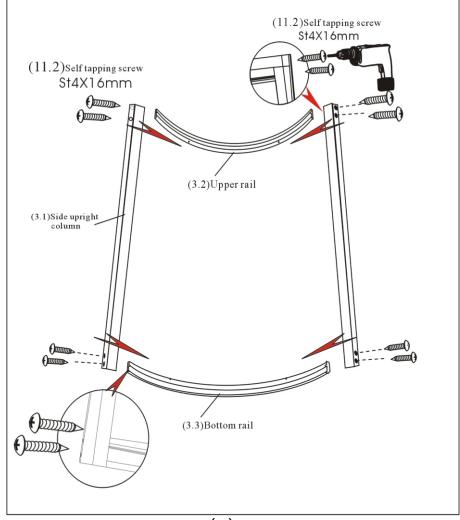


4.Installation Procedure




Put U style thong on the arch fixed door galss, insert rail to the side upright column with rubber hammer.

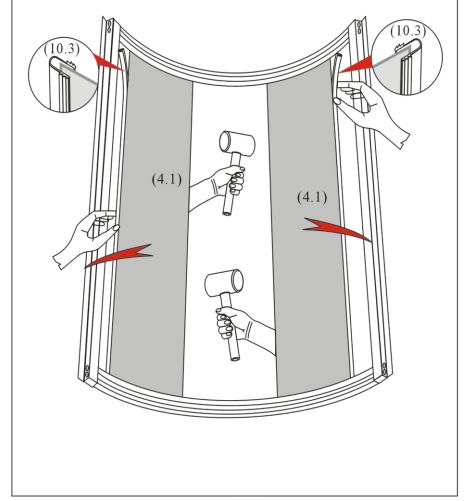





Tighten fixed door glass with self tapping screw and glass squeeze head. Then put waterprood belt.

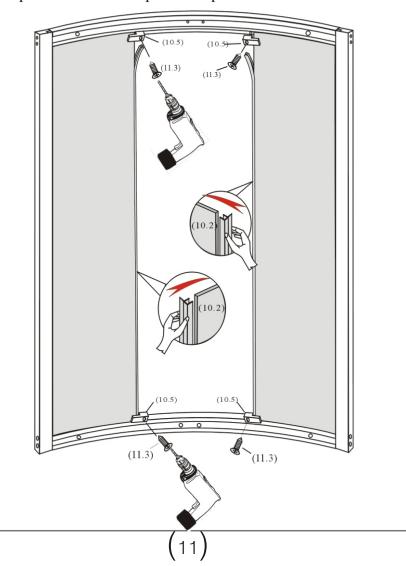


4.Installation Procedure




Tighten movable door pocket with screwdriver, put on the decorative nob, then take it on the rails.

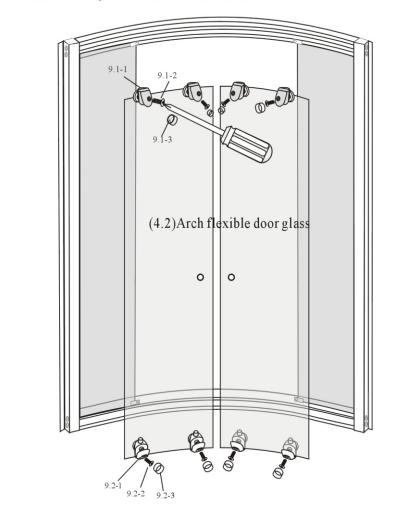


(12)





Install knob, tighten with self tapping srews, then install waterproof belt and magnetic belt.

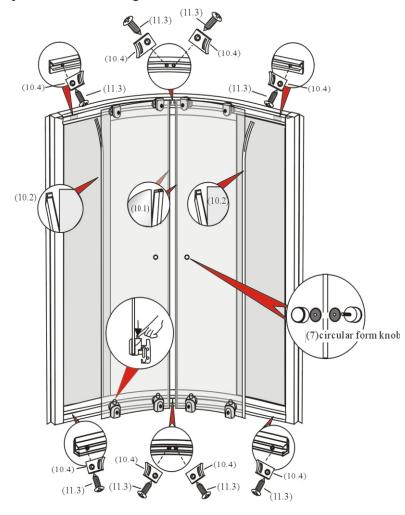



Combine backboard and glass room, dig holes with 3mm diameter drill bit, fasten them with self tapping srews.

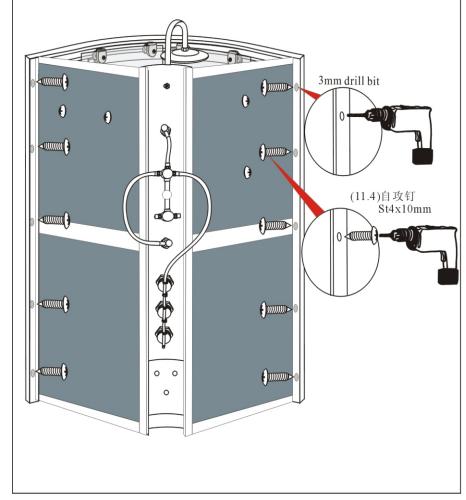






Put backboard and glass room on the tub, adjust the setting position, dig holes with 3mm diameter drill bit, fasten them

with self tapping srews.

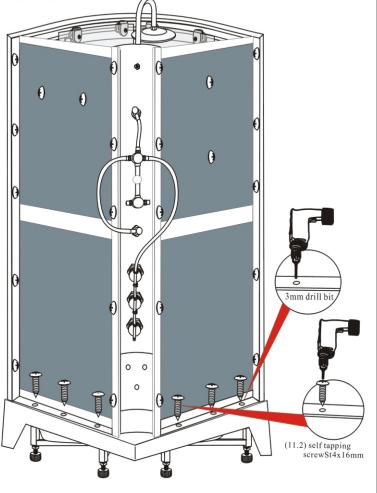


4.Installation Procedure





Fasten cold and hot water pipe with installed shower room with adjustable spanner, then move it to the wall angle

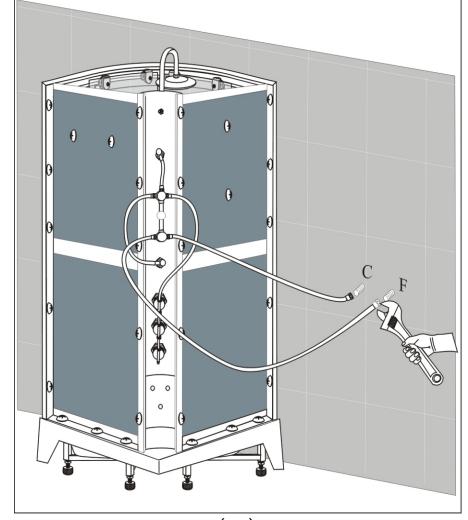

(15)

5: Notes

- 1. It is unadvisable to take a shower after drunk.
- 2.It is unadvisable to have a shower immediately after acute sports.
- 3. Please avoid bath or shower in morning.
- 4. Keep the temperature of dressing room near to the bathroom' S
- 5.If you feel discomfortable while having a shower, you should go out of the shower roomas soon as possible.
- 6. The time of shower is advisable to be between 15 minutes and 20 minutes, no longer.
- 7. Drink water to supplement moisture after shower or bathing.
- 8. People who suffer from heart disease, high blood pressure, diabetes or who feel unwell or pregnantwoman are unadvisableto have bathing ,massage or shower.

6: Delivery and storage notice

It is prohibited to store organic solvent together, such as formic acid and methanol.

- 2. Handle with care if it need transport. Heavy stress, mechanical impact and sharp pounding is prohibited.
- 3. It should keep it dry and airy and make sure there is no etchant gas.

7: Trouble shootings

Troble	Cause	Remedy
No head shower	1. water pressure is abnormal	Check water pressure
	2.Cold and hot water switch is closed.	Turn on the cold and hot water switch
	3.chocking nozzle	Clean
Water pipe leakage	1.Seal ring damaged	Replace seal ring
	2. Tie in don't connect well	Connect it again

If complete shower room cant work normally, please check itas compare above then obstacle avoidance. If customers cant make sure the cause of obstacle or lack of ability mantianance. Please contact distributer.