


Top panel install instruction

1. After placed the top panel well, place the upright post in the centre of the top panel.
Please pay attention to the mark in the top panel and upright post, make sure the mark is corresponding to each other, such as A to A, etc. See figure below:



2. Fix the button of the oblique beam to the top panel by screwdriver. Pay attention to the mark in the button of the oblique beam, make sure the mark is corresponding to the top panel. See figure below:

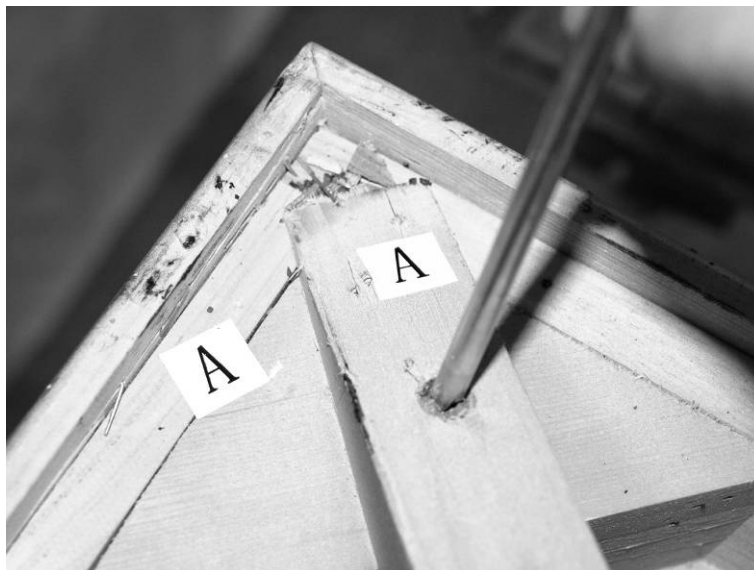

3. Fix the top of the oblique beam to the upright post by screwdriver. Pay attention to the mark in the top of the oblique beam, make sure the mark is corresponding to the upright post. See figure below:



4. Repeat the step 2~3 and tighten the other oblique beams to the correct position. See figure below:



5. Place the top cover on the oblique beam and adjust the position well. See figure below:




6. Repeat the step 5 and place the other three top covers in correct position. See figure below:



7. Lift one side of the glass fiber tiles, and fix the wood top cover to the oblique beams by screwdriver. See figure below:




8. After placed the top cover, place the ridge cover on the oblique beams. See figure below:

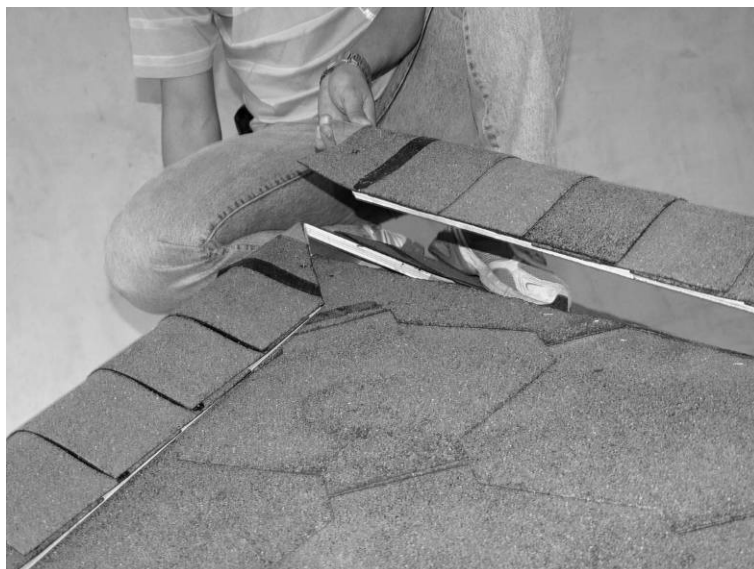

9. Lift the glass fiber tile and fix button of the ridge cover to the top cover by screwdriver. See figure below:




10. Fix another end of ridge cover to the top cover by screwdriver as well. See figure below:

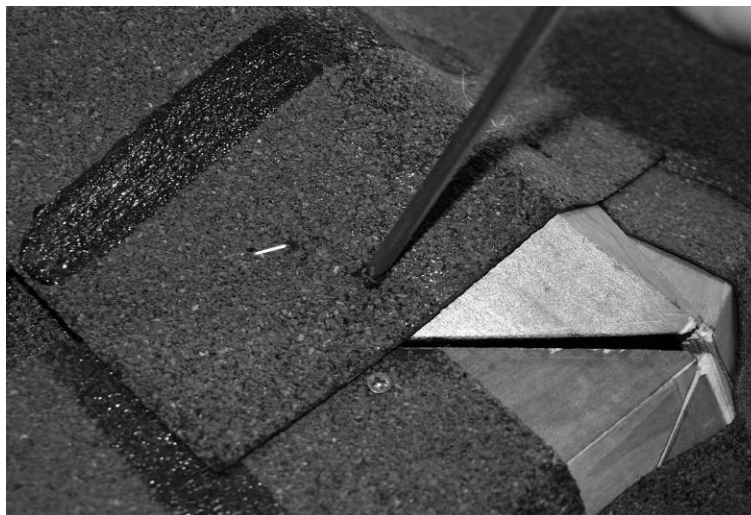

11. Repeat the step 8~10 and fix 4 ridge covers in correct position. See figure below:



12. Put the top cap in the center of the top cover. See figure below.

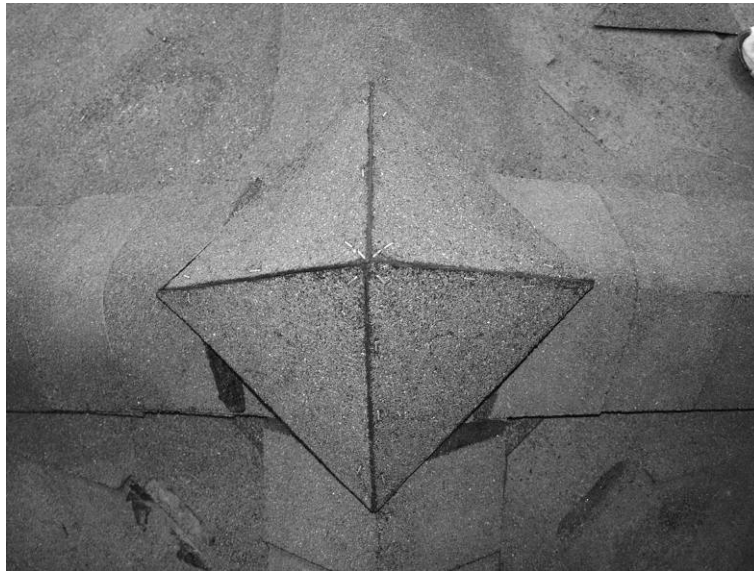

Till now, the top panel installation is completed.