

# Installation of GL-1180S



01: Rubber hammer & “+” shape screwdriver




02: Tray



03: Mainframe



04: Glass door

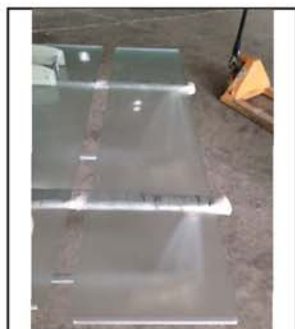

05: 1 pcs of side fixed glasse and 1 pcs of back fixed glass



06: Pack the side fixed glass and the back fixed glass below and upper with adhesive strip



07: Connect the aluminum alloys with plastic parts and install the door sliders to the glasses, install the glass door



08: Install the door sliders and stoppers onto the aluminum alloys



09: Install the adhesive strips



10: Put the whole glass door onto the tray



11: Put the glass door onto the plastic parts on the tray and fasten the door onto the proper location



12: Install back fixed glass



13: Install mainframe

# Installation of GL-1180S



14: Fasten mainframe to tray with M6X25 bolts and nuts



15: Install side fixed glass



16: Tighten the assembled room body with rope



17: Install top cover



18: Fasten mainframe cover with M6\*25 bolts and nuts



19: Fasten top cover onto glass door upper with M4\*12 big round head screw



20: Put the top shower connection pipe, speaker wire, ventilation fan wire and top lamp wire through the hole on the top cover



21: Connect the wire of speaker on the top cover



22: Connect the wire of top lamp on the top cover



23: Connect the wire of ventilation fan on the top cover




24: Install top shower connection pipe



25: Install goods shelf

# Installation of GL-1180S

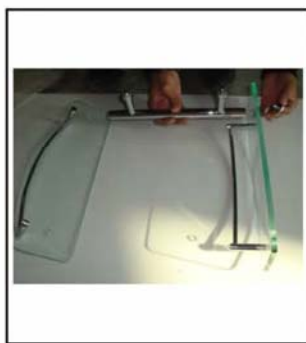

26: Assembled goods shelf



27: Install the plastic holders of sole massaging device



28: Assembled plastic holders of sole massaging device



29: Install the connection hose of sole massaging device



30: Install the connection hose of flexible shower


# Installation of GL-1180S



31: The connection hose of massaging seat




32: Install the connection hose of massaging seat

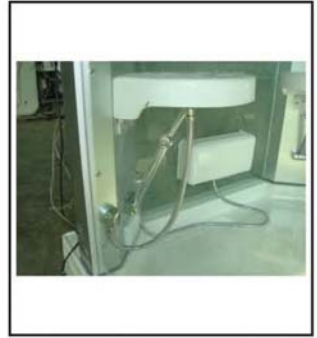

33: Assembled connection hose of massaging seat



34: Install door handle

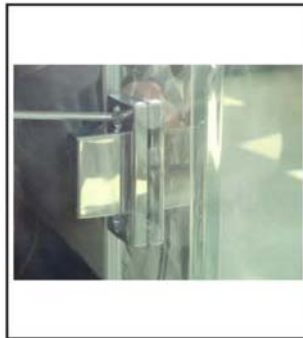

35: Assembled door handle



36: Install adhesive strip



37: Pack connections of each fixed glass with adhesive strip



38: The end of installation of GL-1180S

The end!